

 
PARTS  
LIST  
FOR



PORTABLE DISHWASHER

MODEL  
DP3000XRN4  
▲ N—Almond

CONSOLE PARTS

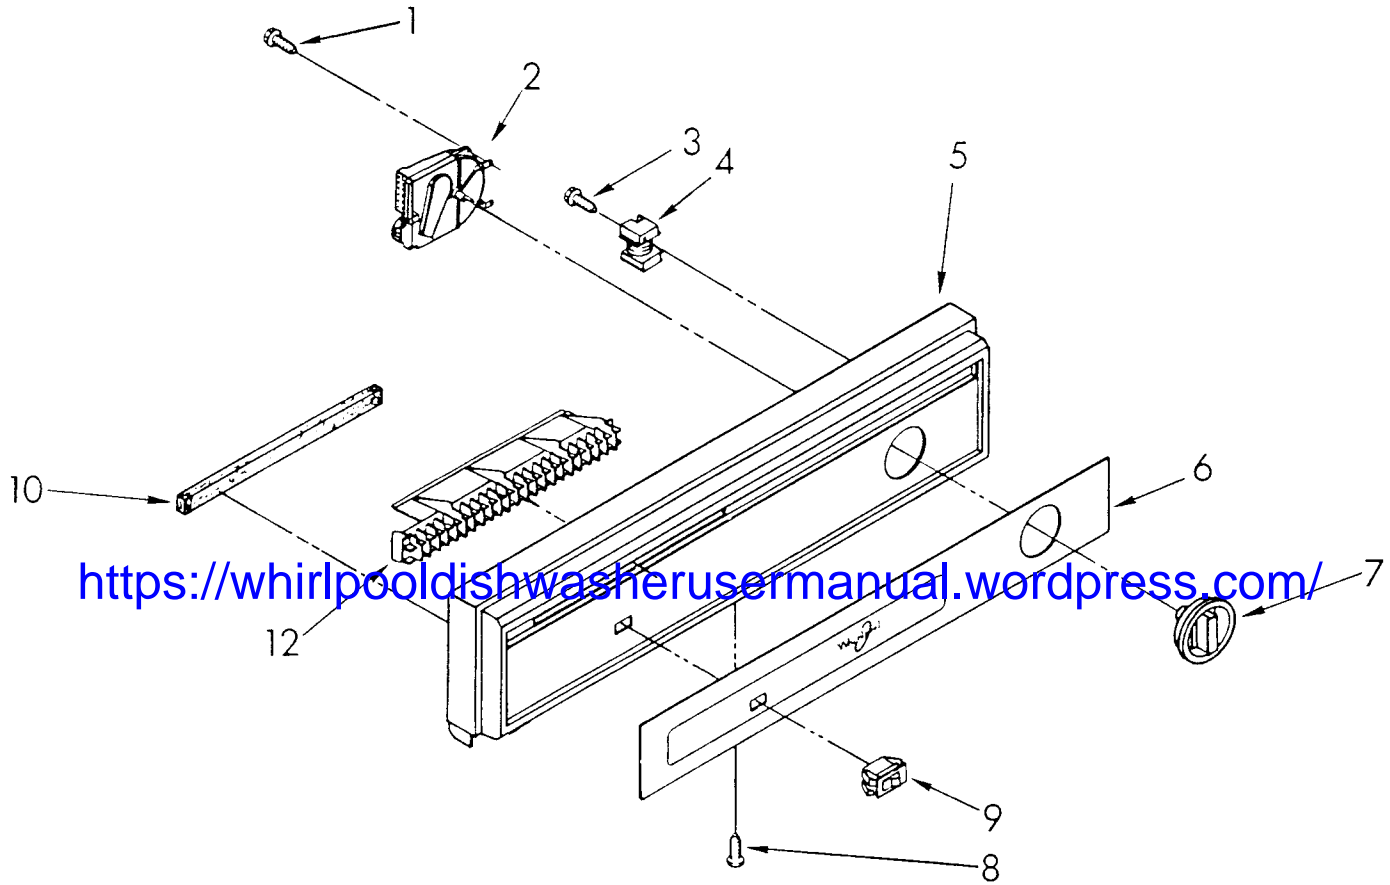

<https://whirlpooldishwasherusermanual.wordpress.com/>



10-89 Litho in U.S.A.

Whirlpool CORPORATION  
Benton Harbor, Michigan.

© 1989 WHIRLPOOL CORPORATION



Part No. 3369932


Get More Manual <http://www.pdflook.com/>

1	304231	Screw, 8-18 x 1/2 (3)
2	3370001	Timer
3	304232	Screw, 7-18 x 1-3/8
4	304409	Relay, Start
5	304606	Console (Includes Items 6 & 12)
6	3367622	Insert, Decorative
7	3367282	Knob, Timer
8	304234	Screw, 8-18 x 1/2 (2)
9	661520	Rocker Switch
10	3368537	Foam, Seal
12	304602	Grill, Vent

<https://whirlpooldishwasherusermanual.wordpress.com/>

# CABINET PARTS

 For Model: DP3000XRN4

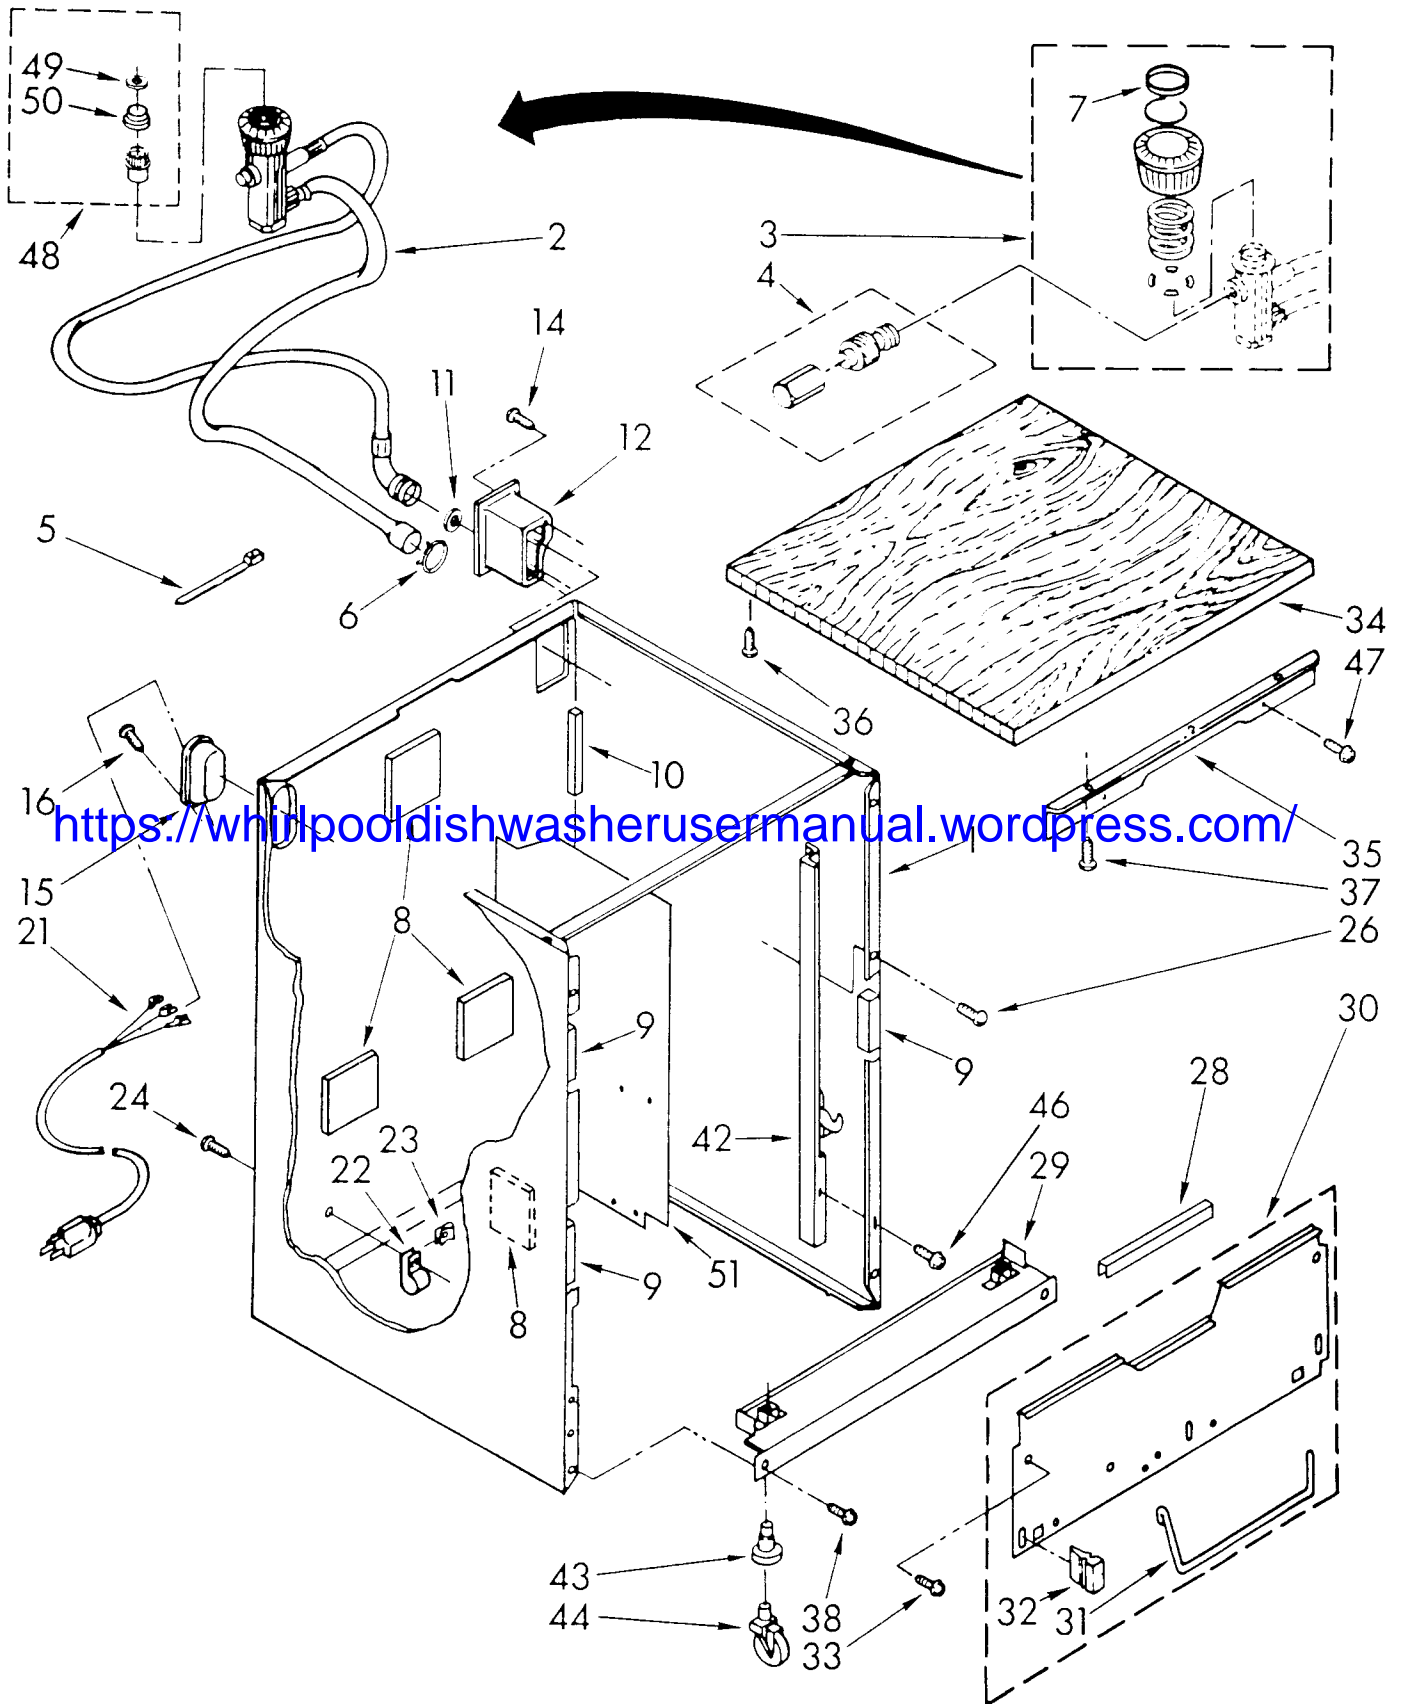


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1		Shell Assembly
	302898	Almond
2	302902	Coupler Assembly
3	285170	Collar Kit, Faucet Coupler
4	285171	Valve, Pressure Relief
5	596490	Clip, Strap
6	719953	Clamp, Hose
7	711696	Seal
8	3368108	Pad (4)
9	3368110	Pad (3)
10	3368109	Pad
11	16123	Washer
12	302891	Housing, Hose
14	3367670	Screw, 10-16 x 1/2 (2)
15	716234	Housing, Cord
16	339493	Screw (2)
21	303651	Cord, Power
22	596553	Clamp, Strain Relief
23	717337	Nut, J-Type
24	9418000	Screw, 8-18 x 1/2
26	339493	Screw, 8-18 x 1/2 (2)
28	3367669	Edge Protector
29	3368426	Toeplate Assembly (Includes Item 43)
30	719091	Plate, Cover
31	719093	Bar, Torsion R.H.
	719094	Bar, Torsion L.H.
32	719235	Bumper, Rubber
33	302868	Screw, Tapping (4)
34	304598	Panel, Top
35	302250	Trim, Front
36	9418000	Screw (2)
37	3367953	Screw, 8-18 x 5/8 (3)
38	300890	Screw, Tapping (4)
42	3367438	Leg Assembly, L.H.
	3367436	Leg Assembly, R.H.
43		Socket, Caster
	300450	Alternate
	717588	Alternate
44		Caster
	718534	Alternate
	300424	Alternate
46	90767	Screw, 8 x 3/8
47	304428	Screw (2)
48	713750	Adapter, Faucet
49	713747	Washer
50	713748	Bushing
51	3368640	Barrier, Hose

<https://whirlpooldishwasherusermanual.wordpress.com/>

# DOOR PARTS

 For Model: DP3000XRN4

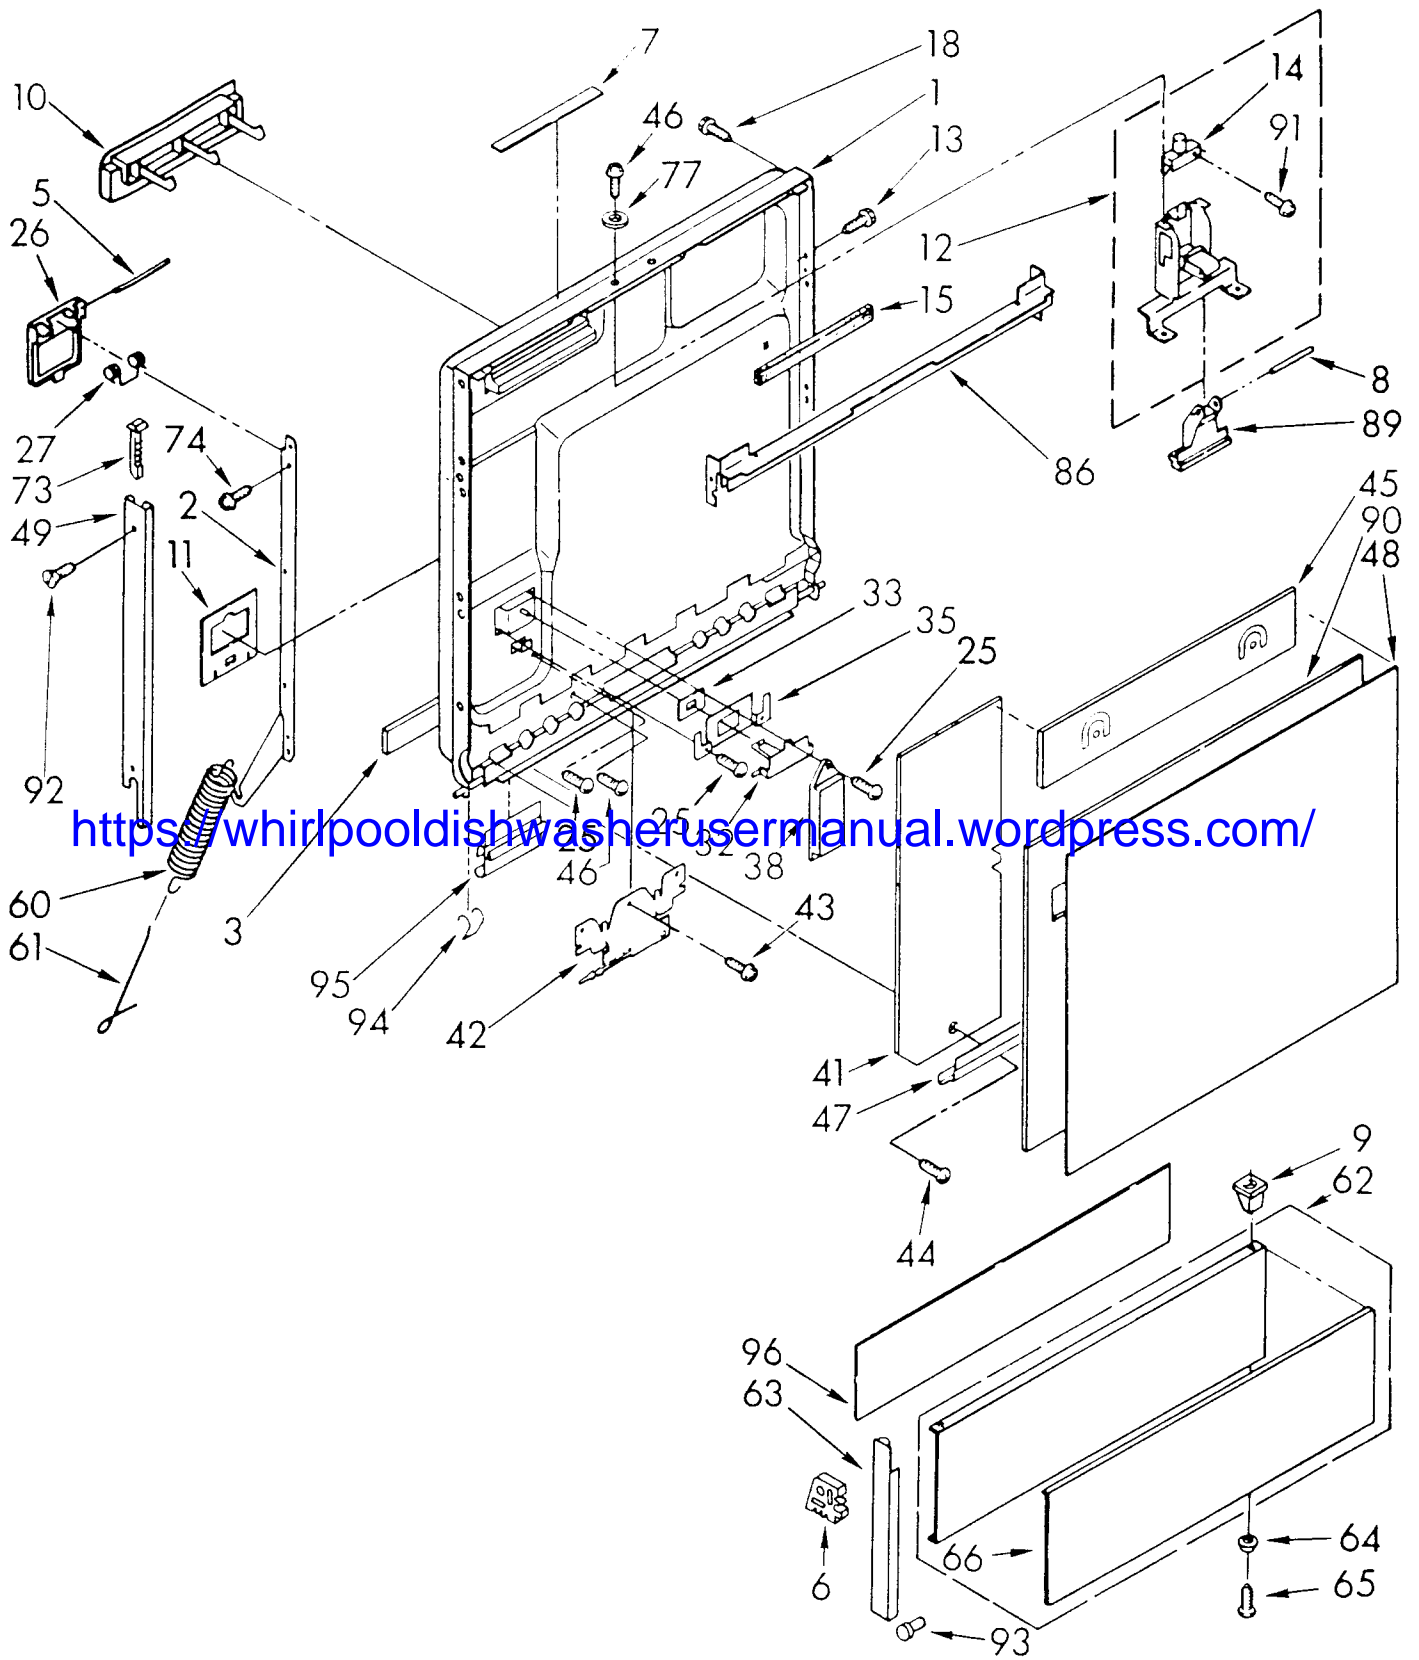

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


1	3367387	Door, Inner
2		Support, Door
	3367201	(R.H.)
	3367202	(L.H.)
3	717921	Gasket, Door
5	300115	Pin, Lid Hinge
6	3367736	Retainer (2)
7	302081	Label, User Guide
8	300234	Pin, Pivot
9	356592	Grommet
10	300246	Screen, Vent
11	303978	Barrier
12	3367058	Latch Assembly
13	304392	Screw, 8-18 x 1/2 (2)
14	660951	Switch, Interlock
15	719860	Baffle
18	304233	Screw, 8 x 1-7/8 (2)
25	304231	Screw, 8 x 1/2
26	300155	Lid, Detergent Dispenser Assembly
27	300106	Spring, Lid
32	300119	Lever, Catch
33	300105	Seal, Lever
35	300104	Retainer
38	300109	Actuator
41	303906	Barrier, Door
42	303362	Shield, Harness
43	3367953	Screw, 8-18 x 5/8
44	688983	Screw, 8-18 x 5/8 (2)
45	303908	Barrier, Console
46	90767	Screw, 6 x 5/8 Ground (1)
47	304047	Edging, Panel
48		Panel, Front
49	3367488	Trim, Door (L.H.)
	3367487	Trim, Door (R.H.)
60	3367658	Spring, Door
61	716401	Retainer, Spring
62		Panel, Access
63	3367527	Cap, End R.H.
	3367531	Cap, End L.H.
64	719581	Foot (2)
65	719266	Screw, 8-18 x 5/8
66	303445	Overlay, Access Panel
73	3367172	Clip, Trim Guard (2)
74	300128	Screw, 8-18 x 1/2 (4)
77	300237	Washer (2)
86	304391	Rail, Support
89	304408	Lever, Release
90	3368569	Spacer, Panel
91	301582	Screw, 6-32 x 1
92	3367288	Screw, 8 x 1/2 (4)
93	715779	Bumper
94	301857	Clip, Wire
95	3367720	Retainer, Clip
96	301774	Pad, Sound

<https://whirlpooldishwasherusermanual.wordpress.com/>

|Refer To Dishwasher Replacement  
Panel Parts List No. 675345

# TUB PARTS

 For Model: DP3000XRN4

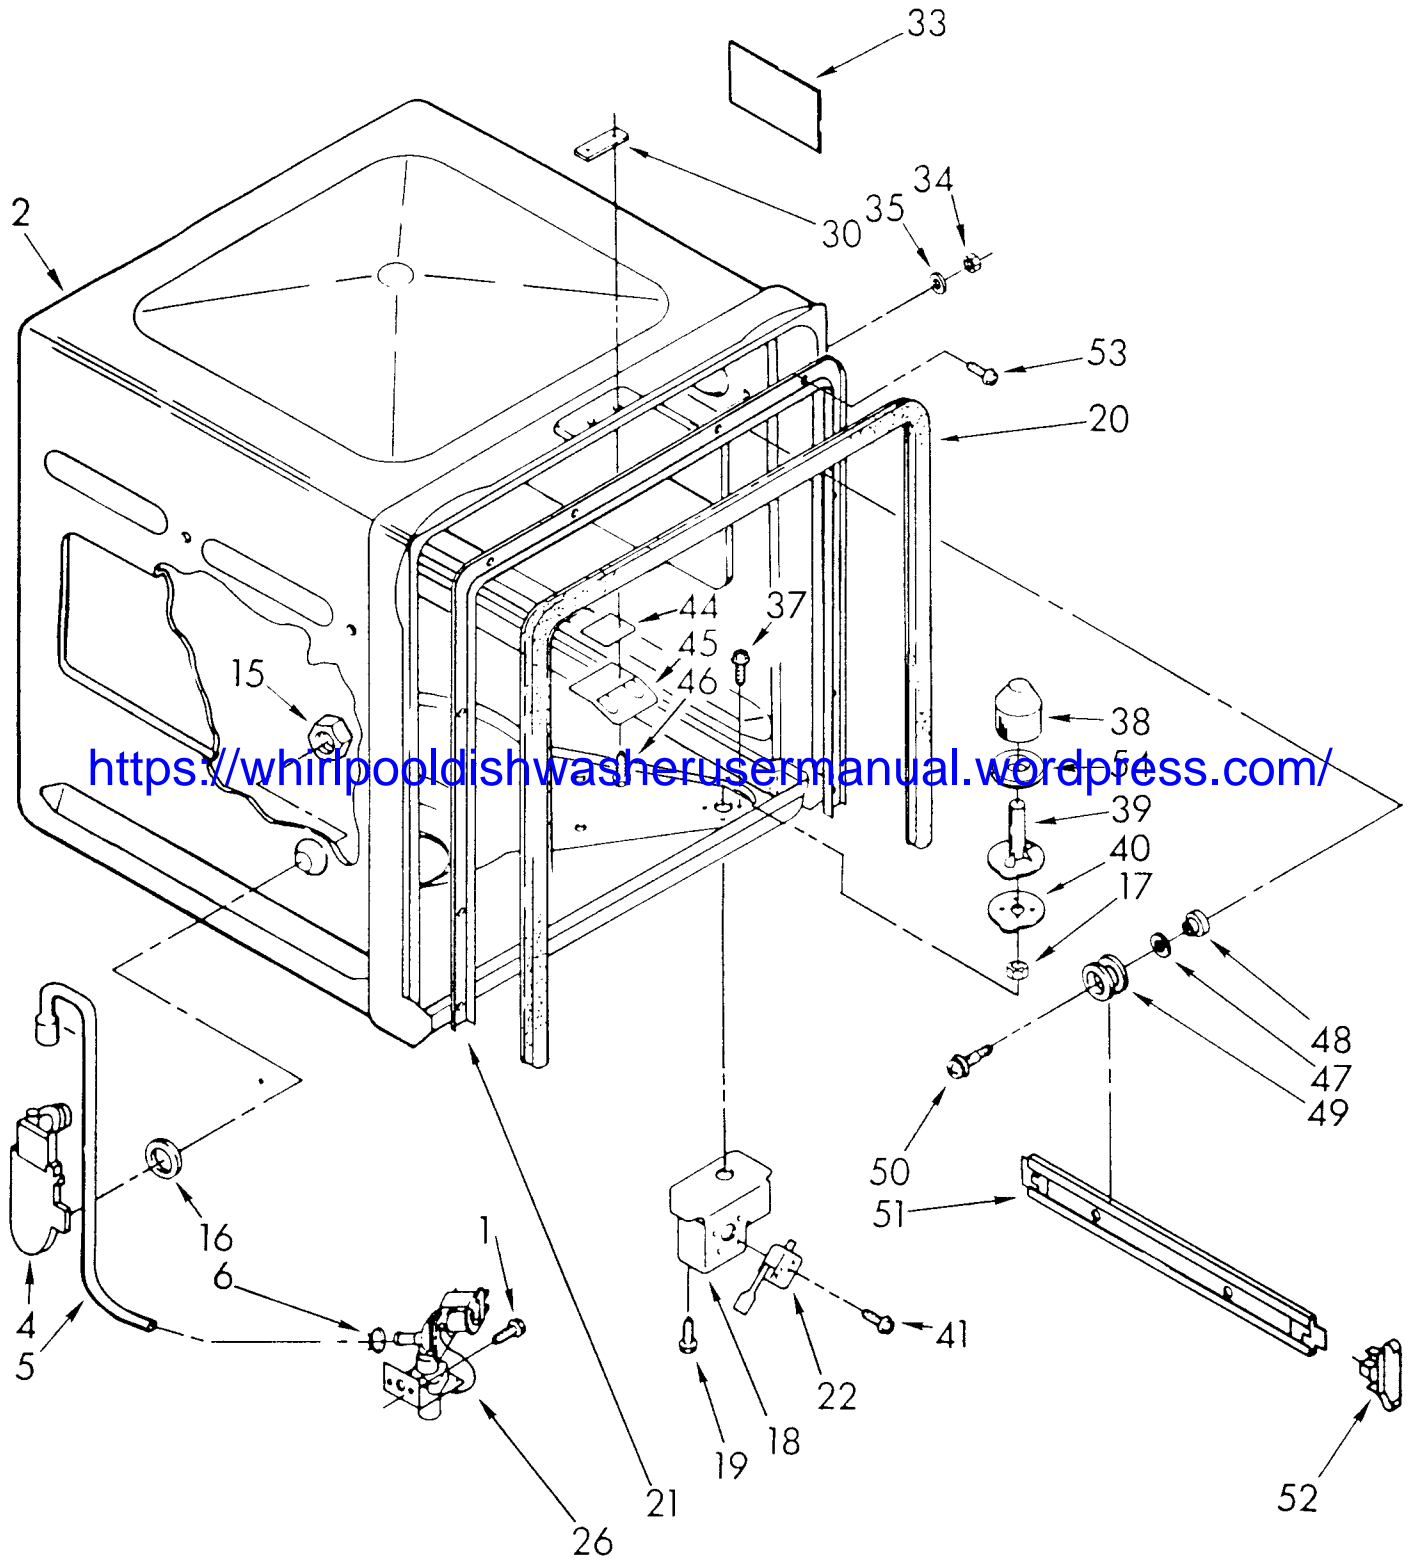

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	90767	Screw, 8 x 3/8 (2)
2	3367464	Tub Assembly
4	300974	Inlet, Water
5	304669	Hose, Inlet
6	301958	Clamp
15	713799	Nut, 7/18-16
16	713878	Gasket
17	717488	Nut, .125
18	719342	Bracket, Overflow Switch
19	718250	Screw, 8 x 1/2 (3)
20	3368007	Gasket
21	3368002	Retainer, Gasket
22	660741	Switch, Pressure
26	661511	Valve, Water Inlet
30	303080	Nut, Twin Spring
33	302340	Pad, Sound (2)
34	718829	Locknut (8)
35	717624	Washer (8)
37	717236	Screw, 8-18 x 1/2
38	718035	Float
39	719967	Standpipe, Overflow
40	719966	Gasket, Overflow
41	302203	Screw, 4-40 x 9/16
44	712302	Shim
45	300233	Strike
46	3367670	Screw, 10-16 x 1/2 (2)
47	718750	Washer (8)
48	718817	Washer, Cup (8)
49	300844	Wheel, Tub (8)
50	712499	Screw, Shoulder (8)
51	300846	Track (2)
52	300845	End Cap, Track (4)
53	3368008	Screw, 8-18 x 5/8 (10)
54	301662	Gasket, Standpipe (2)

#### LITERATURE PARTS

LIT3367225	Instructions, Installation
LIT304272	Guide, Use & Care
LIT3368593	Energy Guide
LIT3368870	Label, Wiring Diagram
LIT3369932	Parts List

#### OPTIONAL PARTS NOT INCLUDED

##### PAINT, TOUCH UP (1/2 oz.)

72017	White
72107	Almond
72110	Golden Harvest
72112	Toast
72113	Platinum

##### PAINT PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261890	Golden Harvest
285365	Toast
285366	Platinum

<https://whirlpooldishwasherusermanual.wordpress.com/>



285006 Superior Black  
206922 Primer (White)  
206925 Leveler (Thinner) (2 Oz.)

PAINT, TOUCH UP (1 qt.)

799344 White (Uncut)  
978883 Almond (Uncut)  
261891 Golden Harvest (Uncut)  
285367 Toast (Uncut)  
285368 Platinum (Uncut)

TUB LINER REPAIR

799640 Kit, Epoxy Patch (White)

 
DISHRACK REPAIR

675476 Vinyl Touch-Up (Blue)  
675506 Tine Tip Repair Kit (Blue\_Enough For Two Complete Dishracks)

<https://whirlpooldishwasherusermanual.wordpress.com/>

# PUMP AND MOTOR PARTS

For Model: DP3000XRN4

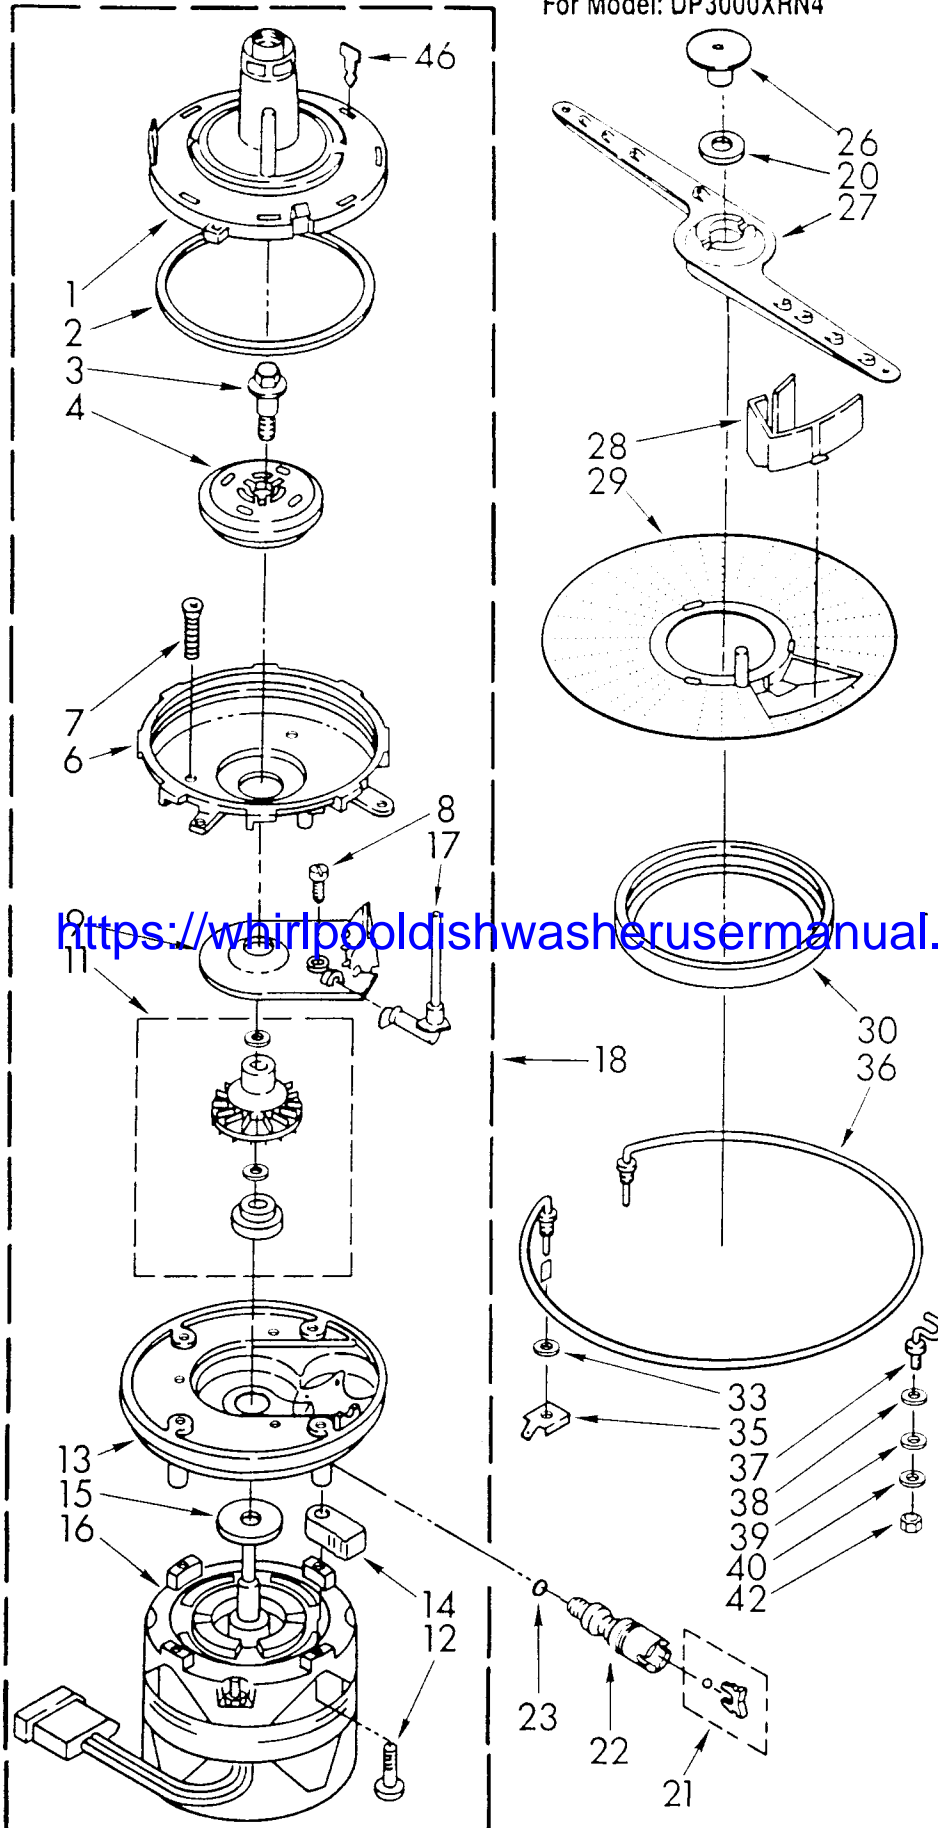

<https://whirlpooldishwasherusermanual.wordpress.com/>



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	3367439	Pump Housing, Upper
2	718259	Seal, Ring
3	303516	Screw, 10-32 x 3/4
4	303517	Impeller
6	718222	Pump Housing, Lower
7	718257	Screw, 8-18 x 1-3/8
8	718258	Screw, 8-18 x 5/8
9	300084	Coverplate
11	675468	Kit, Drain Impeller
12	3369331	Screw, 13-16 (4)
13	3367203	Base, Pump
14	3367197	Support, Pump (4)
15	303252	Slinger
16	303574	Motor
17	718629	Bleeder Assembly
18	3367440	Pump & Motor Assembly
20	719576	Bearing, Nozzle
21	675488	Check Ball & Retainer
22	675238	Valve, Check (Includes Items 21 & 23)
23	95080	Ring, ``O''
26	3367198	Cap, Nozzle
27	302767	Spray Arm, Lower
28	300988	Guard, Screen
29	718226	Screen, Sump
30	717000	Gasket, Pump
33	717273	Washer, Rubber (2)
35	718537	Nut, 7/16-20 (2)
36	660318	Heater
37	717006	Support, Heater (2)
38	717289	Washer, Retainer (2)
39	14351	Washer (2)
40	711284	Washer (2)
42	120614	Nut, 10-32 (2)
46	301936	Key, Pump Housing



<https://whirlpooldishwasherusermanual.wordpress.com/>

# DISHRACK PARTS

  For Model: DP3000XRN4

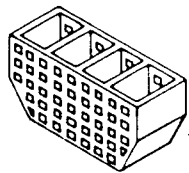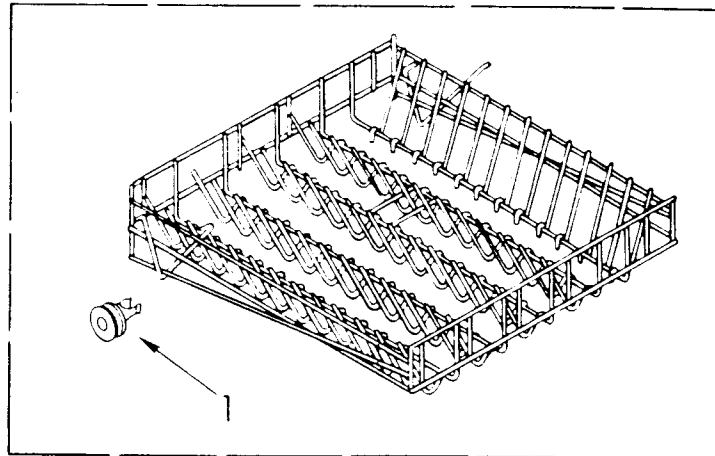
  
<https://whirlpooldishwasherusermanual.wordpress.com/>

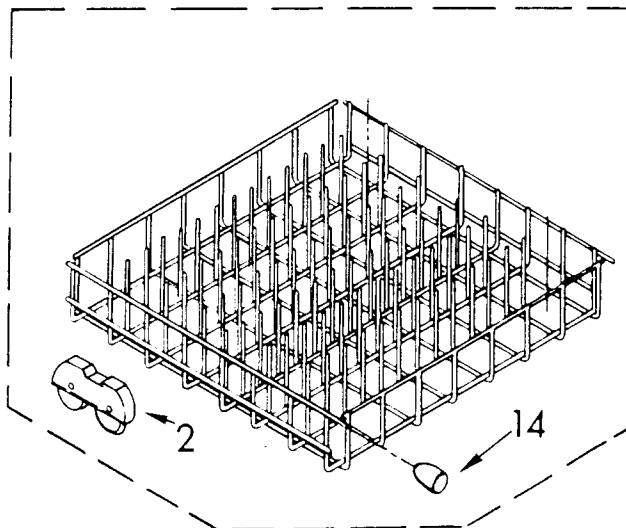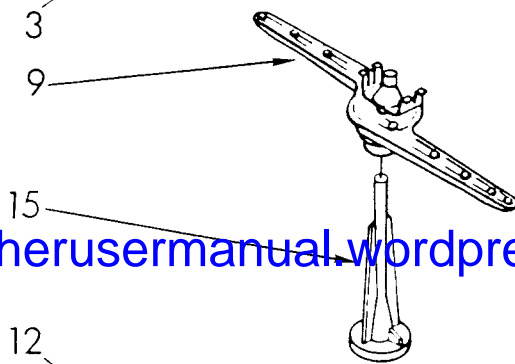



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	300995	Wheel & Axle Assembly (4)
2	3368747	Wheel & Shroud Assembly (4)
3	661521	Dishrack, Upper
9	304204	Spray Arm Assembly
12	304177	Dishrack, Lower
14	304490	Bumper
15	304170	Tower
16	3367117	Silverware Basket



<https://whirlpooldishwasherusermanual.wordpress.com/>

# WIRING HARNESS PARTS

  For Model: DP3000XRN4


  
<https://whirlpooldishwasherusermanual.wordpress.com/>

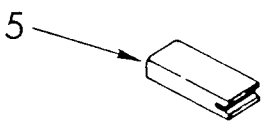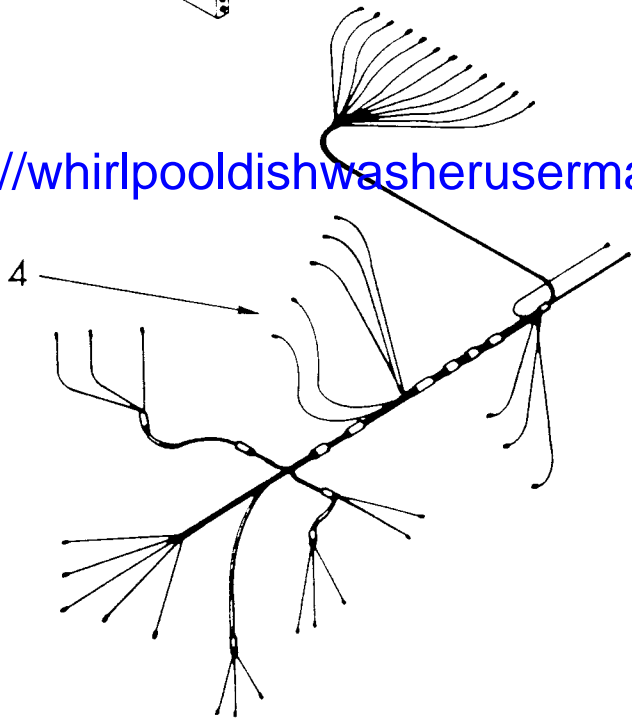

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	94614	Terminal
2	352088	Terminal, Female
3	719585	Receptacle (5-Circuit)
4	3370002	Harness, Wiring
5	358736	Insulator, Terminal

<https://whirlpooldishwasherusermanual.wordpress.com/>