


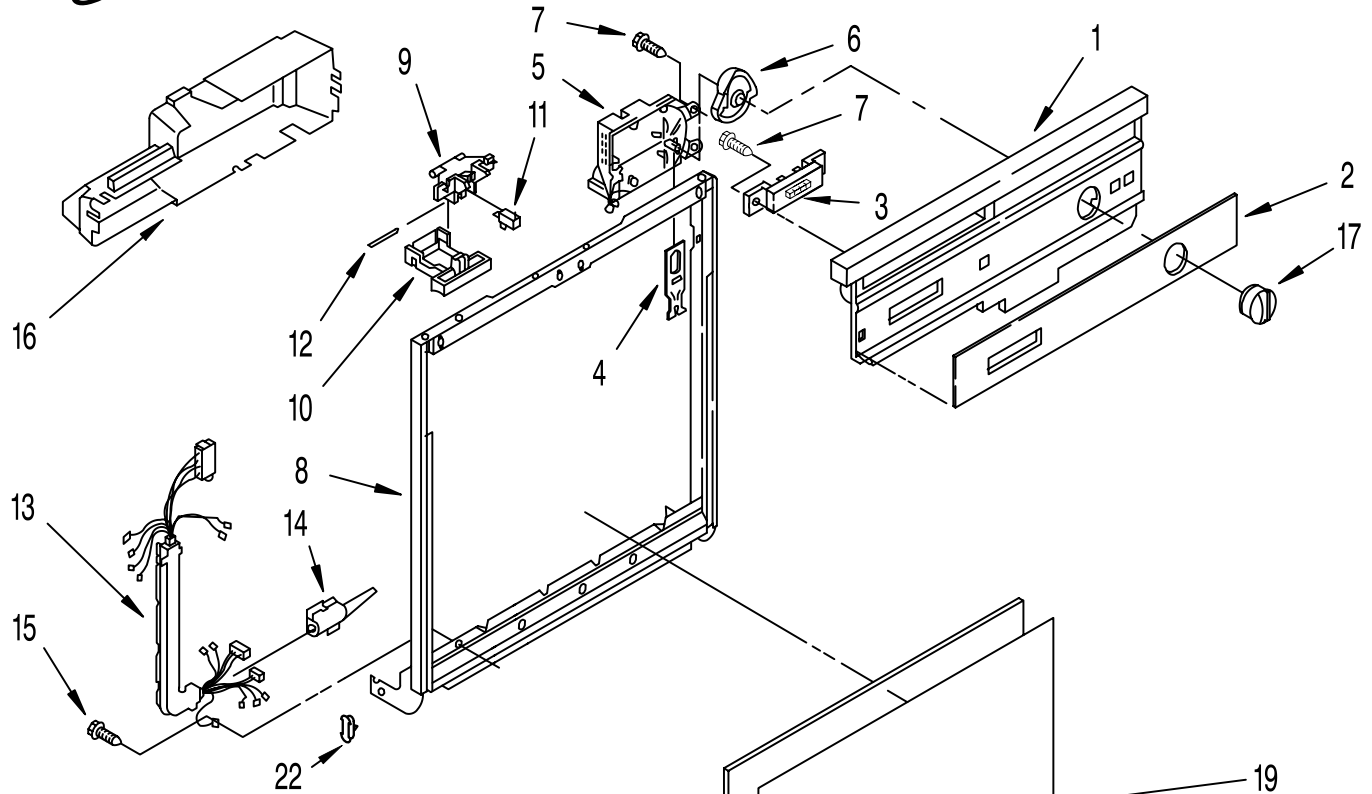

FRAME AND CONSOLE PARTS

For Model: DP840CWDB3
Almond/Black

UNDERCOUNTER
DISHWASHER



Illus. No.	Part No.	DESCRIPTION
1	3375271	Console (Includes Item 2)
2	3374798	Insert, Console
3	3375561	Switch
4	3369529	Follower, Cam
5	3375079	Timer
6	3375140	Cam
7	304231	Screw, 8-18 x 1/2 (5)
8	3374711	Door Frame (Includes Item 23)
9	3368953	Bolt, Latch
10	3369457	Lever, Latch
11	3369325	Switch, (2)
12	3368955	Pin, Switch (2)
13	3374875	Harness and Protector
14	3376405	Elbow, Harness
15	3400803	Screw, 8-32 x 1/4
16	3375473	Cover Timer
17	3375348	Knob, Timer
18	3368979	Spacer
19	†Front Panel 3369516	Almond/Black
20	3374010	Retainer, Panel
22	3373234	Bearing, Spring (2)
23	3374716	Channel, Retainer (Also Order Item #20)


<https://whirlpooldishwasherusermanual.wordpress.com/>

†Refer To Dishwasher
Replacement
Panel Parts List No.675345.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INNER DOOR PARTS

For Model: DP840CWDB3
Almond/Black

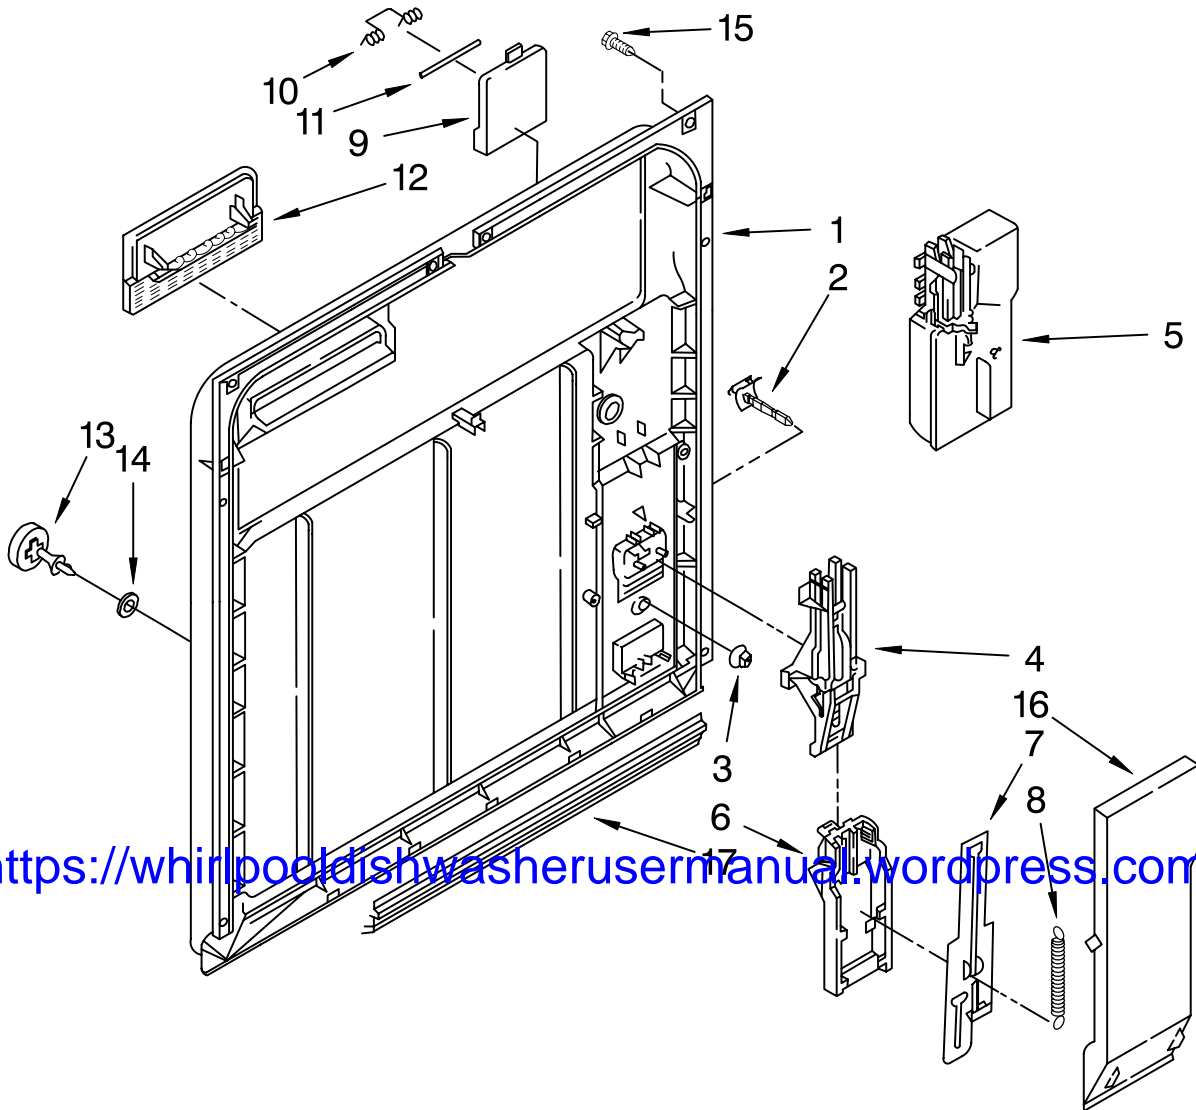


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3369054	Inner Door (Also Order Latch Door Kit 676413)	6	3369000	Draw Bar (Upper Dispenser)	11	3372028	Pin (Lid Hinge)
2	3376066	Latch, Detergent Dispenser	7	3369602	Draw Bar (Lower Dispenser)	12	3371710	Screen, Vent
3	3369061	Snap, Detergent Dispenser	8	3368999	Spring (Draw Bar)	13	3369512	Wet-Agent Cap Assembly
4	3369055	Actuator Assembly	9	3376404	Lid Assembly	14	3369155	Seal (Wet-Cap)
5	3368967	Wet Agent, Dispenser	10	300106	Spring, Lid	15	3369051	Screw (8)
						16	3371569	Cover, Drip
						17	3369479	Spatter Shield

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: DP840CWDB3
Almond/Black

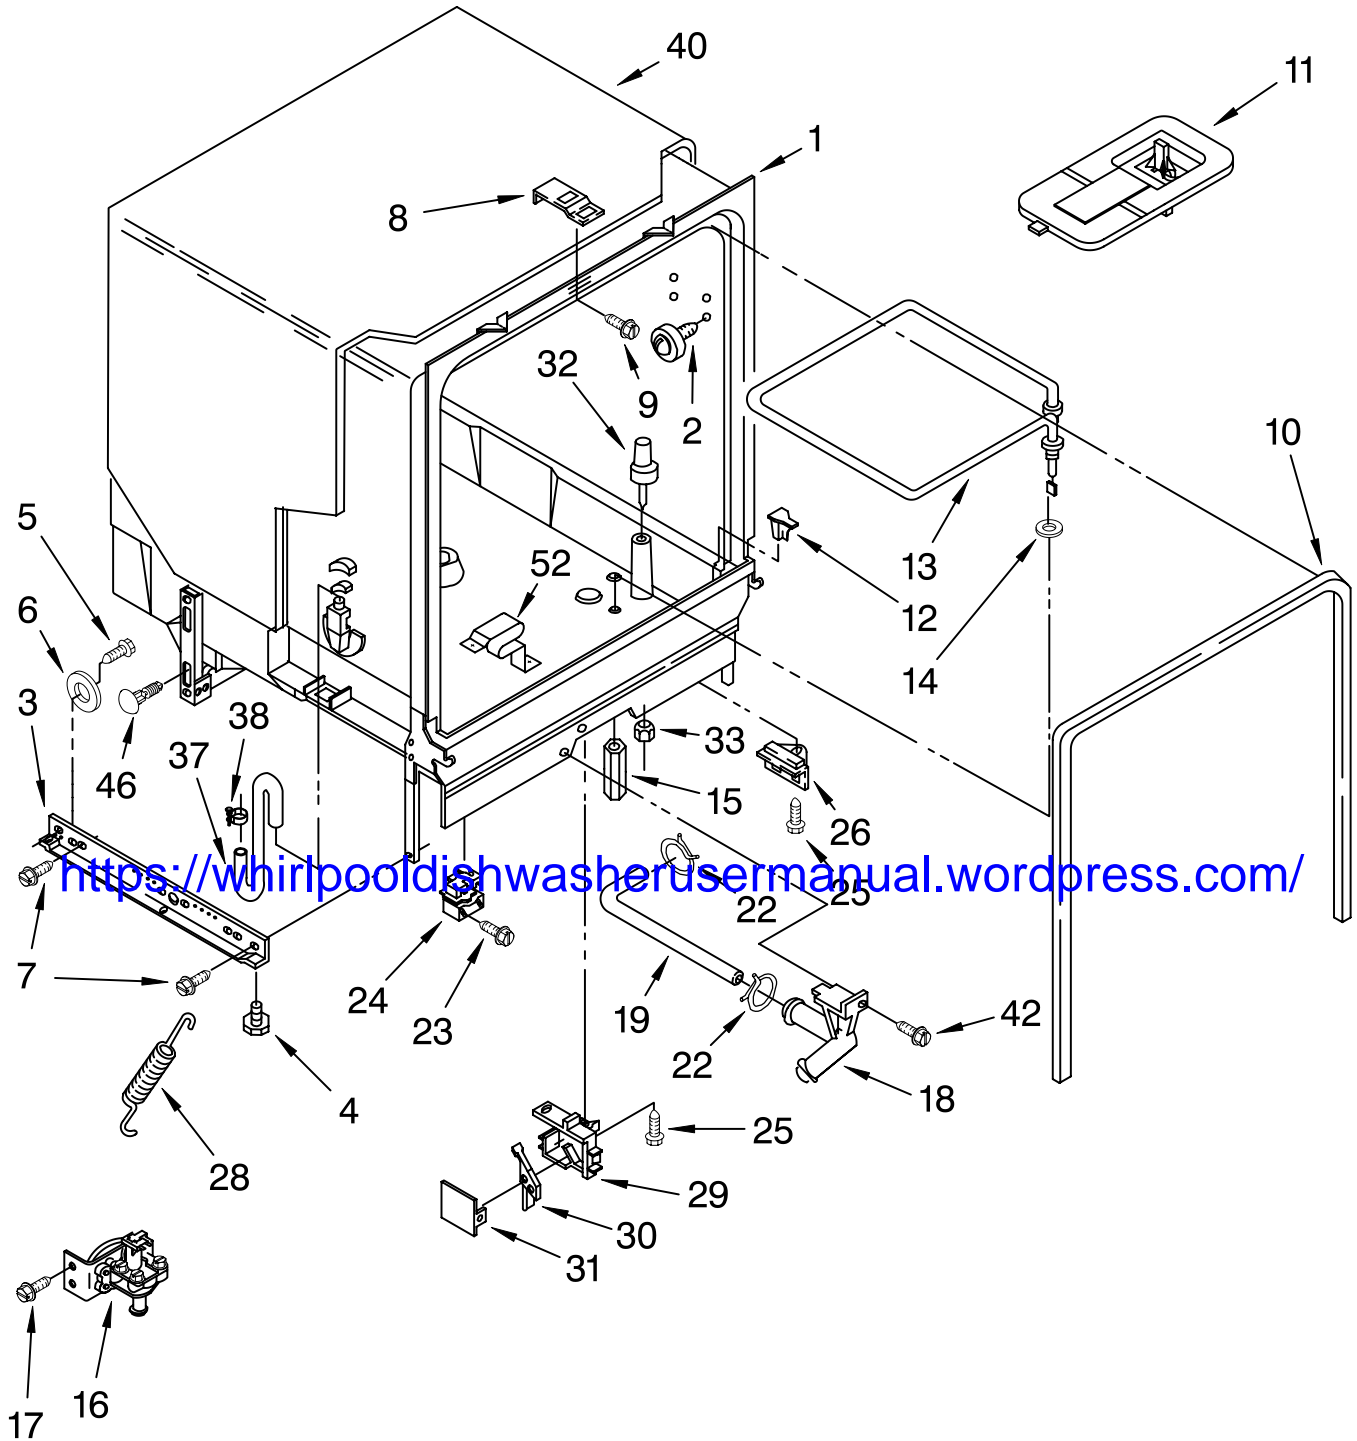

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: DP840CWDB3
Almond/Black

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3375129	Tub and Support Assembly	14	717273	Washer, Rubber (2)	30	3369067	Switch, Float
2	3369078	Tub, Wheel Assembly (8)	15	3369073	Nut (2) (Heater Terminal)	31	3369049	Cover, Switch Housing
3	3368932	Runner (2)	16	3374667	Water Valve	32	3369072	Float
4	3374849	Leveler (2)	17	304392	Screw, 8-18 x 1/2	33	717488	Nut
5	3370389	Screw, Shoulder (2)	18	3369421	Check, Valve Assembly	37	3371030	Hose, Inlet
6	302819	Wheel (2)	19	3369180	Hose, Coupler	38	301958	Clamp
7	343641	Screw, 10-16 x 1/2 (4)	22	371499	Clamp (Double)	40	3375059	Sound Shield
8	3374719	Plate, Latch	23	3370225	Screw	42	359625	Screw, 8-18 x 1/2
9	3374720	Screw	24	3369063	Relay	46	304666	Retainer, Push (2)
10	3376927	Gasket	25	304231	Screw, 8-18 x 1/2	52	3368987	Support, Heater
11	3369322	Grate	26	3368928	Fuse, Thermal			
12	3369052	Deflector (2)	28	3373228	Spring, Door (2)			
13	3372523	Heater	29	3369048	Housing, Float Switch			

†Refer To Dishwasher Replacement Panel Parts List No. 675345.


<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND SPRAY ARM PARTS

For Model: DP840CWDB3
Almond/Black


Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3369036	Clamp (2)
5	3369033	Support, Motor
6	3369032	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	3369008	Spray Arm, Assembly Lower
10	3369039	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371746	Bearing
15	3371744	Shoulder Screw
16	3369178	Ball, Check-Valve
17	3369176	Funnel
18	3369326	Grate, Funnel
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	3369179	Hose, Collector
23	3371634	Washer, Curved
24	3369181	Screw 10-16, Hi-Lo (4)

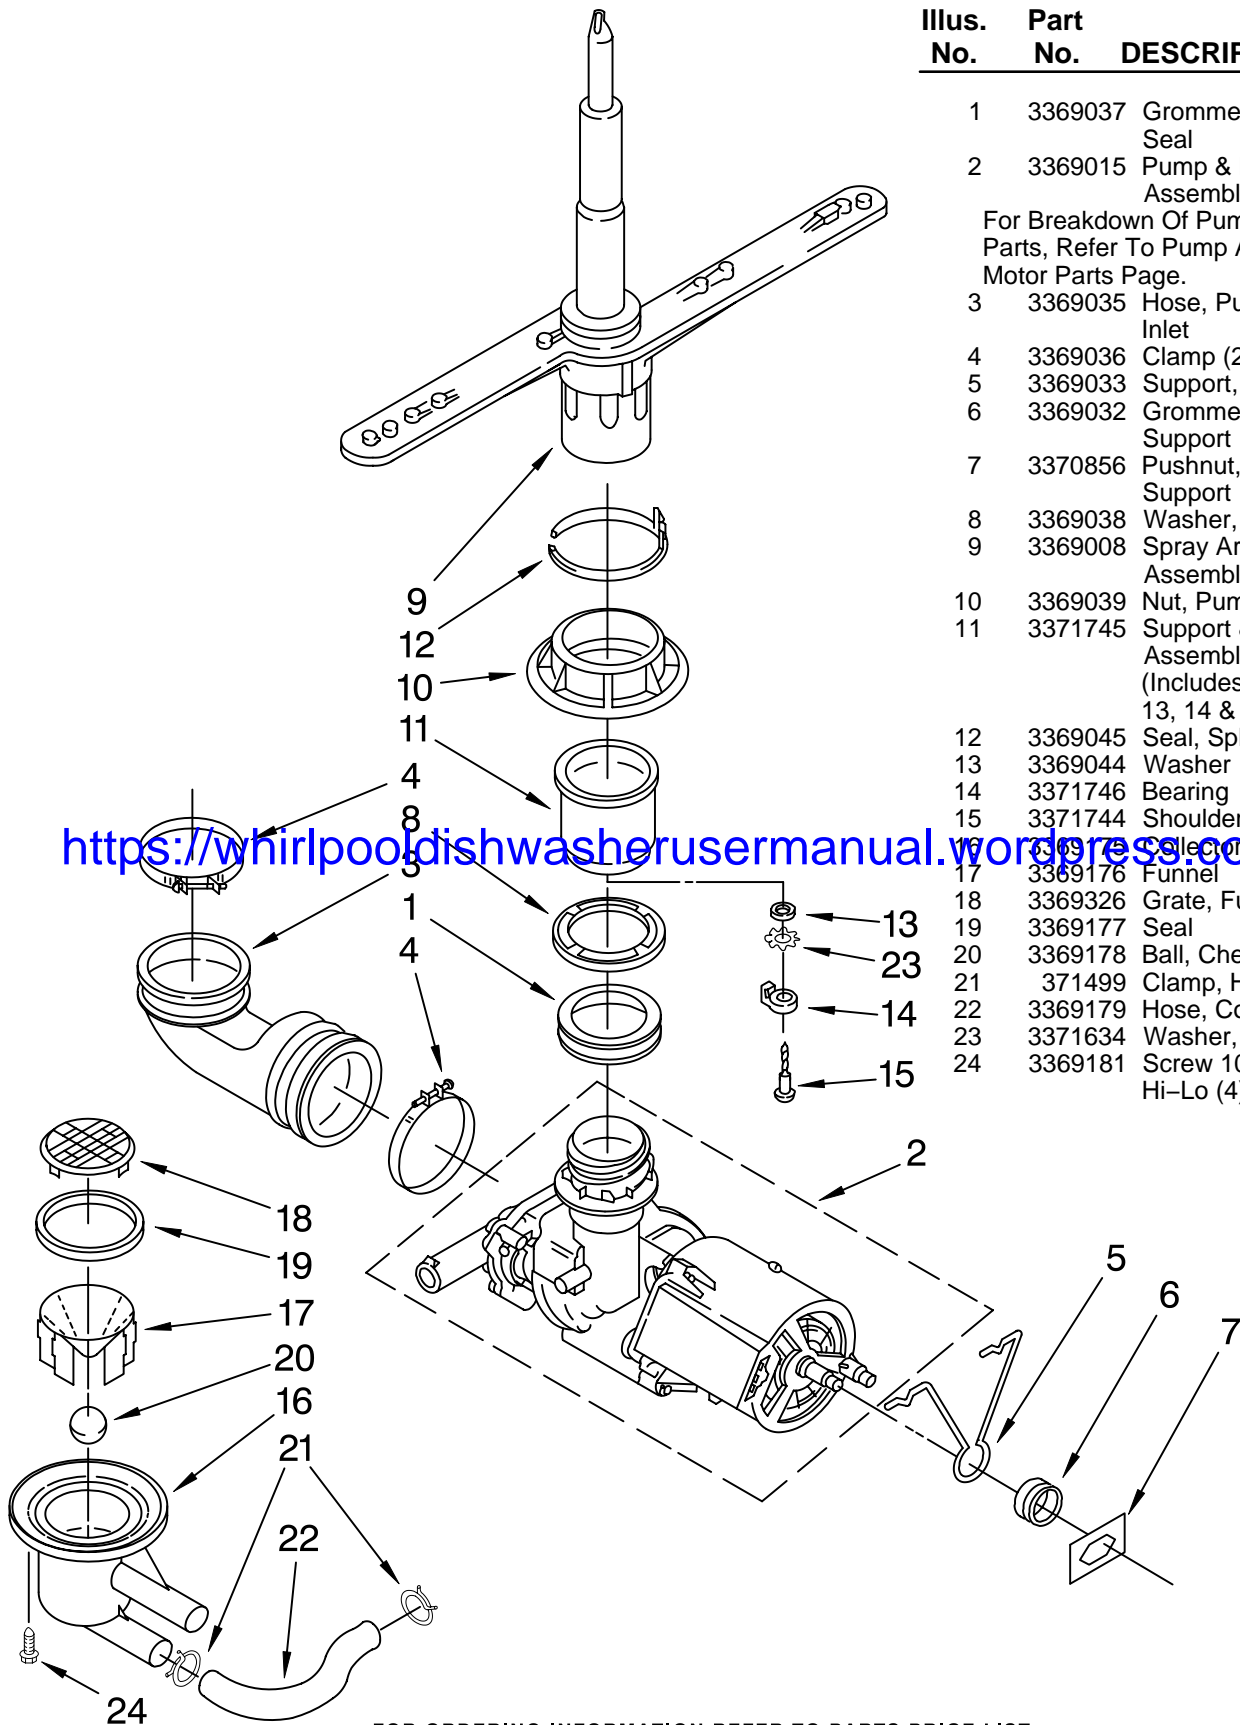

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND MOTOR PARTS

For Model: DP840CWDB3
Almond/Black

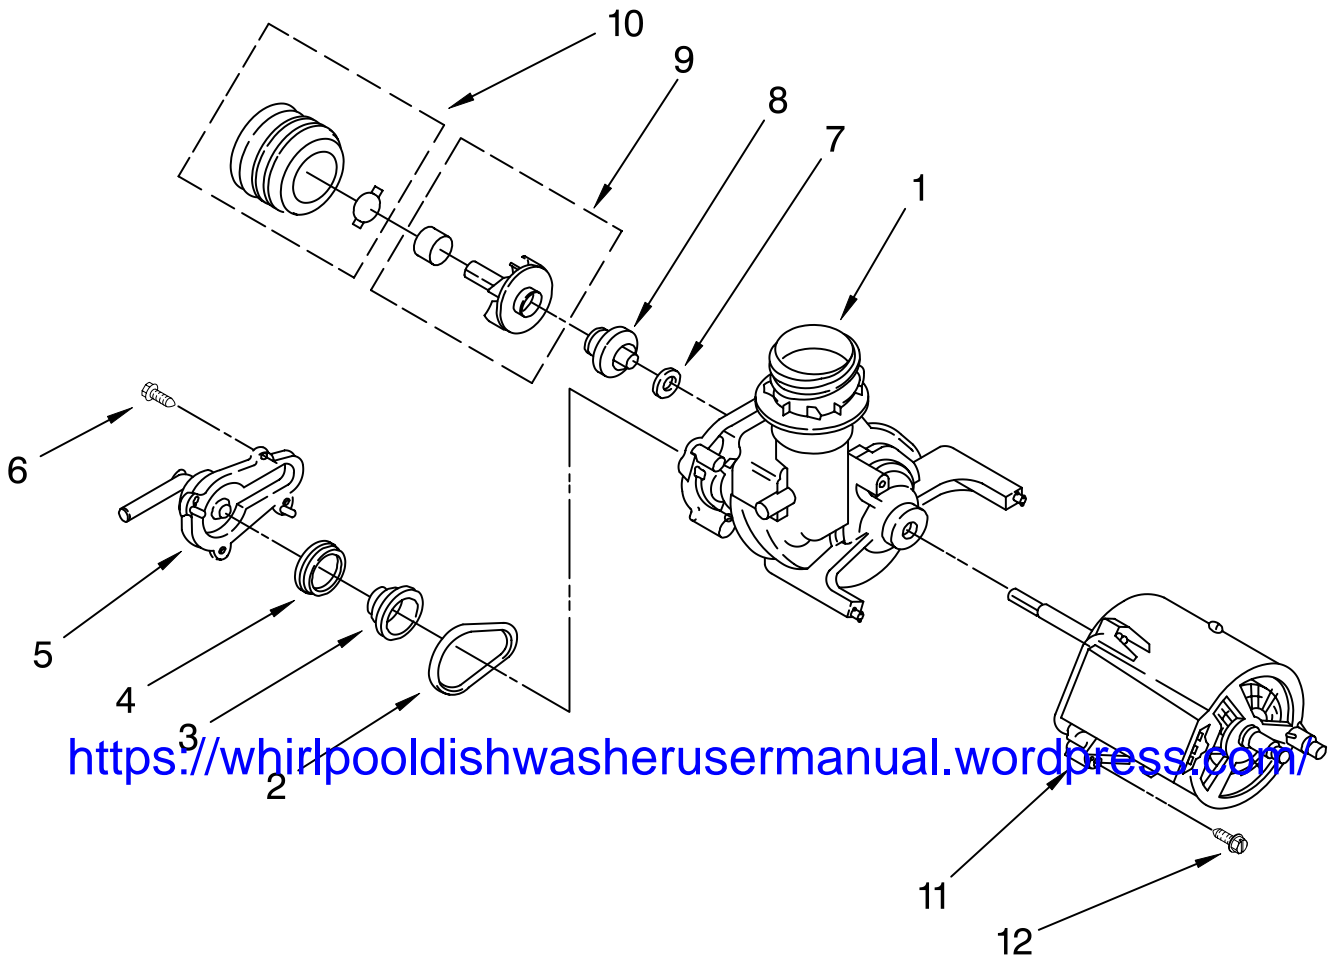


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3374028	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	3372625	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DISHRACK PARTS

For Model: DP840CWDB3
Almond/Black

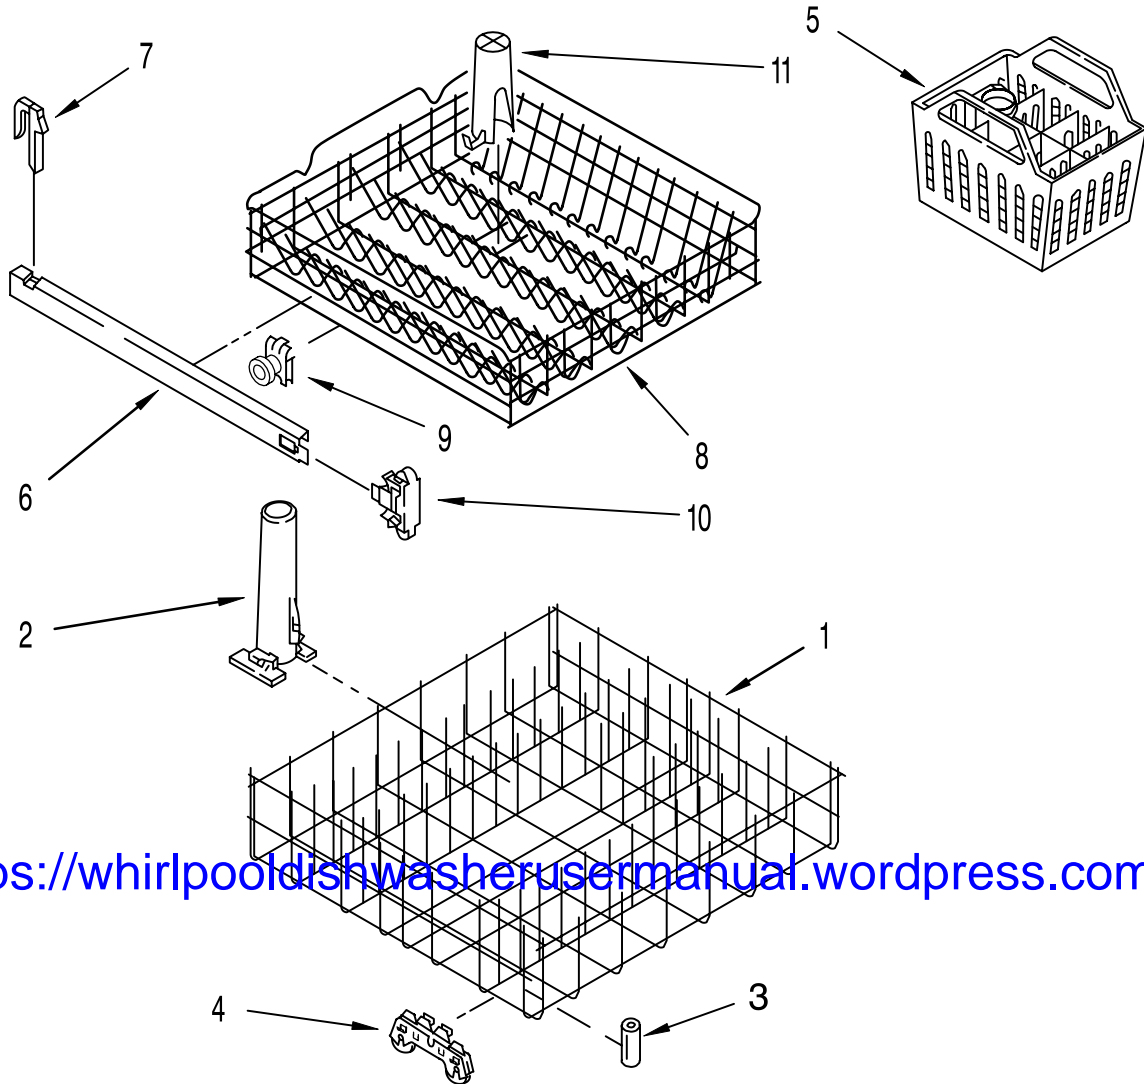


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3370498	Lower Dishrack Assembly
2	3369761	Tower, Protector
3	3368006	Bumper, Dishrack (2)
4	3376961	Wheel & Transport Assembly (4)
5	3369762	Basket, Silverware
6	3369071	Track, Dishrack (2)
7	3374701	Stop, Track (2)
8	3371663	Dishrack, Upper
9	3371581	Wheel & Axle Assembly (4)
10	300845	Endcap, Track (2)
11	3371908	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model: DP840CWDB3
Almond/Black

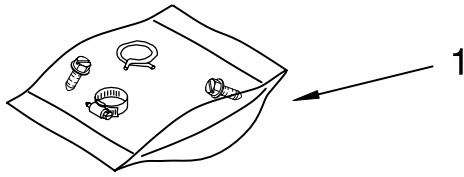

Illus. No.	Part No.	DESCRIPTION
1	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)


LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>LITERATURE PARTS</u>			<u>OPTIONAL PARTS NOT INCLUDED</u>					
LIT3369678		Instructions, Installation	<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>DISHRACK REPAIR</u>		
LIT3369007		Instructions, Installation (Supplement) (Locating Your Water Supply)	72007	White	673556		Vinyl Touch-Up (Blue)	
LIT3373484		Energy Guide	72107	Almond	675677		Tine Tip Repair Kit (Blue— Enough For Two Complete Dishracks)	
LIT3373757		Guide, Use & Care	72032	Black	676453		Vinyl Touch-Up (White)	
LIT3373599		Wiring Diagram	<u>PAINT, PRESSURIZED SPRAY (13 oz.)</u>			675679		Tine Tip Repair Kit (White— Enough For Two Complete Dishracks)
LIT0677967		Do-It Yourself, Manual	350956	Almond	676455		Vinyl Touch-Up (Grey)	
<u>ACCESSORY PARTS</u>			285006	Superior Black	676458		Tine Tip Repair Kit (Grey— Enough For Two Complete Dishracks)	
			350942	Primer (White)				
			<u>PAINT, TOUCH-UP (1 qt.)</u>					
4317925		White	978883	Almond (Uncut)				
4317926		Avocado	799340	Black (Uncut)				
4317927		Gold						
4317929		Almond						
4317930		Toast						
4317931		Platinum						
4318050		Heavy Duty						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: DP840CWDB3
Almond/Black

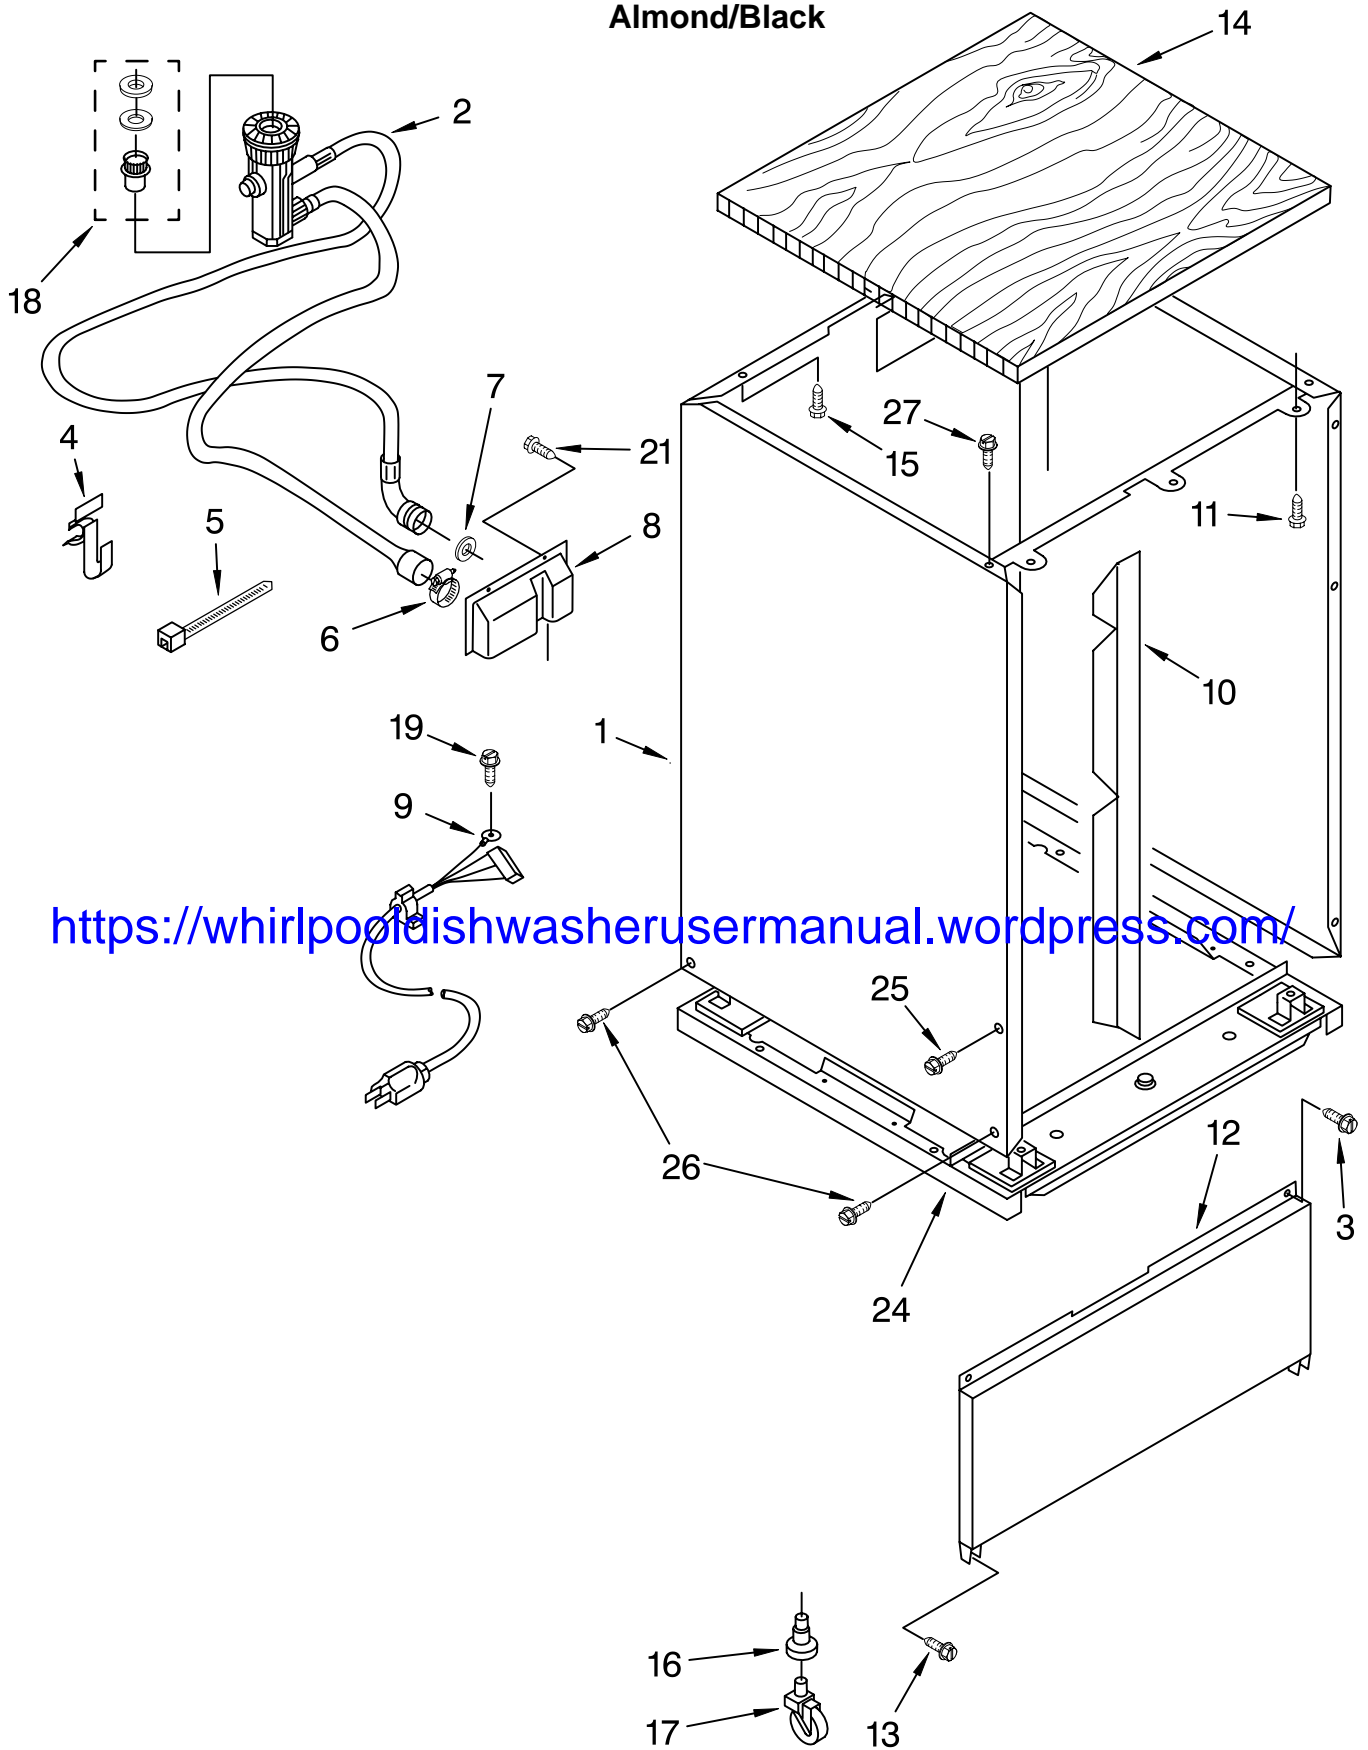

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: DP840CWDB3

Almond/Black

Illus. No.	Part No.	DESCRIPTION
1	3370306	Shell Assembly (Almond)
2	3370318	Coupler Assembly
3	302868	Screw
4	3370323	Retainer, Hose
5	309330	Clip, Strap
6	3367052	Clamp, Hose
7	16123	Washer
8	3371343	Housing, Hose
9	3371542	Cord, Power
10	3371807	Pad, Divider
11	3373329	Screw
12	3371640	Shroud, Caster
13	3370544	Screw
14	3373198	Panel, Top
15	304428	Screw (2)
16	300450	Socket, Caster
17	300424	Caster
18	3374592	Adapter, Faucet
19	3372525	Screw
21	3370826	Screw (2)
24	3370551	Frame Assembly
25	3371635	Screw, 8-18 x 1/2
26	3371644	Screw, 8-18 x 5/8
27	302251	Screw

<https://whirlpooldishwasherusermanual.wordpress.com/>