




# FRAME AND CONSOLE PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

UNDERCOUNTER  
DISHWASHER

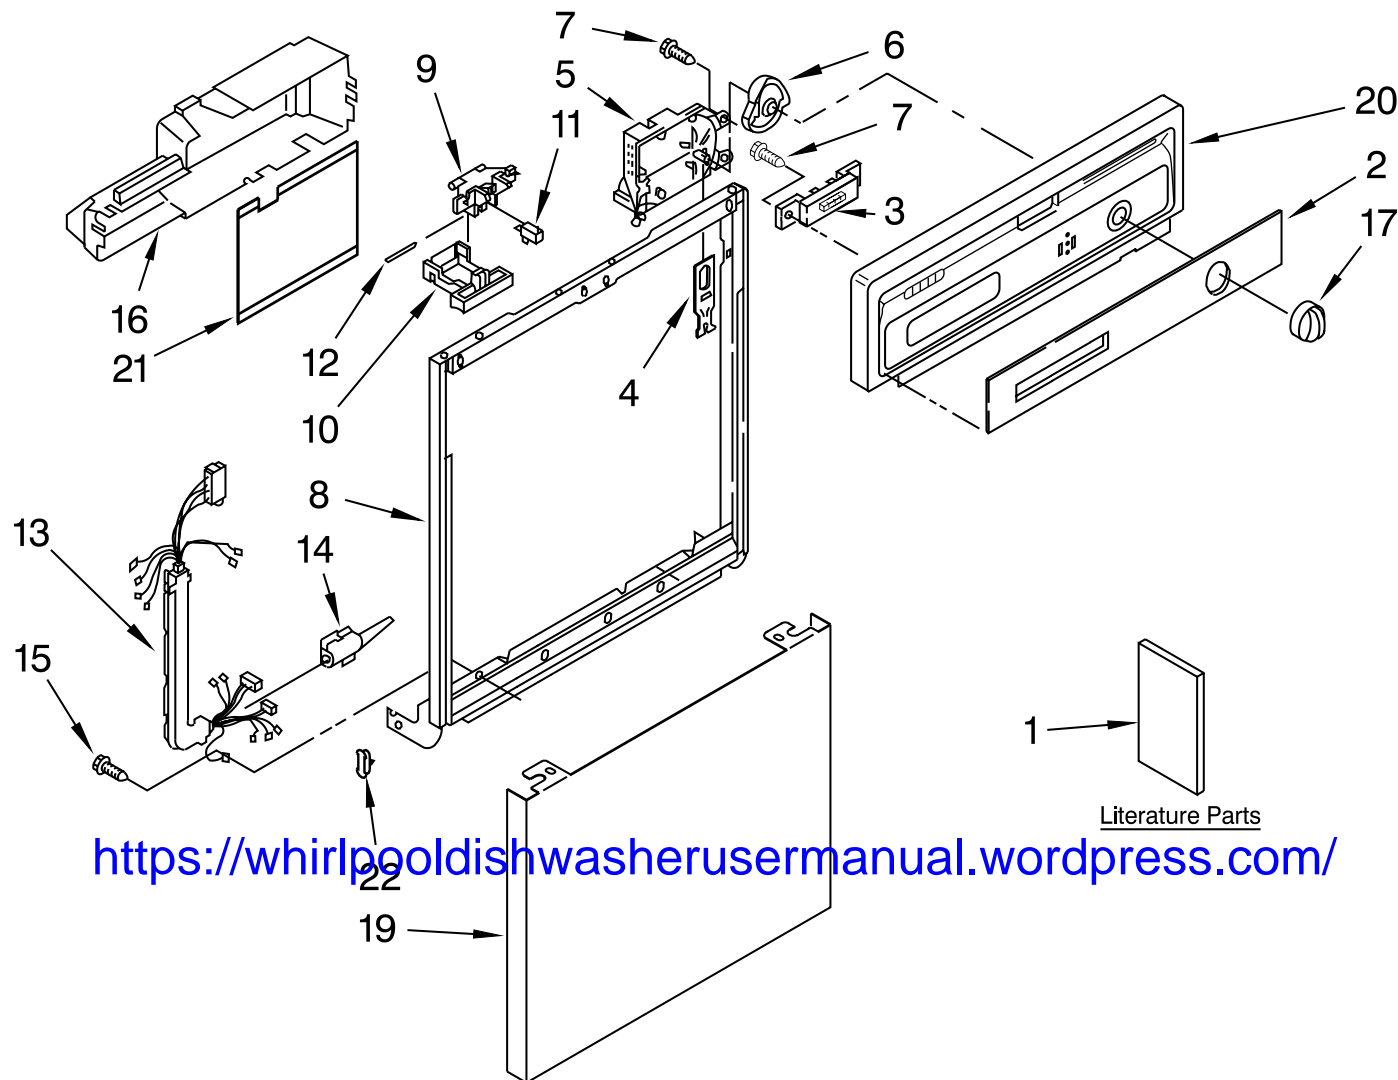


<https://whirlpooledishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8535436	Literature Parts Instructions, Installation	6	8271510	Cam	17	8275308	Knob, Timer Black
	3367007	Instructions, Installation (Supplement) (Locating Your Water Supply)	7	304231	Screw, 8-18 x 1/2 (5)		8275309	White
	W10039850	Guide, Energy	8	9743028	Door Frame Black		8275310	Biscuit
	W10039800	Guide, Use & Care	9	3380854	Bolt, Latch	19	3379375	Panel, Front Black
	677967	Do-It Yourself Manual	10	3369457	Lever, Latch Black		3379376	White
2	W10039600	Insert, Console Black		3372231	Black		8054178	Biscuit
	W10039610	White		3375062	Biscuit	20	9743581	Stainless Console (Includes Item 2)
	W10039620	Biscuit	11	3369325	Switch, (2)		W10072690	Black
3	8269366	Switch, 5 Button	12	3368955	Pin, Switch (2)		W10072700	White
4	3369529	Follower, Cam	13	8573183	Harness and Protector		W10072710	Biscuit
5	W10039480	Timer	14	3376405	Elbow, Harness	21	3379671	Shield, Control Cover
			15	3400892	Screw,		3373234	Bearing, Spring (2)
			16	8269526	Cover, Control			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INNER DOOR PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

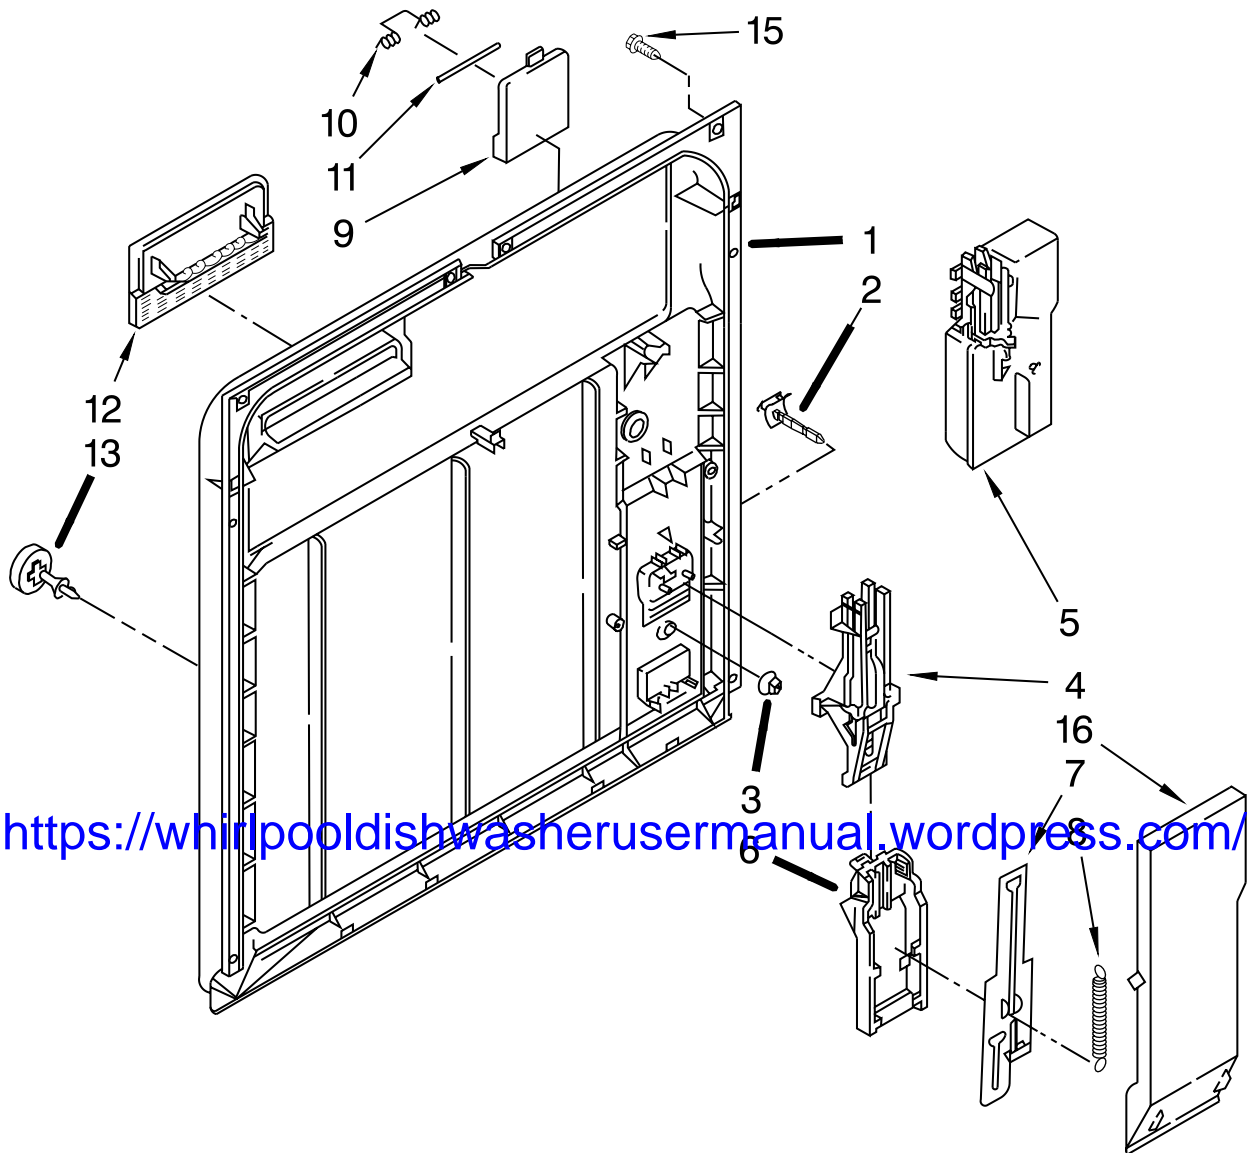


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Includes Items 2 & 3)	5	8052027	Wet Agent, Dispenser	9	3378138	Lid Assembly
2	3376066	Latch, Detergent Dispenser (Includes Item 3)	6	3369000	Draw Bar (Upper Dispenser)	10	8066018	Spring, Lid
3	3369061	Snap, Detergent Dispenser (Includes Item 2)	7	8066017	Draw Bar (Lower Dispenser)	11	3372028	Pin (Lid Hinge)
4	8519606	Actuator Assembly	8	3368999	Spring (Draw Bar)	12	3371710	Screen, Vent
						13	3378134	Cap, Wet Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

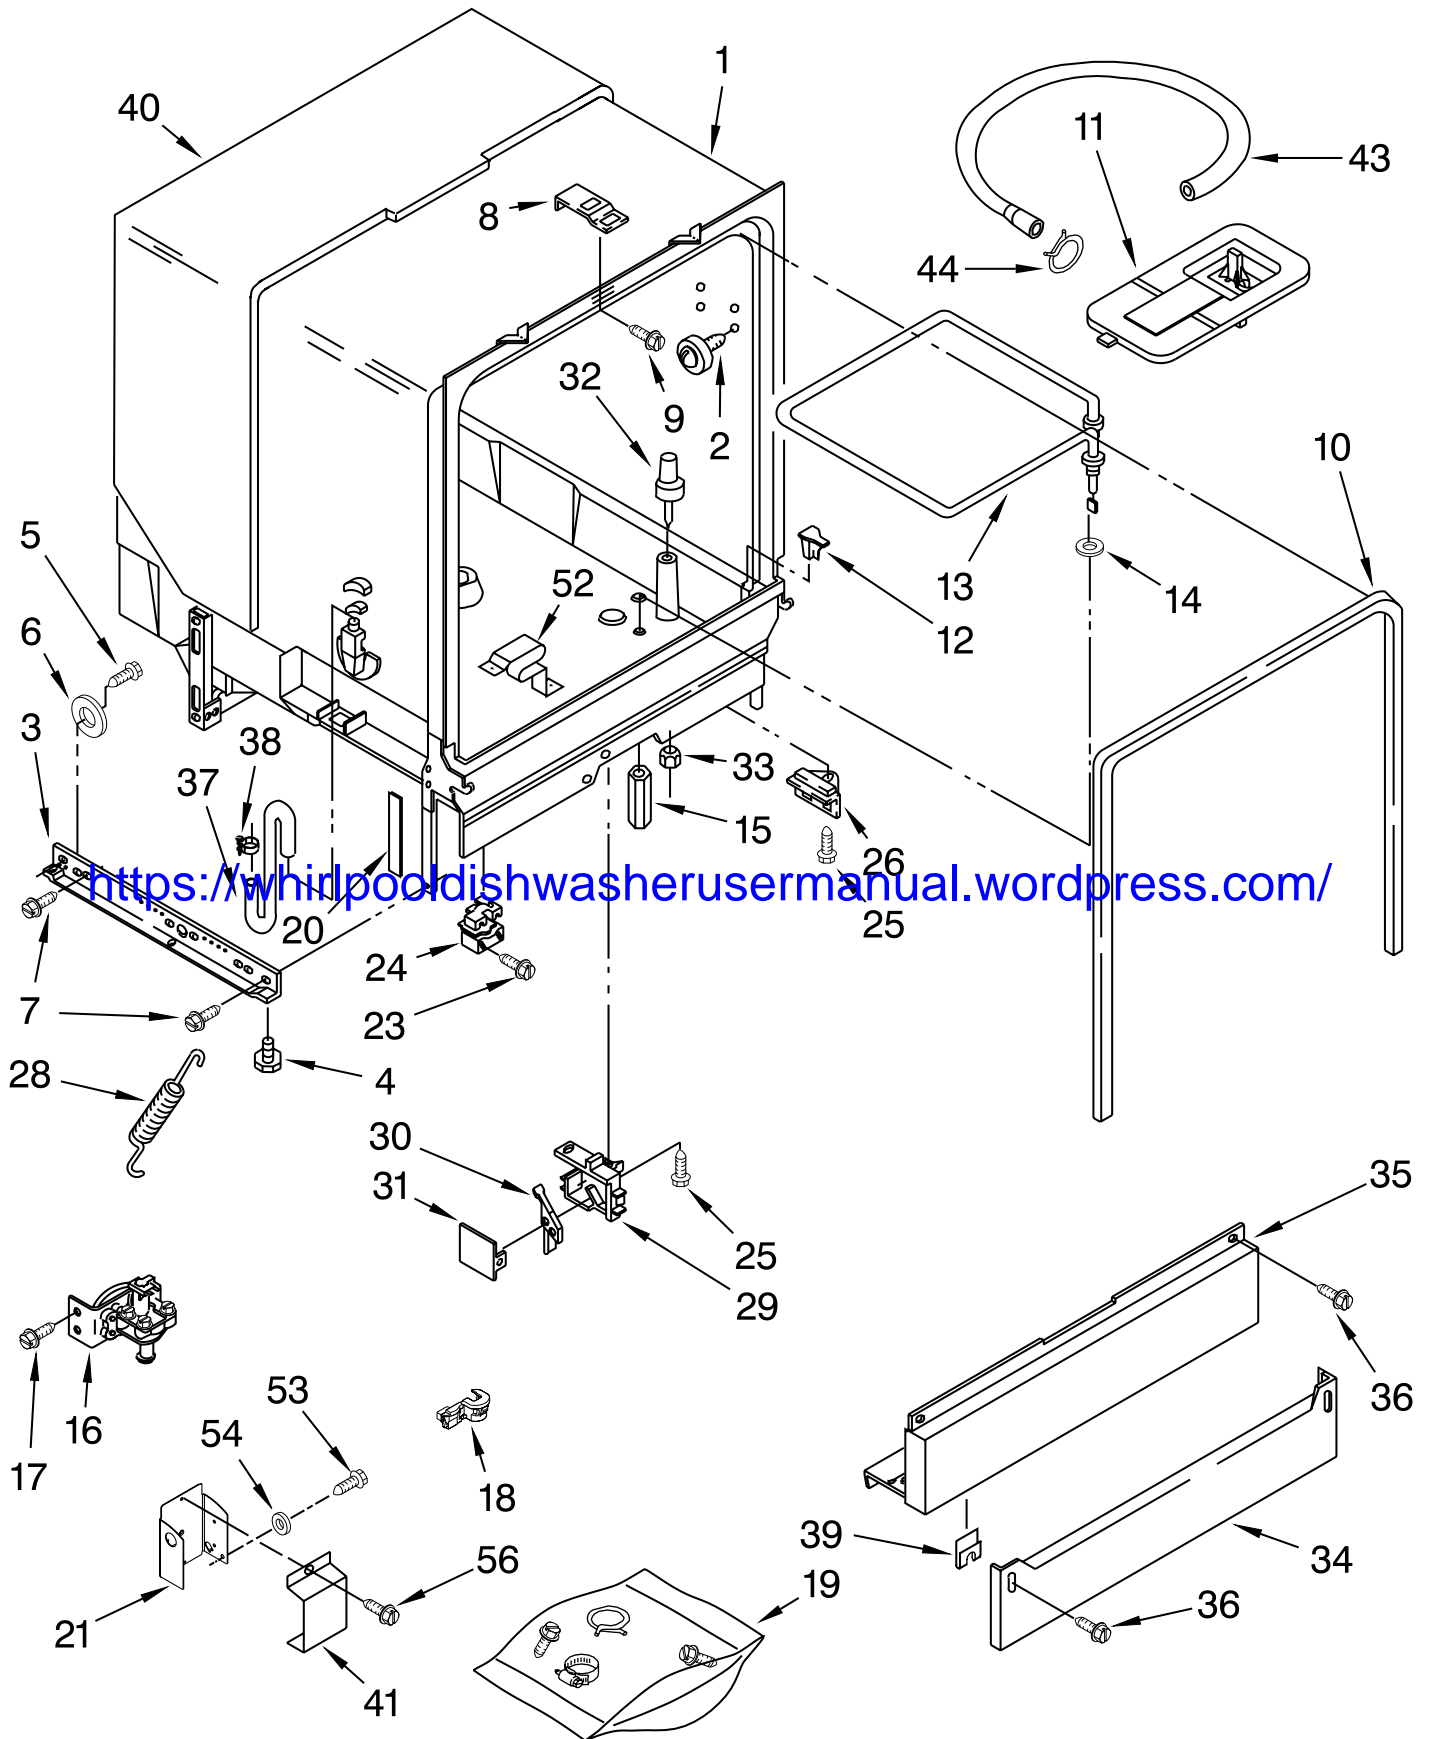

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533815	Tub and Support Assembly	19	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)	35		Panel, Access (Includes Item 39)
2	8528831	Tub, Wheel Assembly (8)					3379917	Black
3	3368933	Runner (2)	20	8052018	Pad, Friction		3379918	White
4	3374849	Leveler (2)	21	8573951	Terminal Box		8054179	Biscuit
5	3370389	Screw, Shoulder (2)	23	3370225	Screw		9744517	Stainless
6	302819	Wheel (2)	24	3369063	Relay	36	302868	Screw, 8-18 x 1/2 (4)
7	343641	Screw, 10-16 x 1/2 (4)	25	304231	Screw	37	3369414	Hose, Inlet
8	3378149	Plate, Latch	26	3368928	Fuse, Thermal	38	301958	Clamp
9	3374720	Screw	28	3379383	Spring, Door (2)	39	3378123	Clip, Grounding
10	3376927	Gasket	29	8318218	Housing, Float Switch	40	8573243	Sound Shield
11	3369322	Grate	30	3369067	Switch, Float	41	300068	Cover Assembly, Terminal Box
12	8528862	Deflector (2)	31	8318219	Cover, Switch Housing	43	3374077	Drain Hose
13	8519827	Heater	32	8519552	Float	44	356138	Hose Clamp
14	717273	Washer, Rubber (2)	33	717488	Nut	52	3379740	Support, Heater (3)
15	8268548	Nut (2) (Heater Terminal)	34		Panel, Toe	53	3400014	Screw
16	8283345	Water Valve		3368942	Black	54	3378128	Washer
17	304392	Screw, 8-18 x 1/2		9742861	White	56	3369138	Screw, 8-18
18	8573061	Strain Relief		8054181	Biscuit			

<https://whirlpooldishwasherusermanual.wordpress.com/>

# PUMP AND SPRAY ARM PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)


Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3400959	Clamp (2)
5	8531963	Support, Motor
6	3369032	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	8268870	Spray Arm, Assembly Lower
10	8268883	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371746	Bearing
15	3371744	Shoulder Screw
16	8520839	Collector Assembly w/Check Valve
17	8520841	Funnel
18	8520843	Seal
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	8520842	Hose, Collector
23	3371634	Washer, Curved
24	8534039	Screw 10-16, Hi-Lo (4)

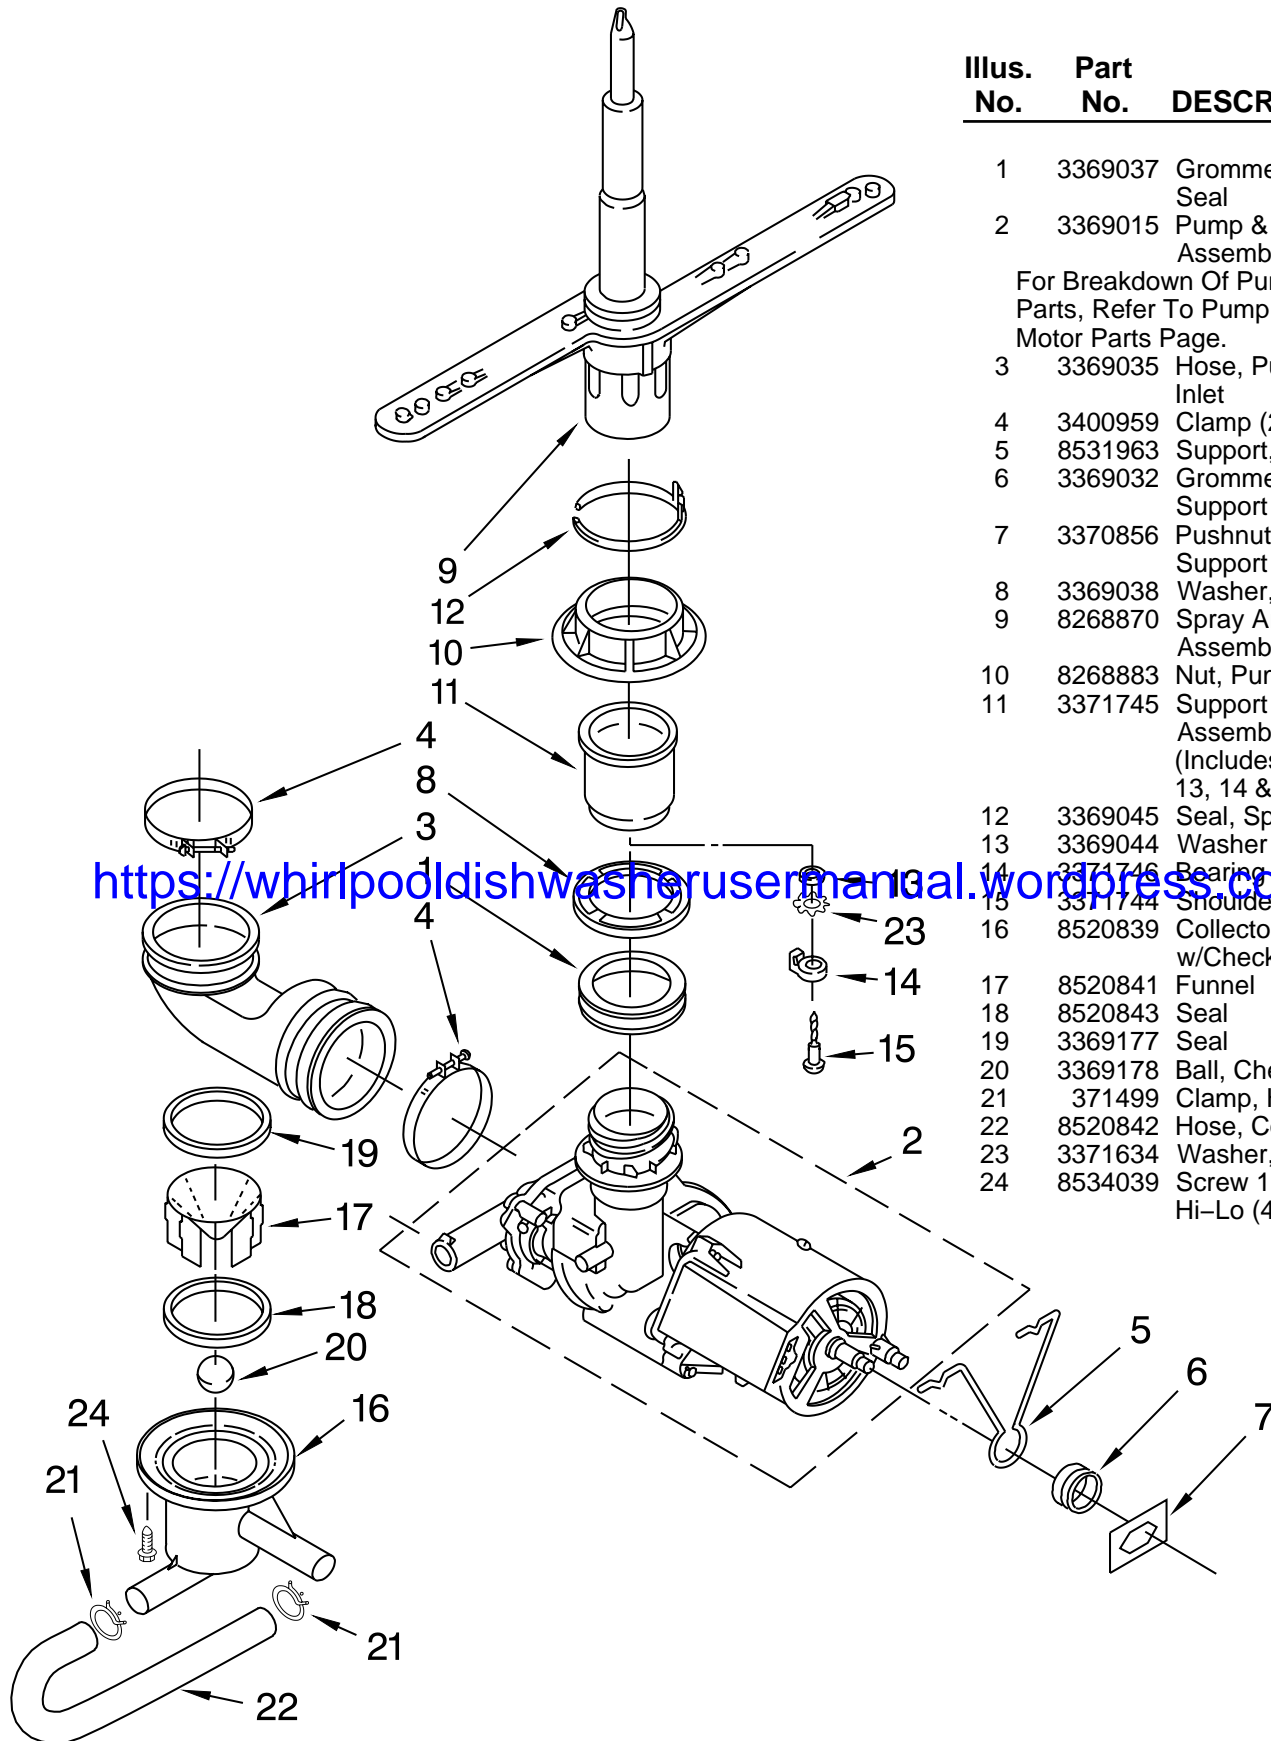

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# PUMP AND MOTOR PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

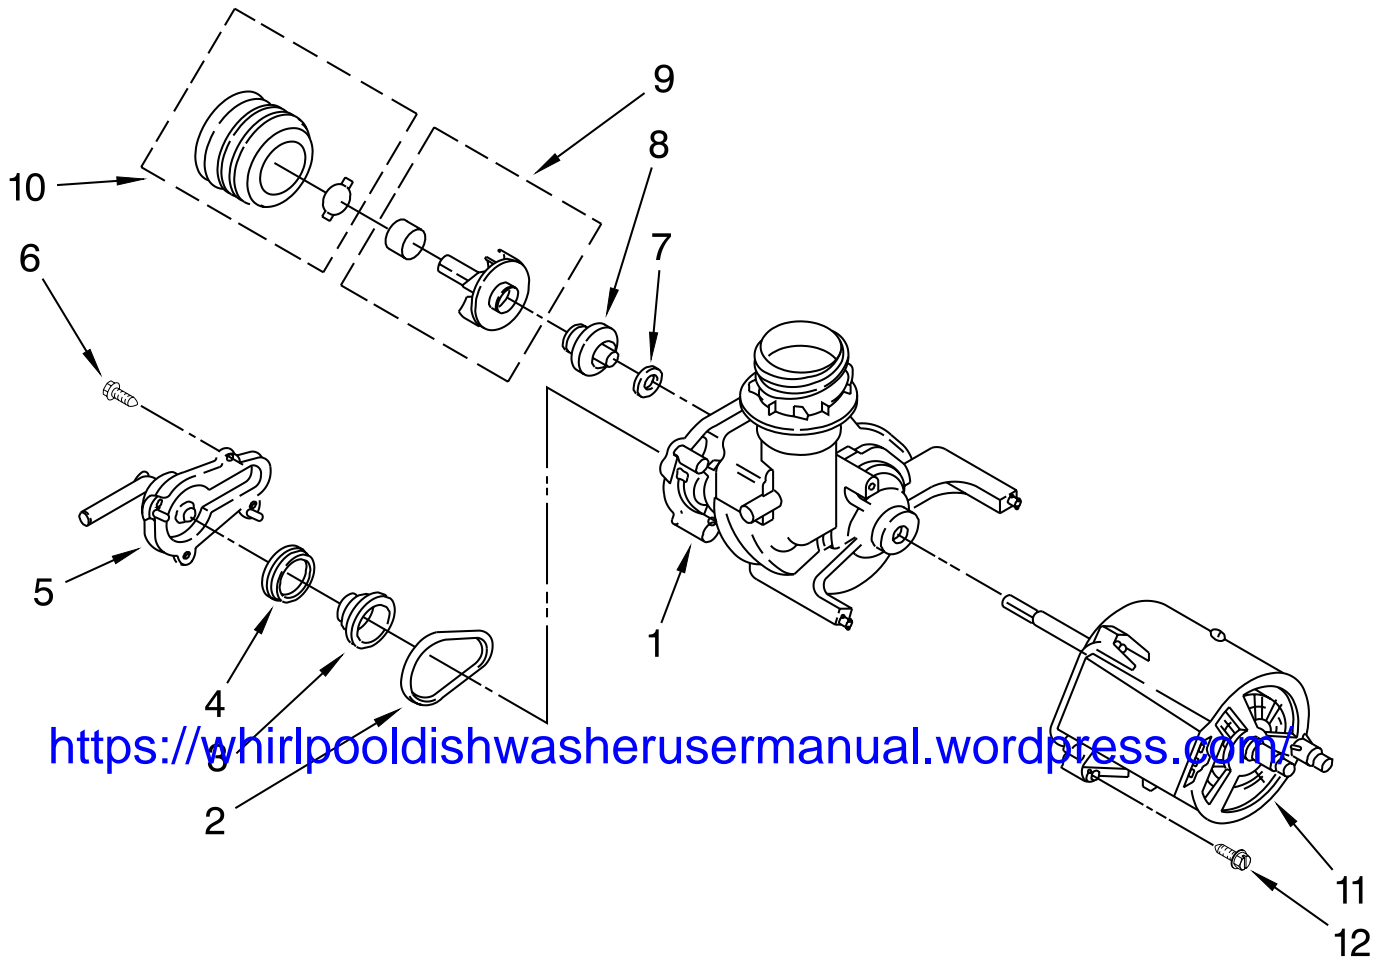


Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DISHRACK PARTS

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

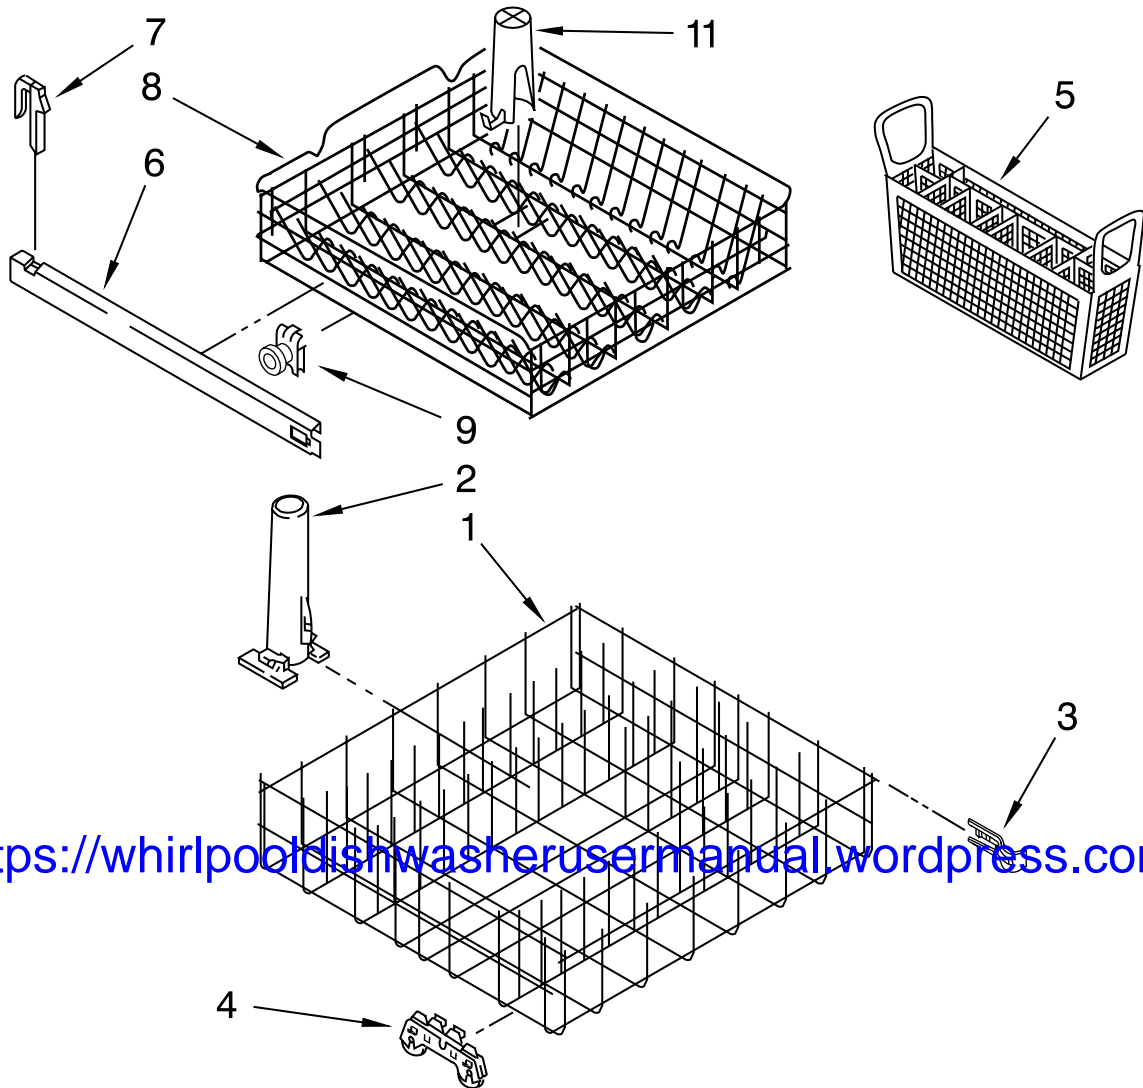

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	8539225	Dishrack, Lower
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8565920	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: DU850SWPB3, DU850SWPQ3, DU850SWPT3, DU850SWPS3  
(Black) (White) (Biscuit) (Stainless)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>	<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>	<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
<b><u>ACCESSORIES</u></b>			<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>			<b><u>ANTI-TIP KIT</u></b>		
		Side Panel Kits		72017	White		4378968	Floor Mounting Kit
	4378867	White		72032	Black			
	4378868	Black		4392899	Biscuit			
	675788	Biscuit						
	4378869	Almond						
Custom Trim & Panel Kits			<b><u>PAINT, PRESSURIZED SPRAY</u></b>			<b><u>DISHRACK REPAIR</u></b>		
	675775	Black			<b><u>(12 oz.)</u></b>			Tip Tine Repair Kit
	675776	White		350930	White			(Enough for Two
	675809	Biscuit		285006	Superior Black			Complete Dishracks)
Moisture Barrier Kit				4392901	Biscuit		4396838	White
	4396277	Kit					4396840	Grey
Drain Hose							4396854	Silver Atlantis
	3385556	12 Ft.						Vinyl Touch-Up (4 oz.)
Heavy Duty Spring Kit							676453	White
	4318050	Spring		799344	White (Uncut)		676455	Grey
				4392900	Biscuit		4396853	Silver Atlantis
<b><u>POWER CORD KIT</u></b>								
				4317824	Power Cord Kit (Includes Power Cord & Misc. Hardware)			

<https://whirlpooldishwasherusermanual.wordpress.com/>