




FRAME AND CONSOLE PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

UNDERCOUNTER
DISHWASHER

(Black) (White) (Biscuit) (Stainless)

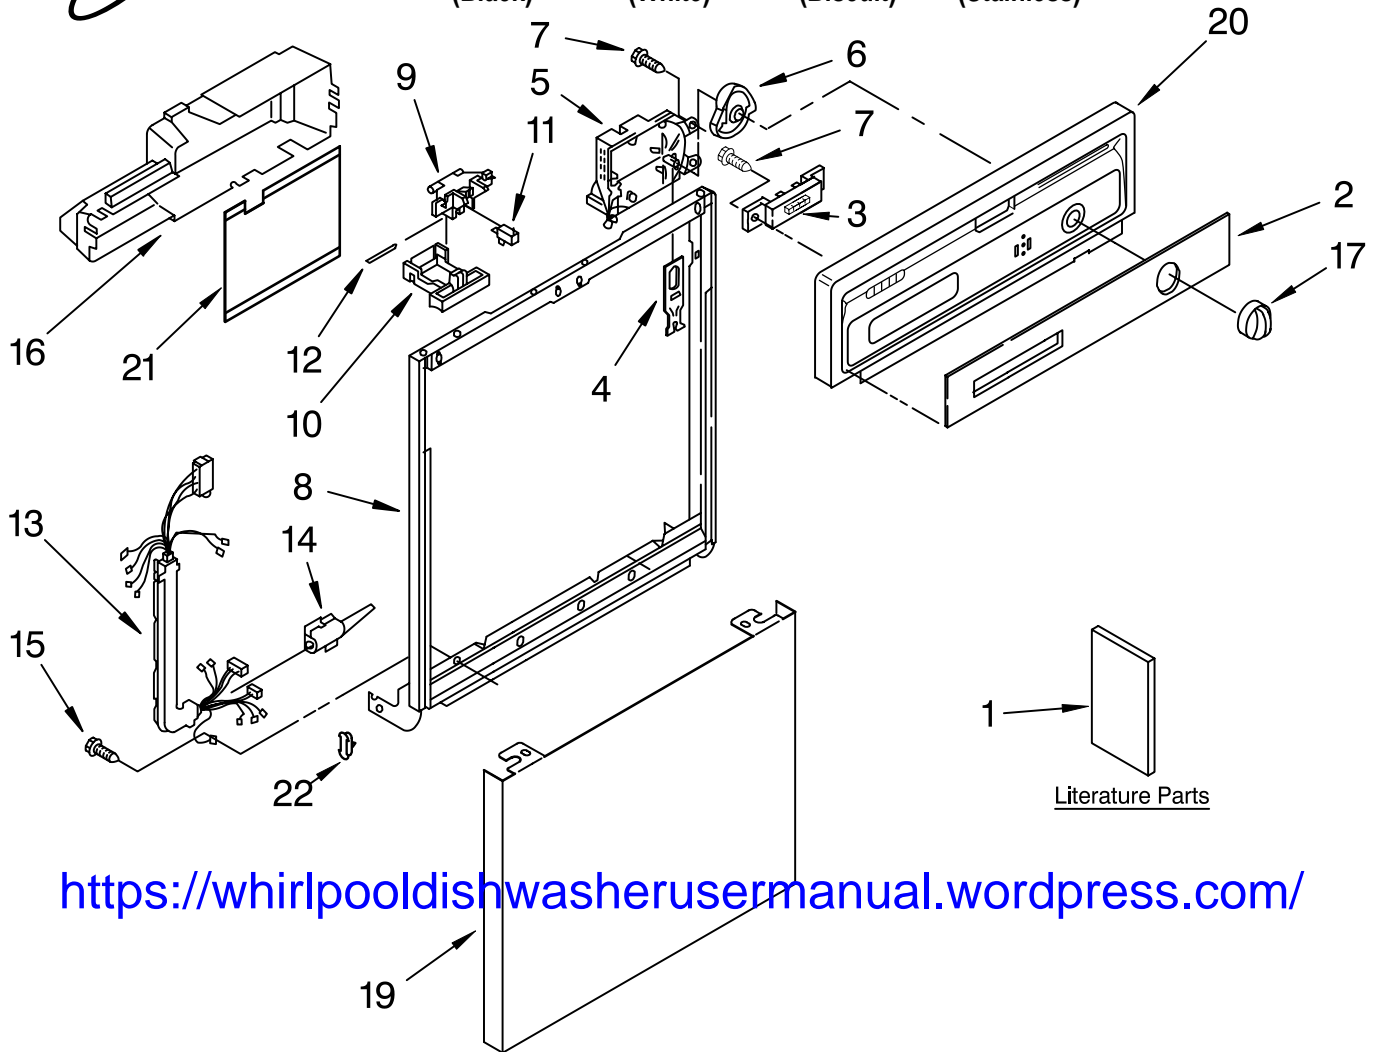


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8535436	Literature Parts	5	8535368	Timer	17		Knob, Timer
	3367007	Instructions, Installation	6	8271510	Cam		8275308	Black
		(Supplement)	7	304231	Screw, 8-18 x 1/2 (5)		8275309	White
		(Locating Your Water Supply)	8		Door Frame		8275310	Biscuit
	8535639	Guide, Energy	9	9743028	Black	19		Panel, Front
	8535037	Guide, Use & Care	10	3380854	Bolt, Latch		3379375	Black
	3385497	Diagram, Wiring	11	3369457	Black		3379376	White
	677967	Do-It Yourself Manual	12	3372231	White		8054178	Biscuit
2		Insert, Console	13	3375062	Biscuit	20		Stainless Console (Includes Item 2)
	8535383	Black	14	3369325	Switch, (2)		8535328	Black
	8535384	White	15	3368955	Pin, Switch (2)		8535329	White
	8575664	Biscuit	16	8573183	Harness and Protector		8575346	Biscuit
3	8269366	Switch, 5 Button	17	3376405	Elbow, Harness	21	3379671	Shield, Control Cover
4	3369529	Follower, Cam	18	3400892	Screw,	22	3373234	Bearing, Spring (2)
			19	8269526	Cover, Control			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INNER DOOR PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1
(Black) (White) (Biscuit) (Stainless)

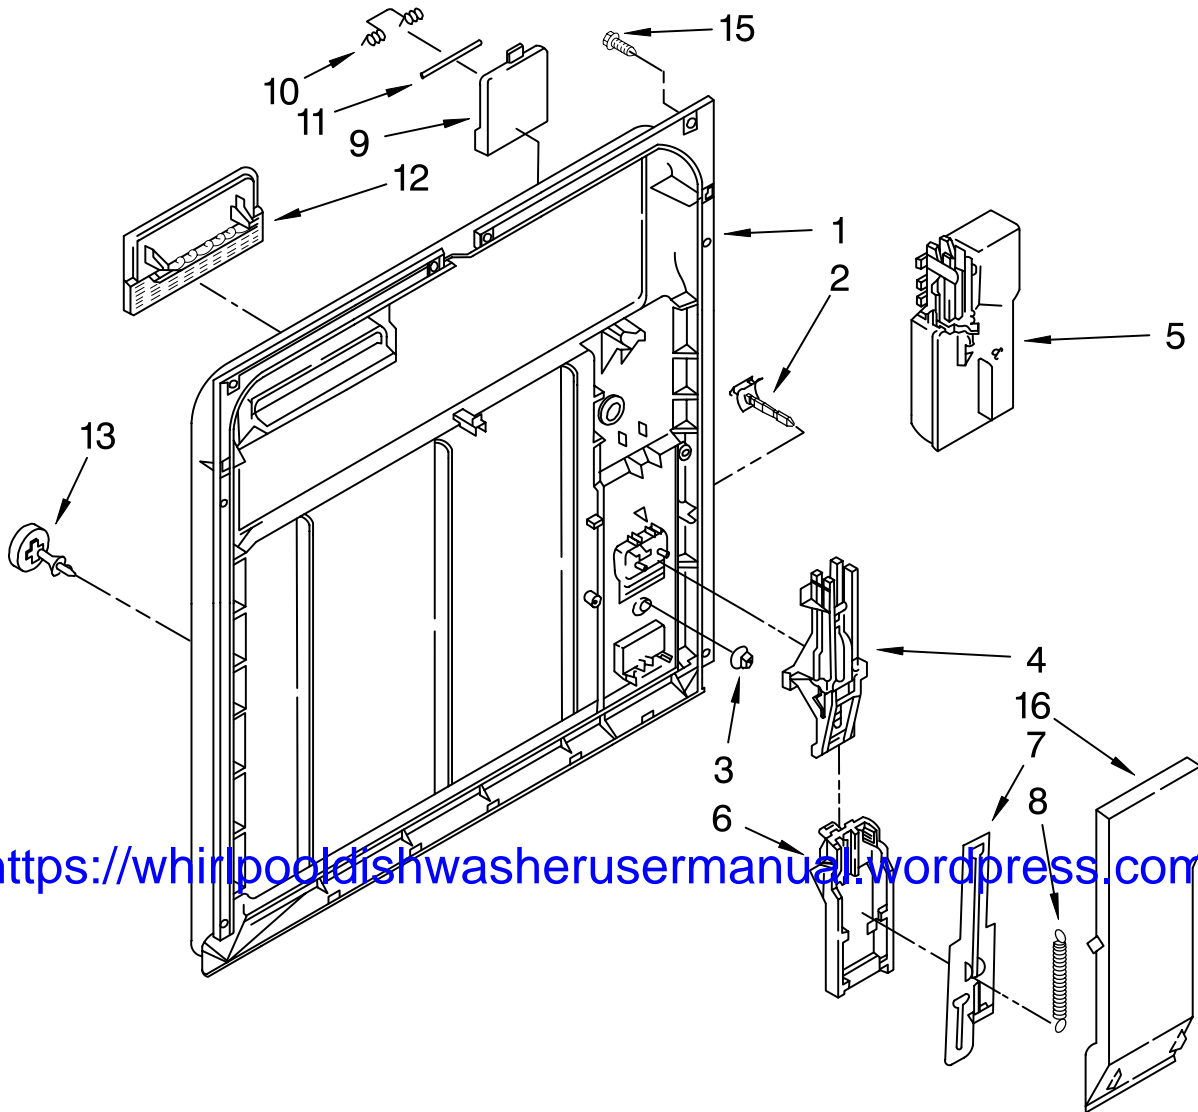

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Includes Items 2 & 3)	4	8519606	Actuator Assembly	9	3378138	Lid Assembly
2	3376066	Latch, Detergent Dispenser (Includes Item 3)	5	8052027	Wet Agent, Dispenser	10	8066018	Spring, Lid
3	3369061	Snap, Detergent Dispenser (Includes Item 2)	6	3369000	Draw Bar (Upper Dispenser)	11	3372028	Pin (Lid Hinge)
			7	8066017	Draw Bar (Lower Dispenser)	12	3371710	Screen, Vent
			8	3368999	Spring (Draw Bar)	13	3378134	Cap, Wet Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS


For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

(Black)

(White)

(Biscuit)

(Stainless)

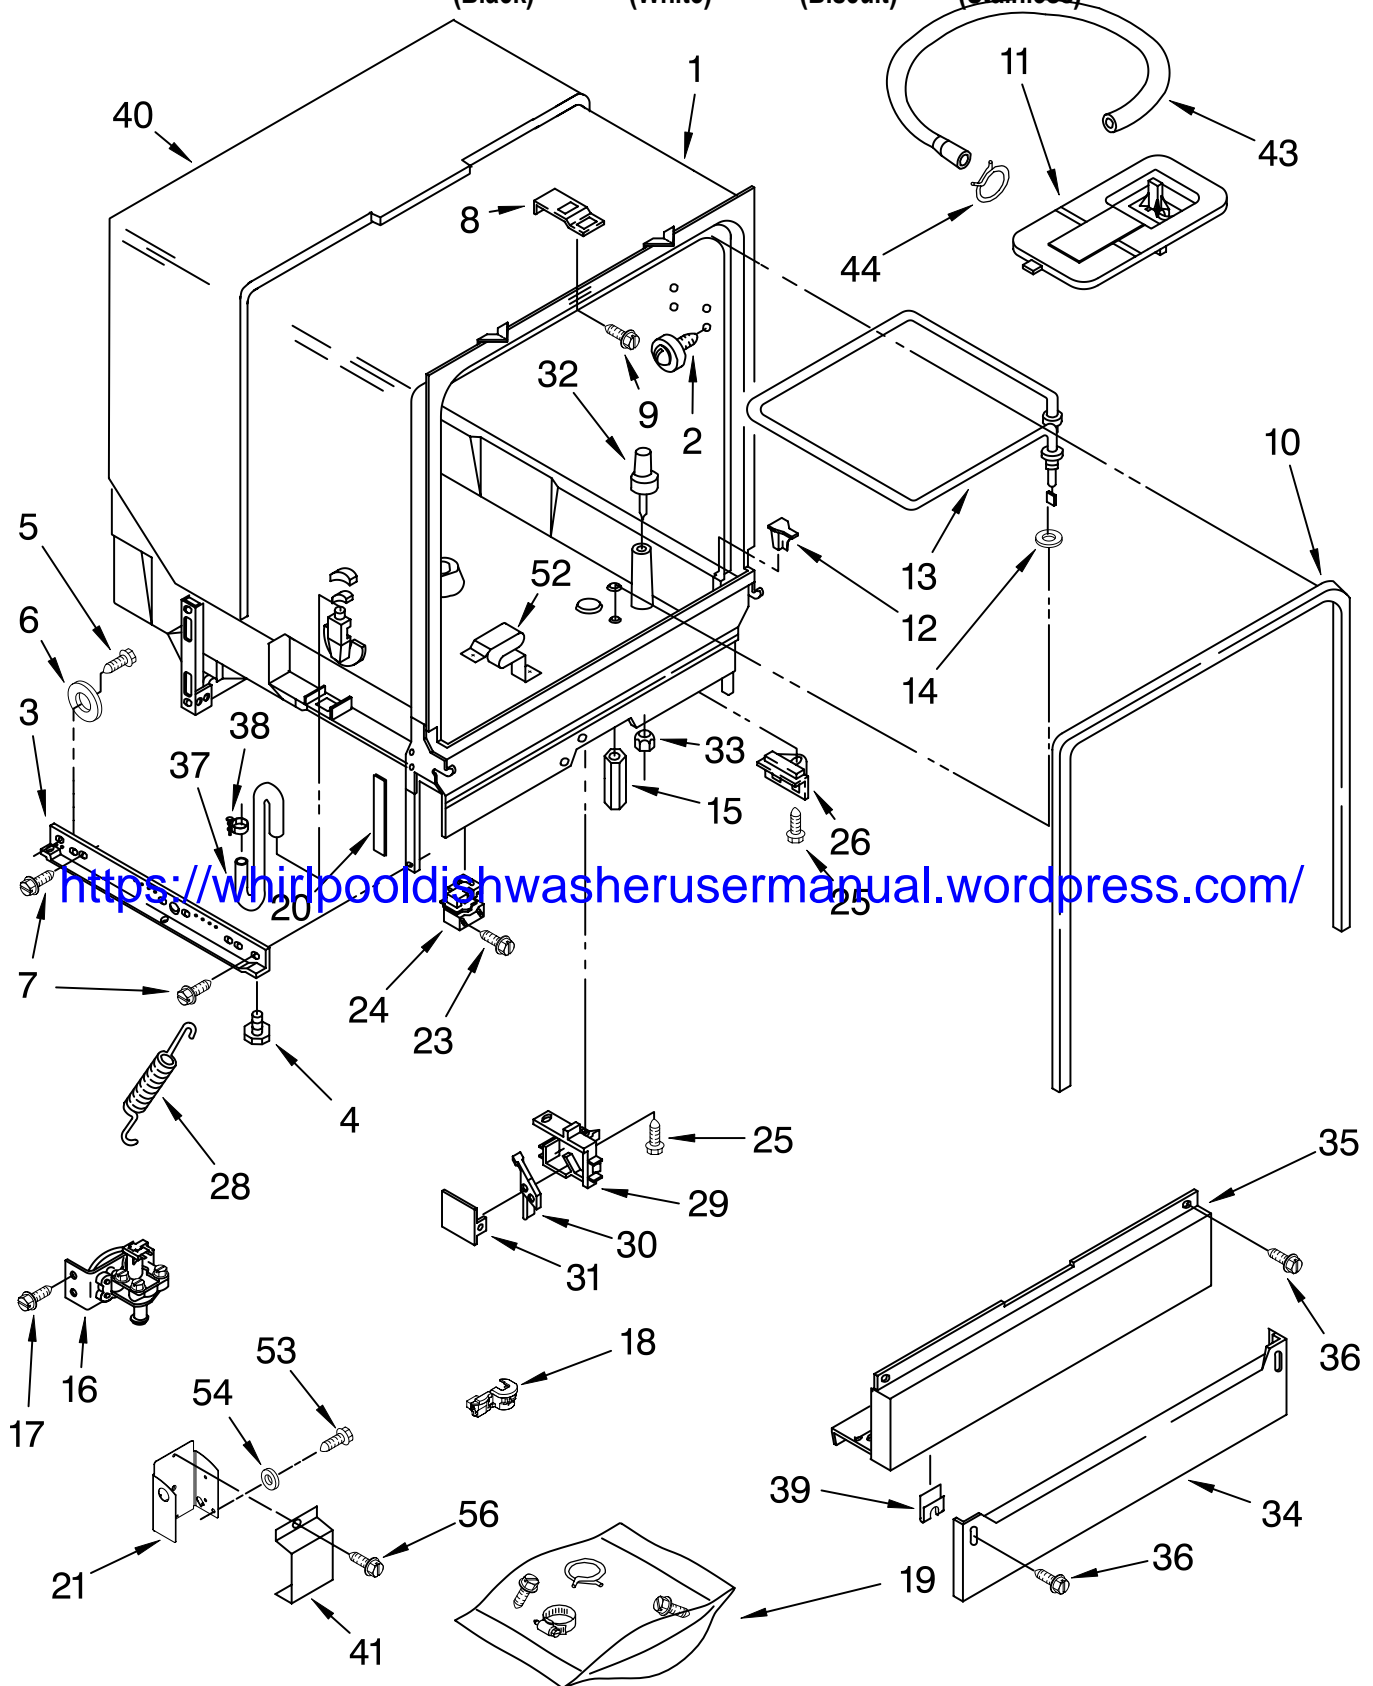

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1
 (Black) (White) (Biscuit) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533815	Tub and Support Assembly	19	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)	35		Panel, Access (Includes Item 39)
2	8528831	Tub, Wheel Assembly (8)					3379917	Black
3	3368933	Runner (2)	20	8052018	Pad, Friction		3379918	White
4	3374849	Leveler (2)	21	8573951	Terminal Box		8054179	Biscuit
5	3370389	Screw, Shoulder (2)	23	3370225	Screw		9744517	Stainless
6	302819	Wheel (2)	24	3369063	Relay	36	302868	Screw, 8-18 x 1/2 (4)
7	343641	Screw, 10-16 x 1/2 (4)	25	304231	Screw	37	3369414	Hose, Inlet
8	3378149	Plate, Latch	26	3368928	Fuse, Thermal	38	301958	Clamp
9	3374720	Screw	28	3379383	Spring, Door (2)	39	3378123	Clip, Grounding
10	3376927	Gasket	29	8318218	Housing, Float Switch	40	8573243	Sound Shield
11	3369322	Grate	30	3369067	Switch, Float	41	300068	Cover Assembly, Terminal Box
12	8528862	Deflector (2)	31	8318219	Cover, Switch Housing	43	3374077	Drain Hose
13	8519827	Heater	32	8519552	Float	44	356138	Hose Clamp
14	717273	Washer, Rubber (2)	33	717488	Nut	52	3379740	Support, Heater (3)
15	8268548	Nut (2) (Heater Terminal)	34		Panel, Toe	53	3400014	Screw
16	8283345	Water Valve		3368942	Black	54	3378128	Washer
17	304392	Screw, 8-18 x 1/2		9742861	White	56	3369138	Screw, 8-18
18	8573061	Strain Relief		8054181	Biscuit			

<https://whirlpooldishwasherusermanual.wordpress.com/>

PUMP AND SPRAY ARM PARTS


For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

(Black)

(White)

(Biscuit)

(Stainless)

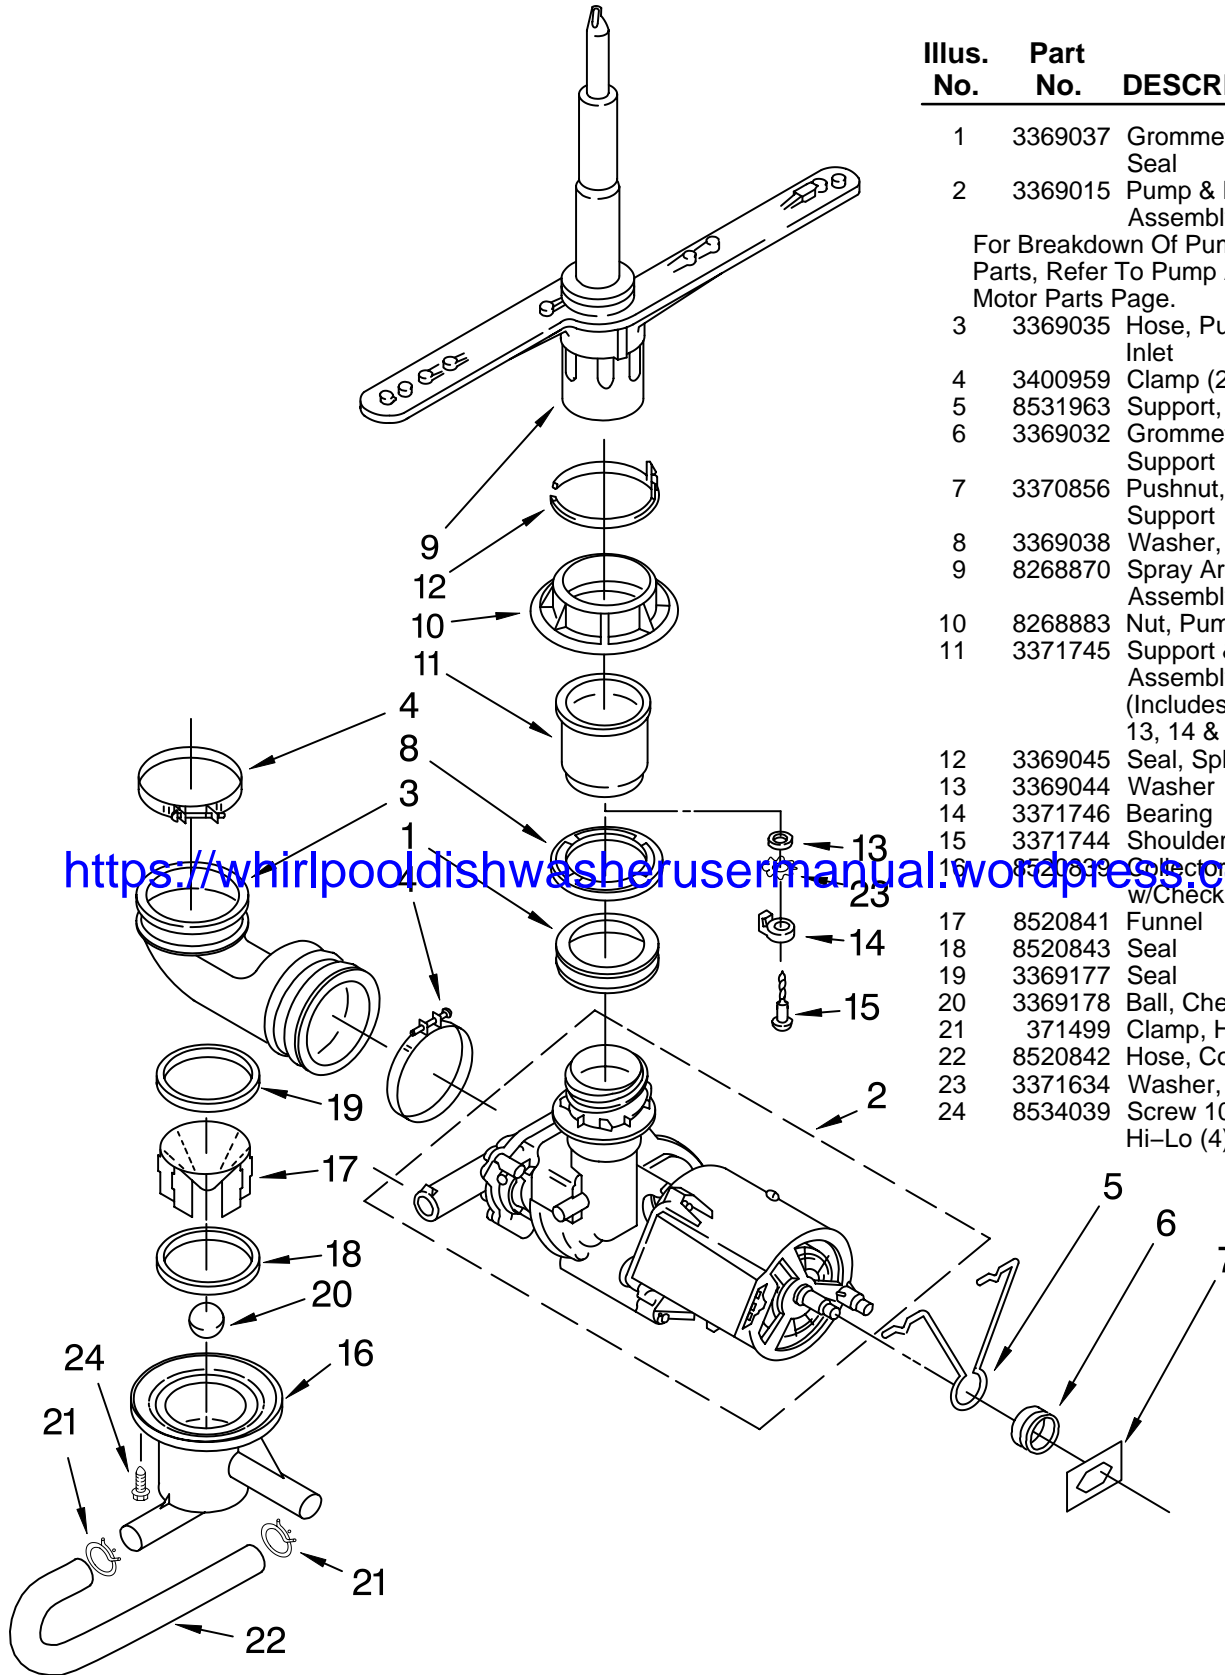


Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3400959	Clamp (2)
5	8531963	Support, Motor
6	3369032	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	8268870	Spray Arm, Assembly Lower
10	8268883	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371746	Bearing
15	3371744	Shoulder Screw
16	8520839	Collector Assembly w/Check Valve
17	8520841	Funnel
18	8520843	Seal
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	8520842	Hose, Collector
23	3371634	Washer, Curved
24	8534039	Screw 10-16, Hi-Lo (4)

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND MOTOR PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1
 (Black) (White) (Biscuit) (Stainless)

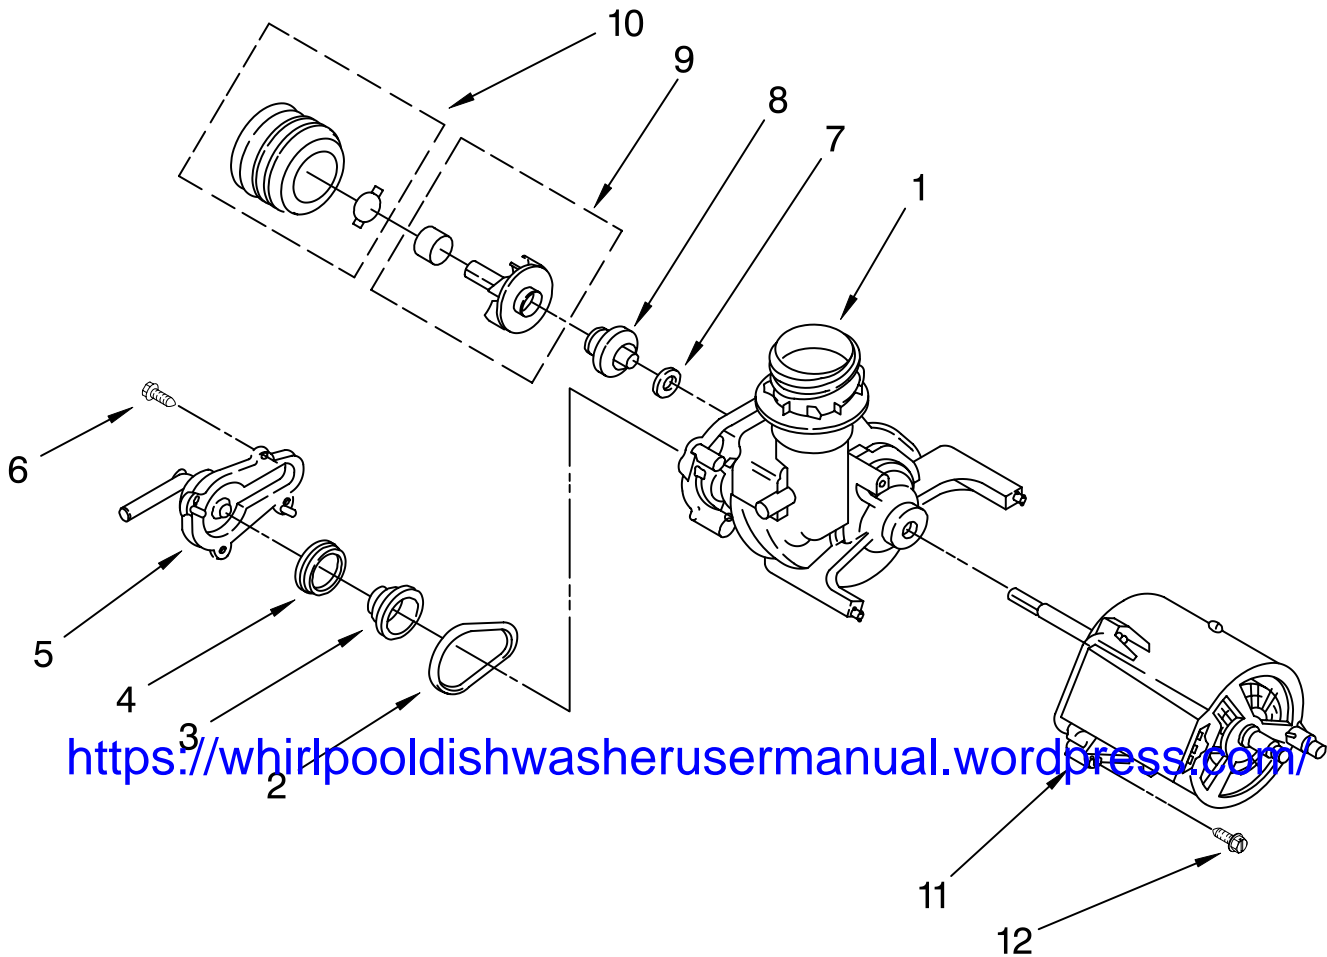


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DISHRACK PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1
 (Black) (White) (Biscuit) (Stainless)

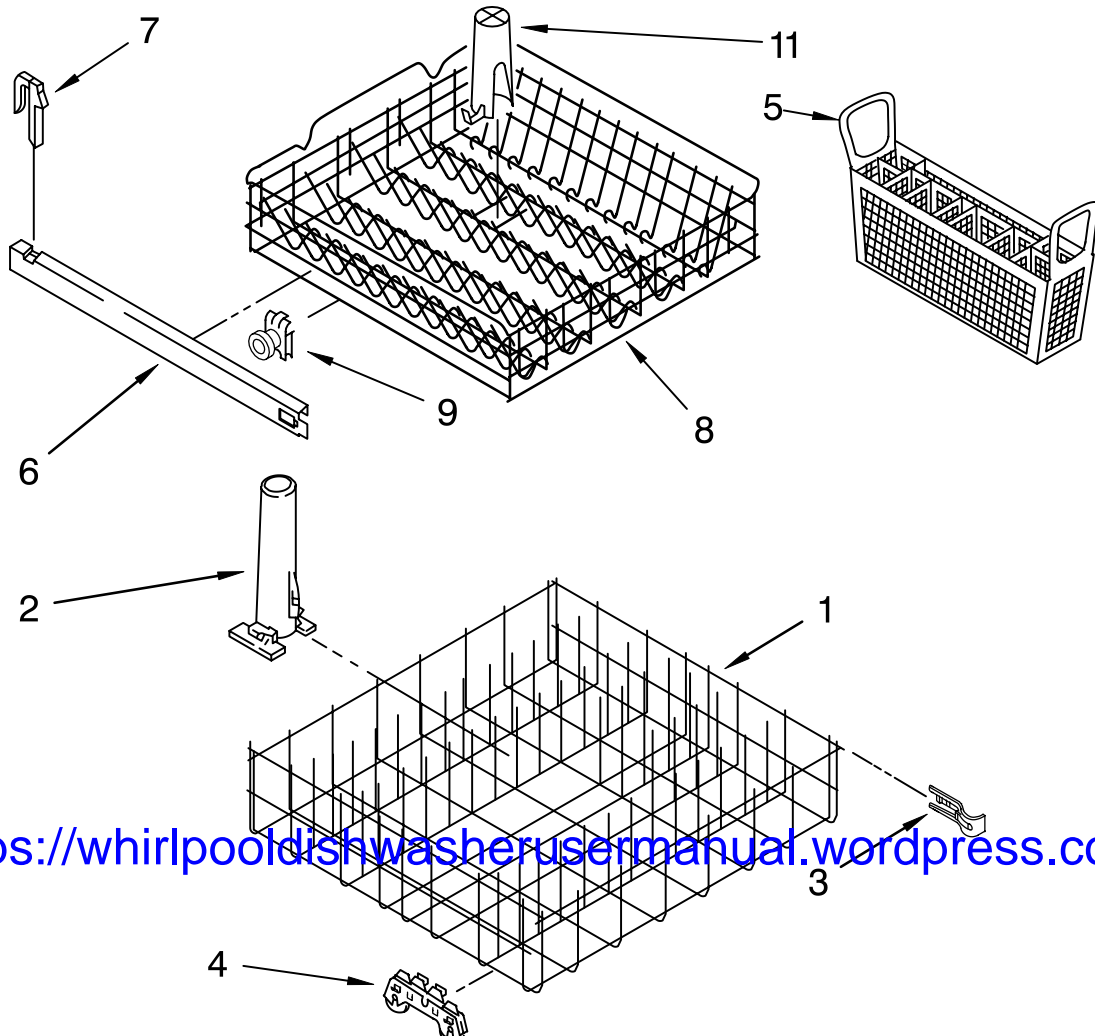

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	8539225	Dishrack, Lower
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8565920	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1
 (Black) (White) (Biscuit) (Stainless)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
<div style="display: flex; justify-content: space-between;"> <div style="width: 30%;"> <p><u>ACCESSORIES</u></p> <p>Side Panel Kits 4378867 White 4378868 Black 675788 Biscuit 4378869 Almond</p> <p>Custom Trim & Panel Kits 675775 Black 675776 White 675809 Biscuit</p> <p>Moisture Barrier Kit 4396277 Kit</p> <p>Drain Hose 3385556 12 Ft.</p> <p>Heavy Duty Spring Kit 4318050 Spring</p> </div> <div style="width: 35%;"> <p><u>PAINT, TOUCH-UP (1/2oz.)</u></p> <p>72017 White 72032 Black 4392899 Biscuit</p> <p><u>PAINT, PRESSURIZED SPRAY (12 oz.)</u></p> <p>350930 White 285006 Superior Black 4392901 Biscuit</p> <p><u>PAINT, TOUCH-UP (1 qt.)</u></p> <p>799344 White (Uncut) 4392900 Biscuit</p> <p><u>POWER CORD KIT</u></p> <p>4317824 Power Cord Kit (Includes Power Cord & Misc. Hardware)</p> </div> <div style="width: 30%;"> <p><u>ANTI-TIP KIT</u></p> <p>4378968 Floor Mounting Kit</p> <p><u>DISHRACK REPAIR</u></p> <p>Tip Tine Repair Kit (Enough for Two Complete Dishracks)</p> <p>4396838 White 4396840 Grey 4396854 Silver Atlantis</p> <p>Vinyl Touch-Up (4 oz.)</p> <p>676453 White 676455 Grey 4396853 Silver Atlantis</p> </div> </div>		

<https://whirlpooldishwasherusermanual.wordpress.com/>