




# FRAME AND CONSOLE PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

UNDERCOUNTER  
DISHWASHER

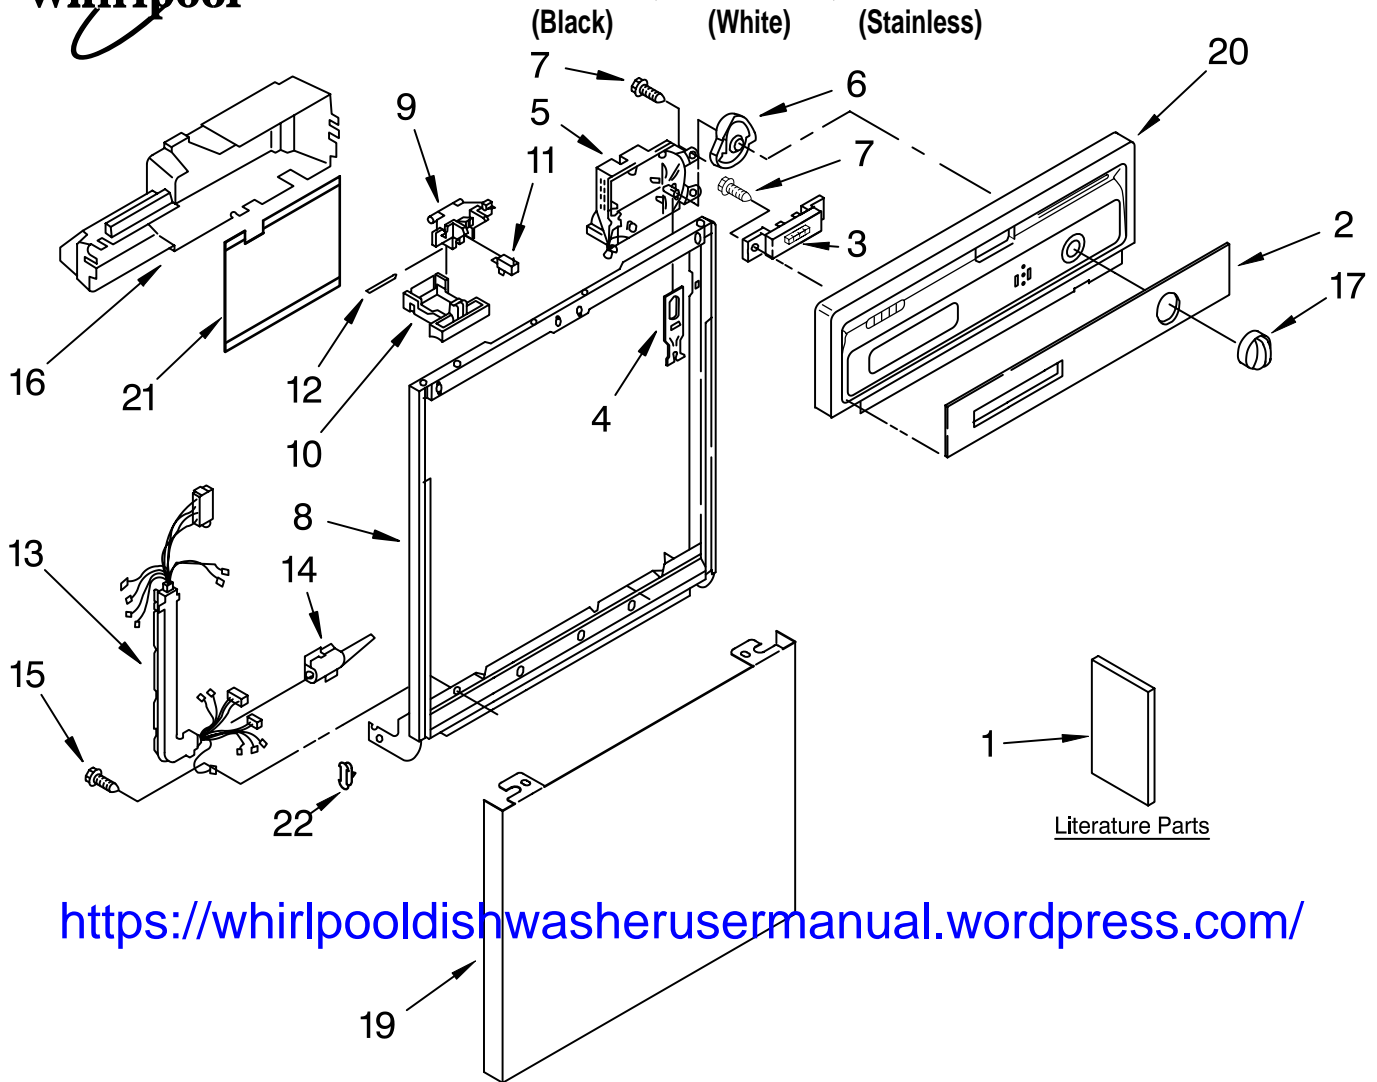

<https://whirlpooldishwasherusermanual.wordpress.com/>


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8535436	Literature Parts Instructions, Installation	4	3369529	Follower, Cam	14	3376405	Elbow, Harness
	3367007	Instructions, Installation (Supplement) (Locating Your Water Supply)	5	8535368	Timer	15	3400892	Screw,
	8535421	Guide, Energy	6	8271510	Cam	16	8269526	Cover, Control
	8535037	Guide, Use & Care	7	304231	Screw, 8-18 x 1/2	17		Knob, Timer
	3385497	Diagram, Wiring	8	9743028	Door Frame		8275308	Black
	677967	Do-It Yourself Manual	9	3380854	Bolt, Latch		8275309	White
2	8535383	Insert, Console	10	3369457	Lever, Latch	19	3379375	Panel, Front
	8535384	Black		3372231	Black		3379376	Black
	8269366	White	11	3369325	White		3379376	White
3	8269366	Switch, 5 Button	12	3368955	Switch, (2)		9743581	Stainless
			13	8275123	Pin, Switch (2)	20		Console (Includes Item 2)
					Harness and Protector		8535328	Black
							8535329	White
						21	3379671	Shield, Control Cover
						22	3373234	Bearing, Spring (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INNER DOOR PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

(Black) (White) (Stainless)

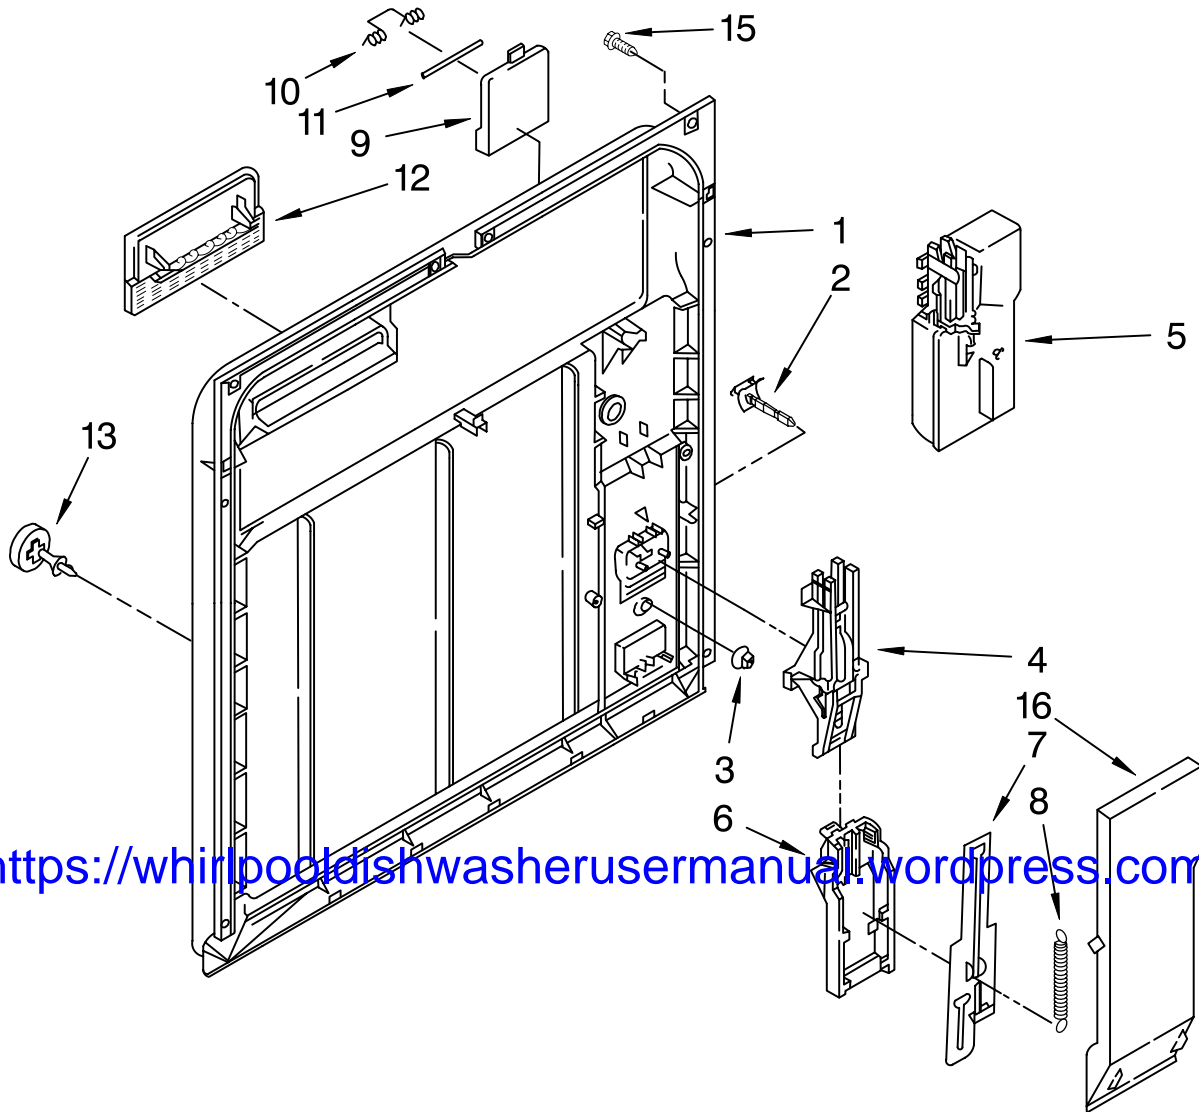

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Includes Items 2 & 3)	4	8519606	Actuator Assembly	8	3368999	Spring (Draw Bar)
2	3376066	Latch, Detergent Dispenser (Includes Item 3)	5	8052027	Wet Agent, Dispenser	9	3385001	Lid Assembly
3	3369061	Snap, Detergent Dispenser (Includes Item 2)	6	3369000	Draw Bar (Upper Dispenser)	10	8066018	Spring, Lid
			7	8066017	Draw Bar (Lower Dispenser)	11	3372028	Pin (Lid Hinge)
						12	3371710	Screen, Vent
						13	3378134	Cap, Wet Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# TUB ASSEMBLY PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

(Black)

(White)

(Stainless)

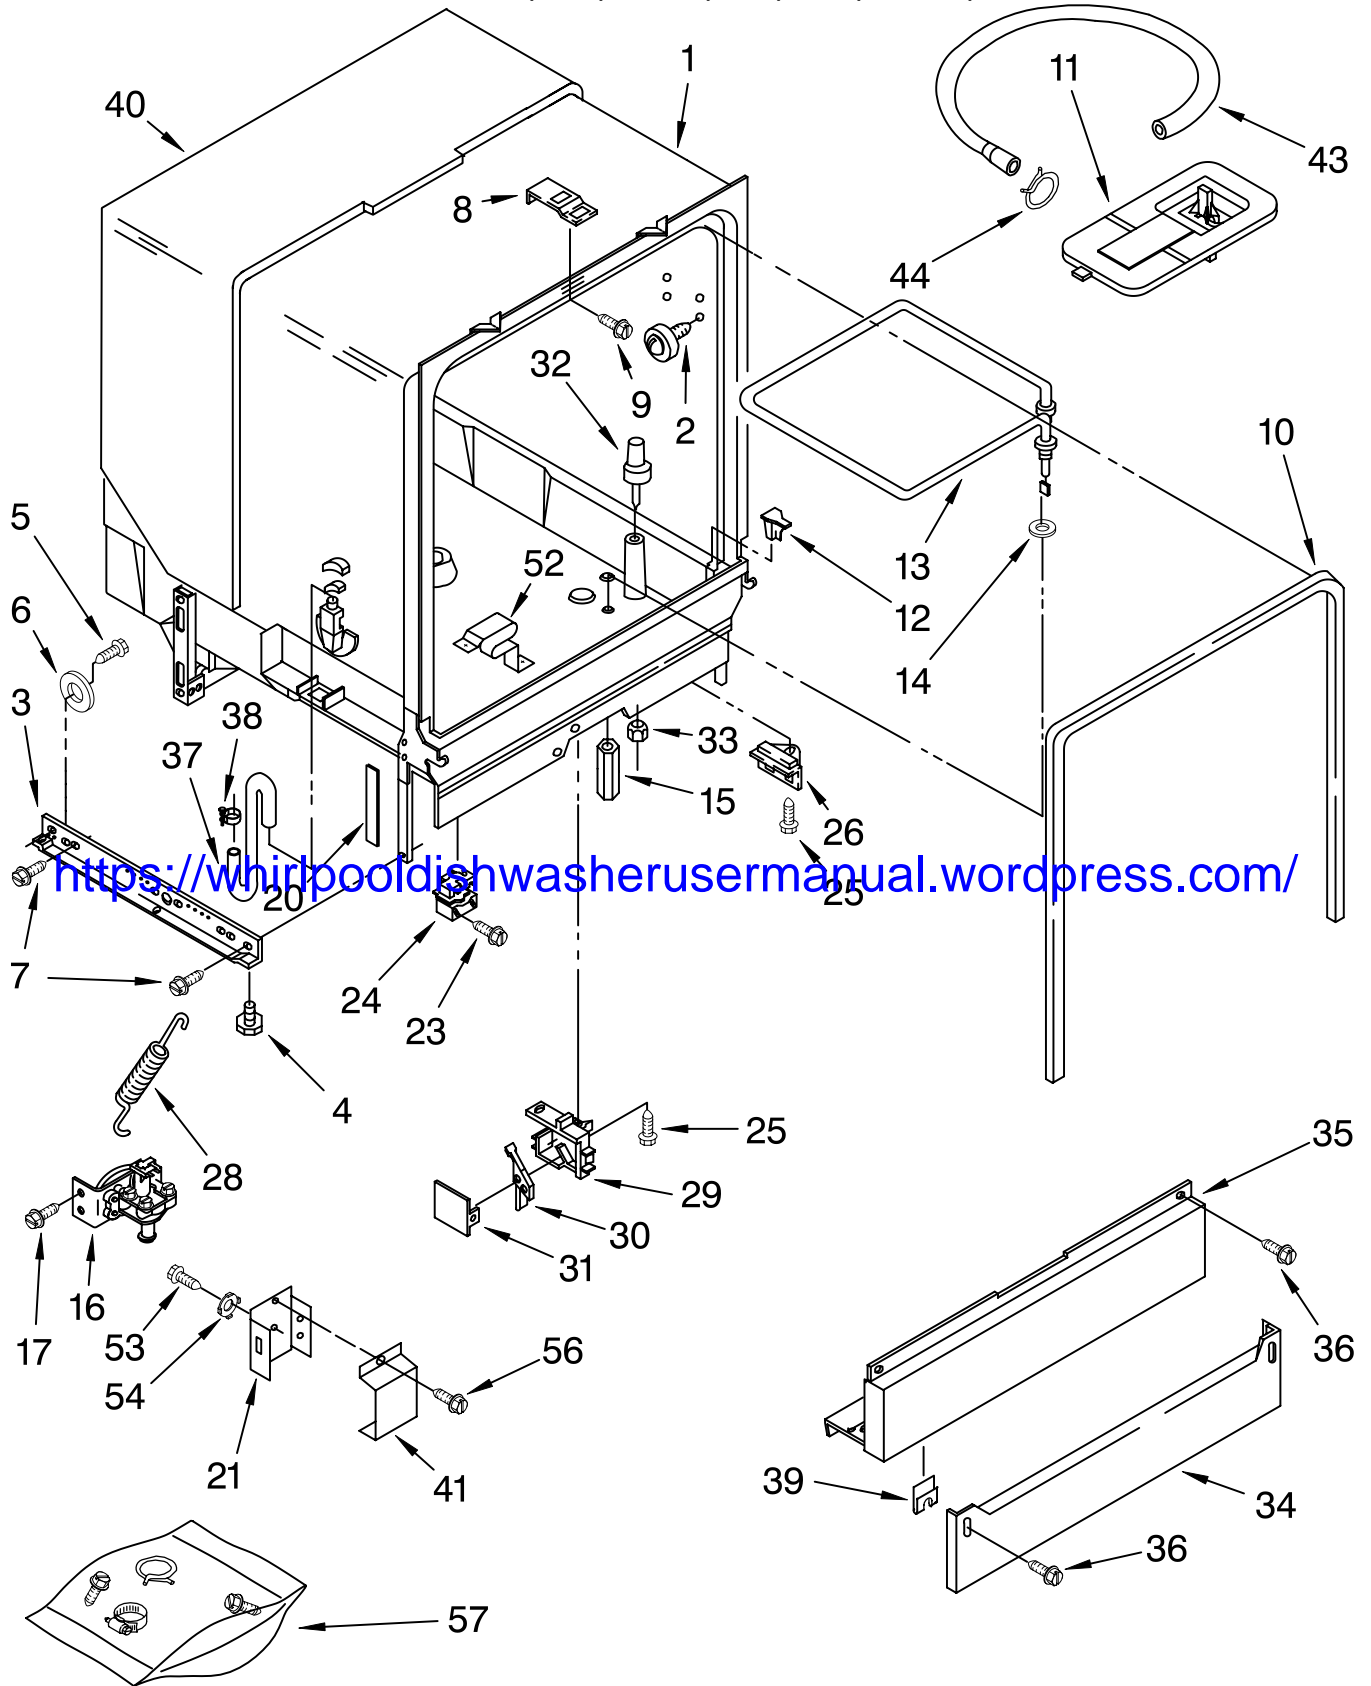

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533815	Tub and Support Assembly	17	304392	Screw, 8-18 x 1/2	35		Panel, Access (Includes Item 39)
2	8528831	Tub, Wheel Assembly (8)	20	8052018	Pad, Friction		3379917	Black
3	3368933	Runner (2)	21	8529303	Terminal Box		3379918	White
4	3374849	Leveler (2)	23	3370225	Screw		9744517	Stainless
5	3370389	Screw, Shoulder (2)	24	3369063	Relay	36	302868	Screw, 8-18 x 1/2 (4)
6	302819	Wheel (2)	25	304231	Screw	37	3369414	Hose, Inlet
7	343641	Screw, 10-16 x 1/2 (4)	26	3368928	Fuse, Thermal	38	371505	Clamp
8	3378149	Plate, Latch	28	3379383	Spring, Door (2)	39	3378123	Clip, Grounding
9	3374720	Screw	29	8318218	Housing, Float Switch	40	8531031	Sound Shield
10	3376927	Gasket	30	3369067	Switch, Float	41	300068	Cover Assembly, Terminal Box
11	3369322	Grate	31	8318219	Cover, Switch Housing	43	3374077	Drain Hose
12	8528862	Deflector (2)	32	8519552	Float	44	356138	Hose Clamp
13	8519827	Heater	33	717488	Nut	52	3379740	Support, Heater (3)
14	717273	Washer, Rubber (2)	34		Panel, Toe	53	3400014	Screw
15	8268548	Nut (2) (Heater Terminal)		3368942	Black	54	3378128	Washer
16	8283345	Water Valve		9742861	White	56	3369138	Screw, 8-18
						57	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# PUMP AND SPRAY ARM PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

(Black)

(White)

(Stainless)

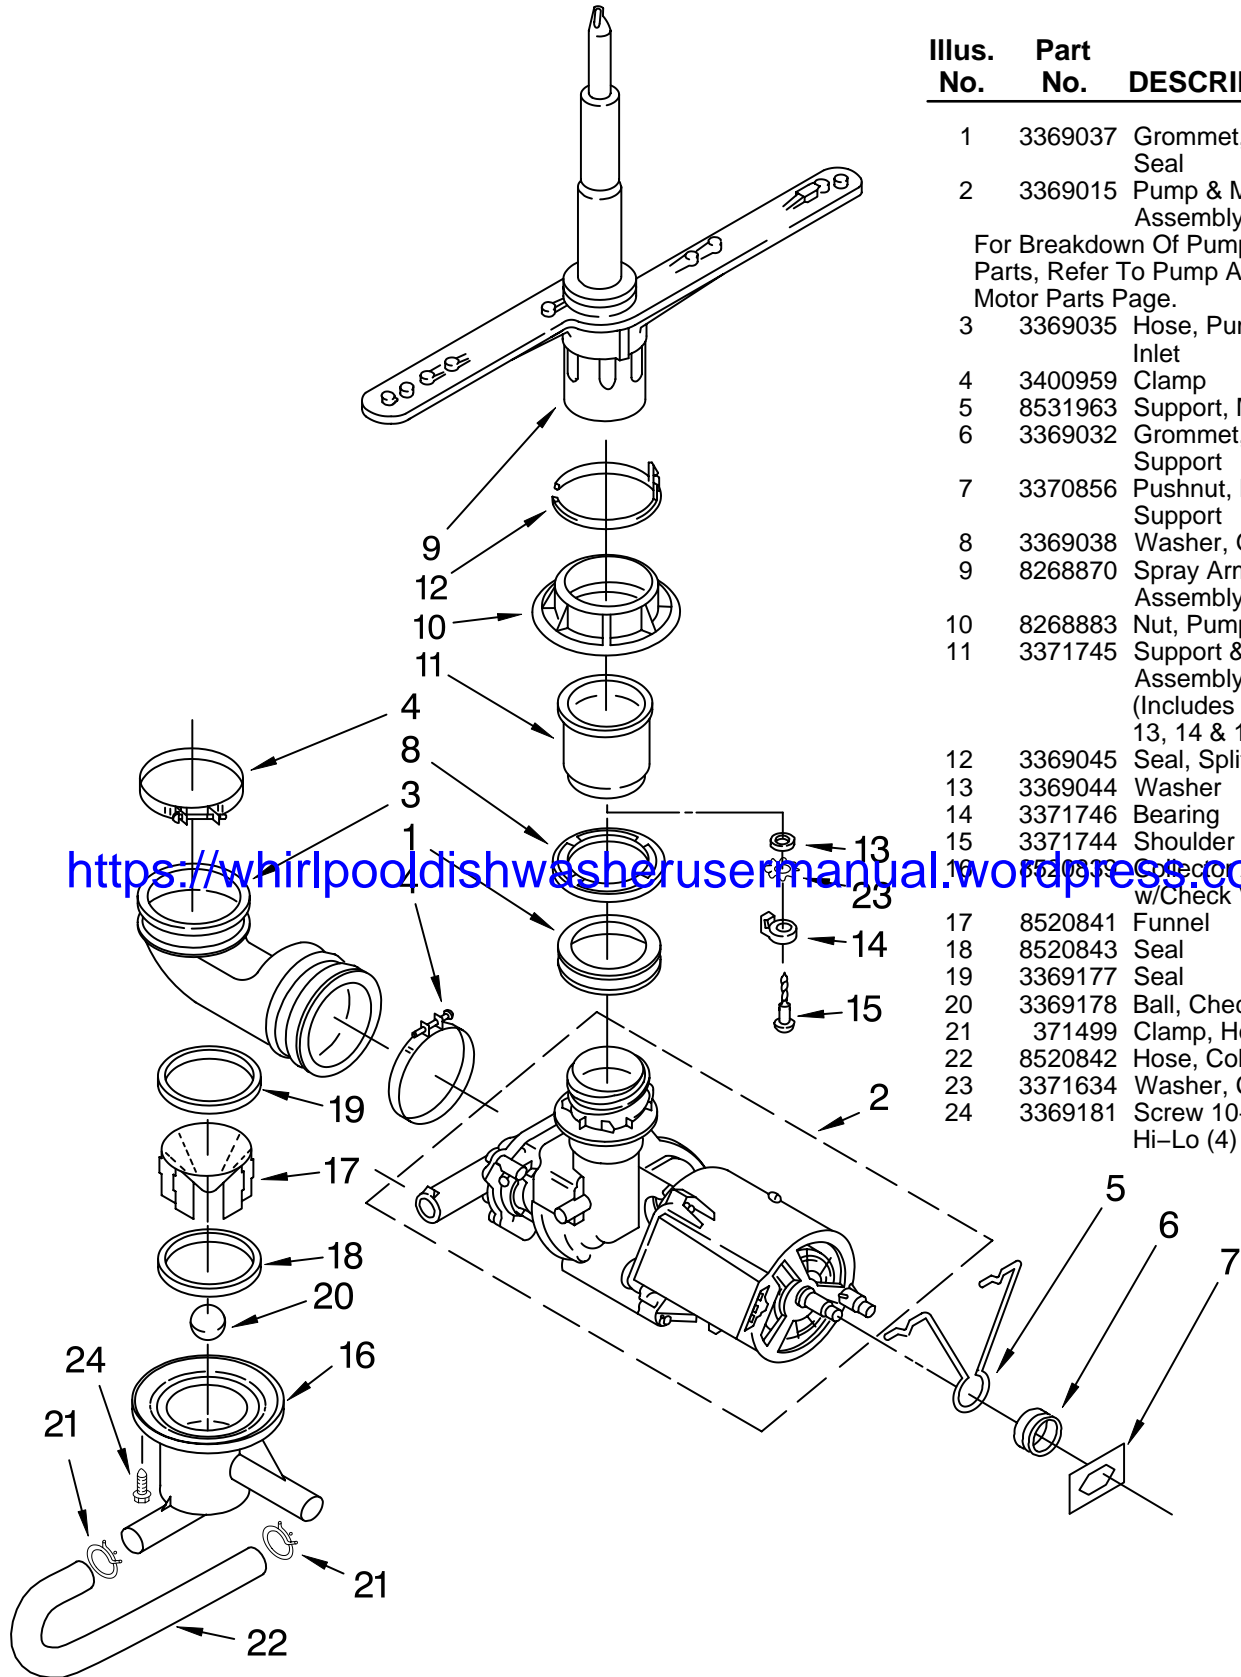

Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3400959	Clamp
5	8531963	Support, Motor
6	3369032	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	8268870	Spray Arm, Assembly Lower
10	8268883	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371746	Bearing
15	3371744	Shoulder Screw
16	8520833	Collector Assembly w/Check Valve
17	8520841	Funnel
18	8520843	Seal
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	8520842	Hose, Collector
23	3371634	Washer, Curved
24	3369181	Screw 10-16, Hi-Lo (4)

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# PUMP AND MOTOR PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0

(Black)

(White)

(Stainless)

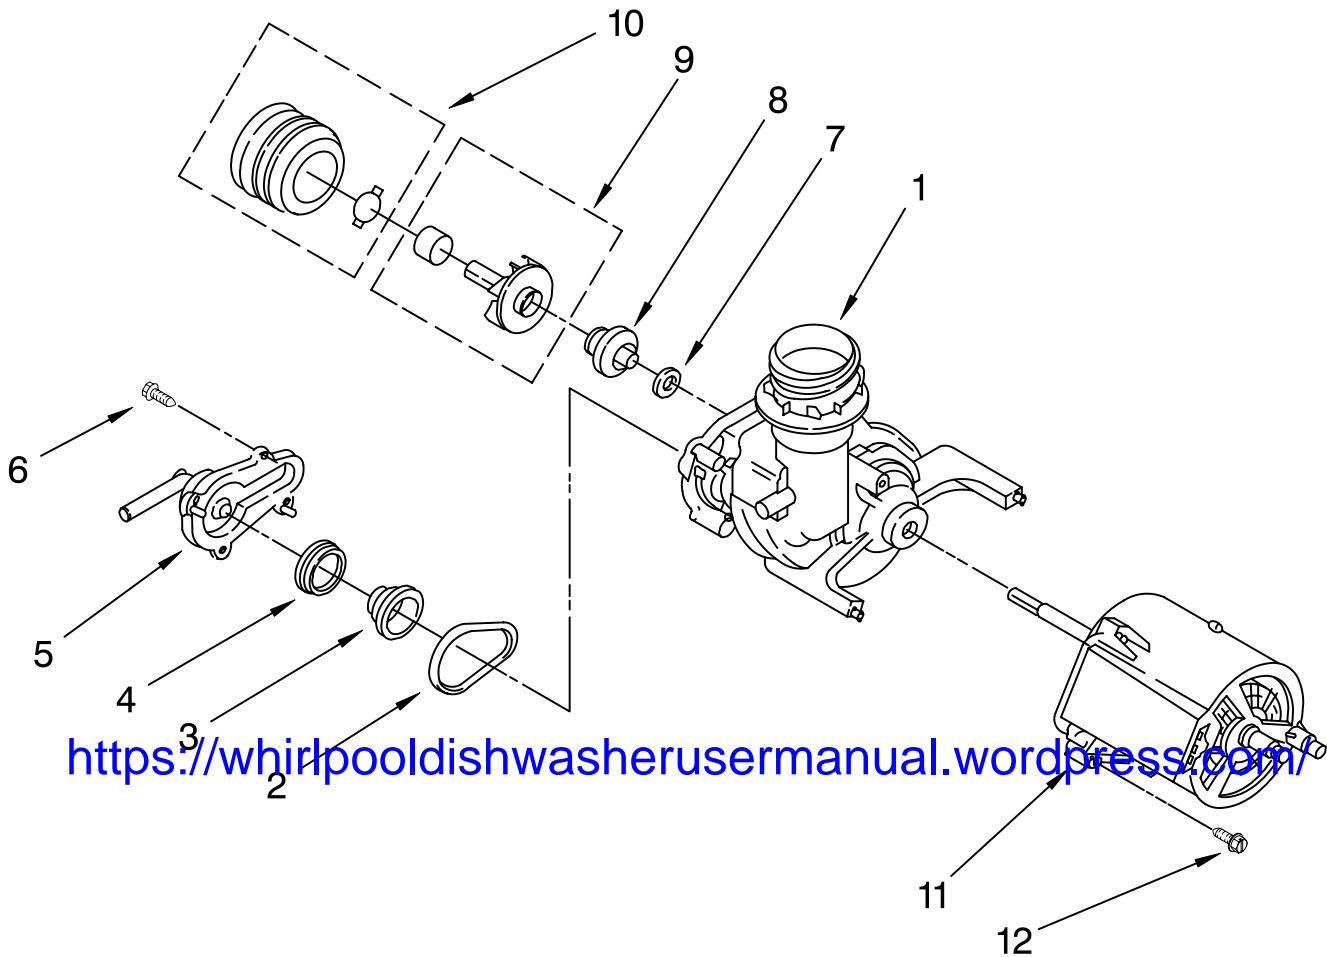


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DISHRACK PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0  
(Black) (White) (Stainless)

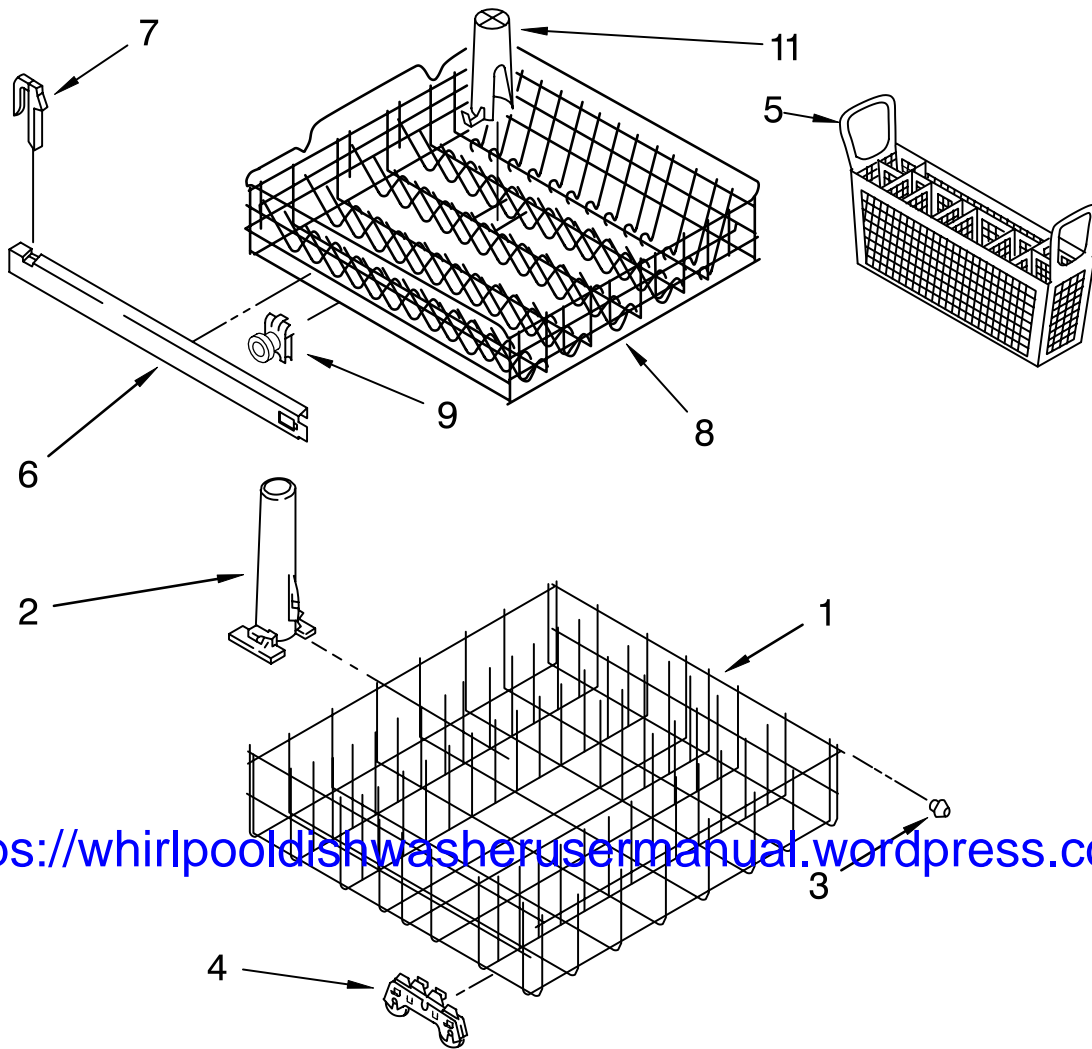

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	8539225	Dishrack, Lower
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8524581	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: DU850SWPB0, DU850SWPQ0, DU850SWPS0  
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**PAINT, TOUCH-UP (1/2oz.)**

72017 White  
72032 Black  
4392899 Biscuit

**PAINT, PRESSURIZED SPRAY (12 oz.)**

285006 Superior Black  
350942 Primer (White)  
4392901 Biscuit

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**PAINT, TOUCH-UP (1 qt.)**

799340 Black (Uncut)  
4392900 Biscuit

**DISHRACK REPAIR**

675576 Vinyl Touch-Up (Blue)  
676453 Vinyl Touch-Up (White)  
676455 Vinyl Touch-Up (Grey)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**ACCESSORY PARTS**

Side Panel Kits:  
4317925 White  
4396188 Biscuit

Door Spring Kit:  
4318050 Heavy Duty

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST