




# FRAME AND CONSOLE PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

UNDERCOUNTER  
DISHWASHER

(Black) (White) (Biscuit) (Stainless)

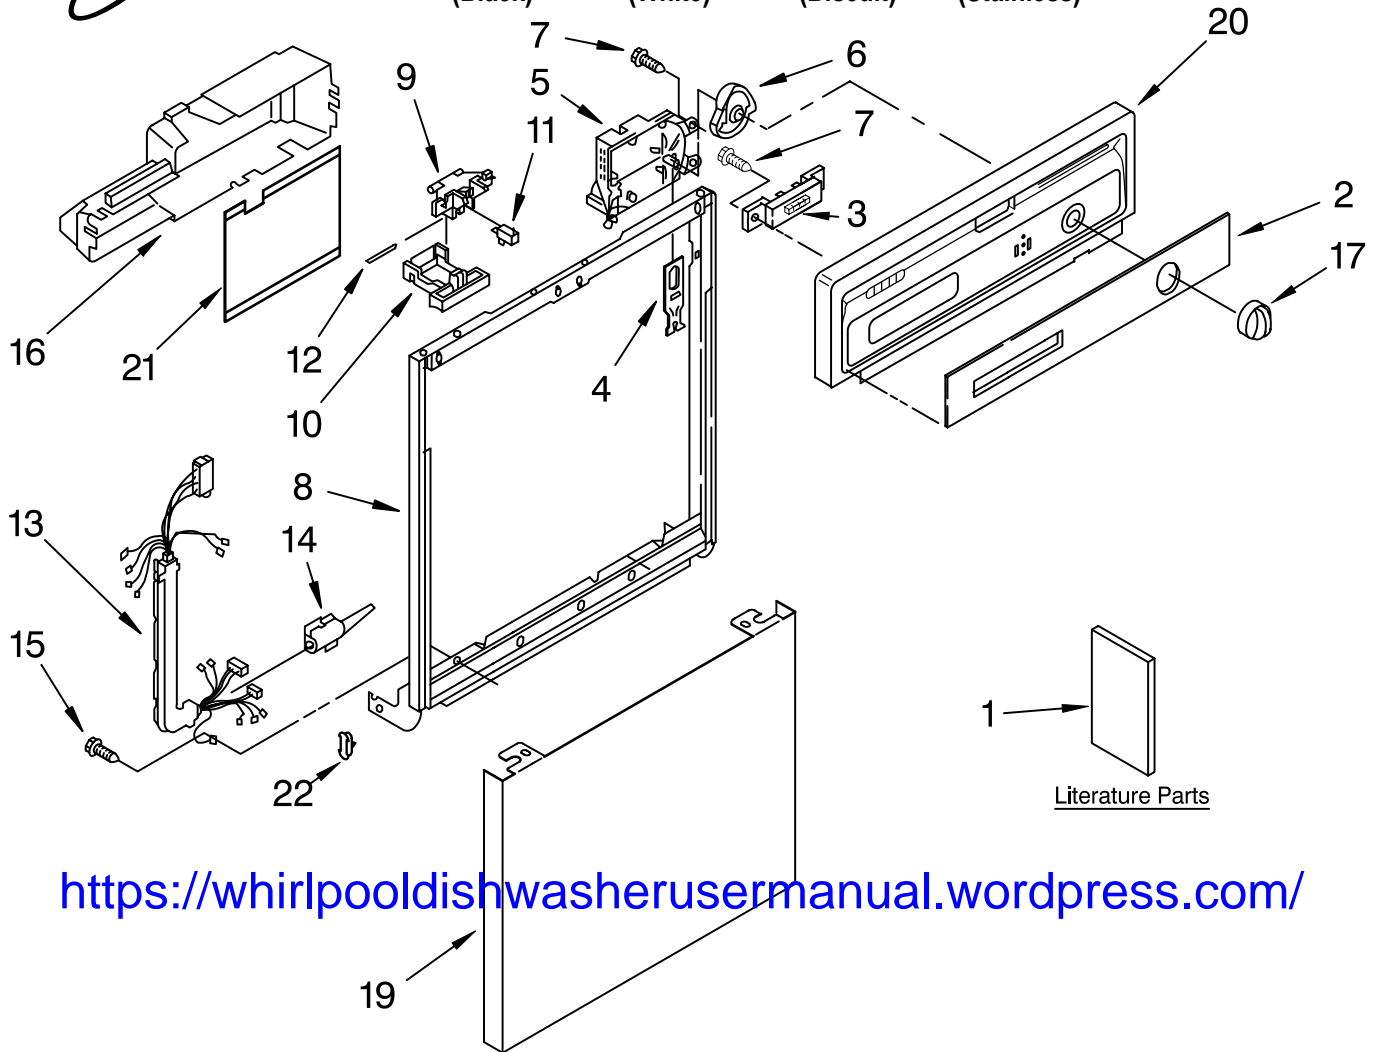


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8535436	Literature Parts	5	8535368	Timer	17		Knob, Timer
	3367007	Instructions, Installation	6	8271510	Cam		8275308	Black
		(Supplement)	7	304231	Screw, 8-18 x 1/2 (5)		8275309	White
		(Locating Your Water Supply)	8		Door Frame		8275310	Biscuit
	8535639	Guide, Energy	9	3380854	Bolt, Latch	19		Panel, Front
	8535037	Guide, Use & Care	10		Lever, Latch		3379375	Black
	3385497	Diagram, Wiring		3369457	Black		3379376	White
	677967	Do-It Yourself Manual	11	3372231	White		8054178	Biscuit
2		Insert, Console	12	3375062	Biscuit	20		Stainless Console (Includes Item 2)
	8535383	Black	13	3369325	Switch, (2)		8535328	Black
	8535384	White	14	3368955	Pin, Switch (2)		8535329	White
	8575664	Biscuit	15	8573183	Harness and Protector		8575346	Biscuit
3	8269366	Switch, 5 Button	16	3376405	Elbow, Harness	21	3379671	Shield, Control Cover
4	3369529	Follower, Cam		3400892	Screw,	22	3373234	Bearing, Spring (2)
				8269526	Cover, Control			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INNER DOOR PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1  
(Black) (White) (Biscuit) (Stainless)

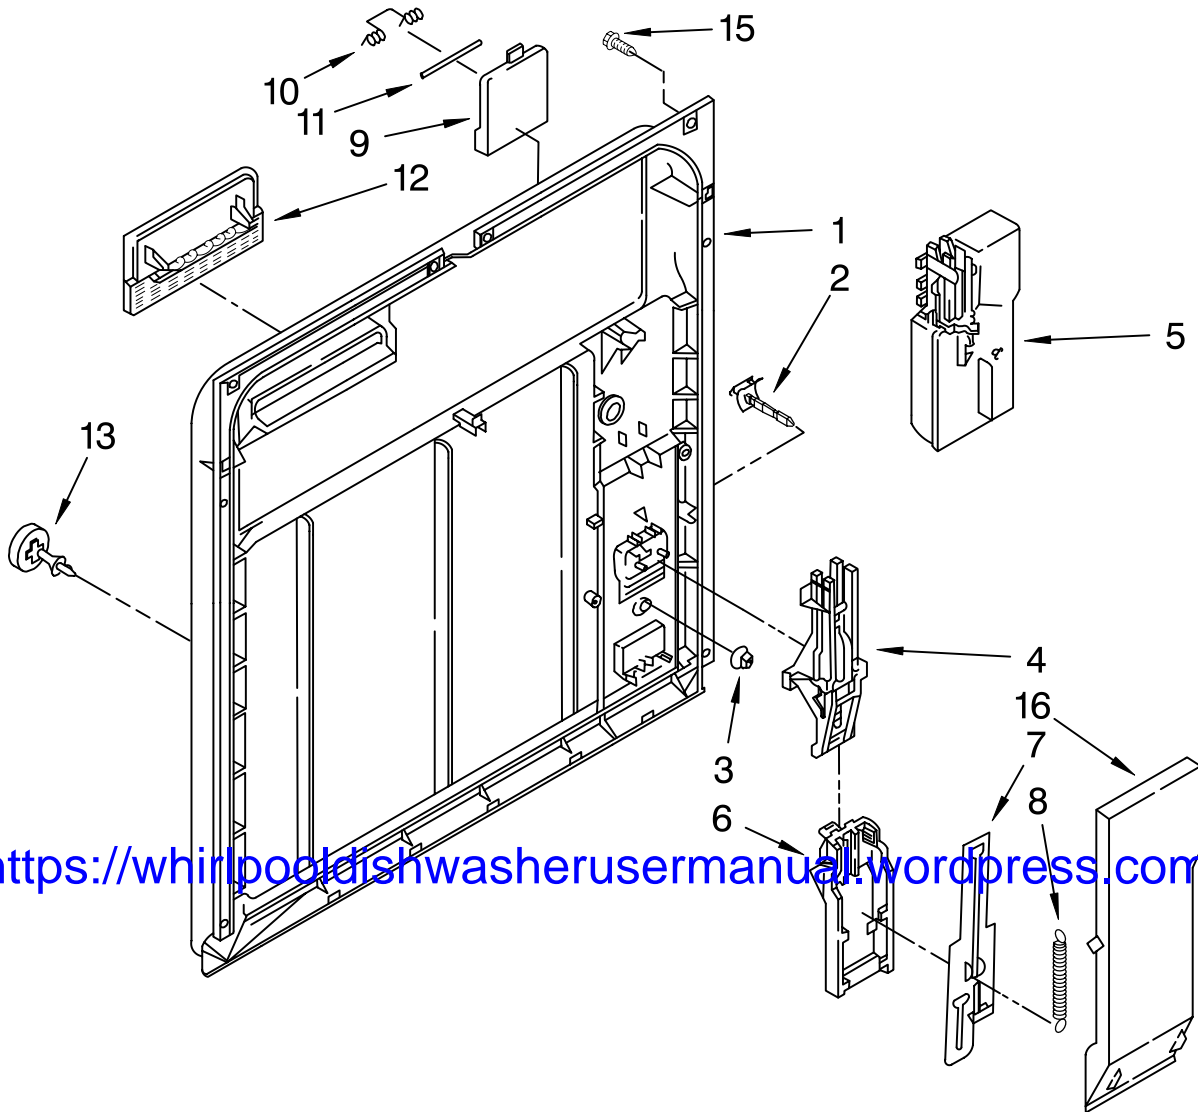

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Includes Items 2 & 3)	4	8519606	Actuator Assembly	9	3378138	Lid Assembly
2	3376066	Latch, Detergent Dispenser (Includes Item 3)	5	8052027	Wet Agent, Dispenser	10	8066018	Spring, Lid
3	3369061	Snap, Detergent Dispenser (Includes Item 2)	6	3369000	Draw Bar (Upper Dispenser)	11	3372028	Pin (Lid Hinge)
			7	8066017	Draw Bar (Lower Dispenser)	12	3371710	Screen, Vent
			8	3368999	Spring (Draw Bar)	13	3378134	Cap, Wet Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS


For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

(Black)

(White)

(Biscuit)

(Stainless)

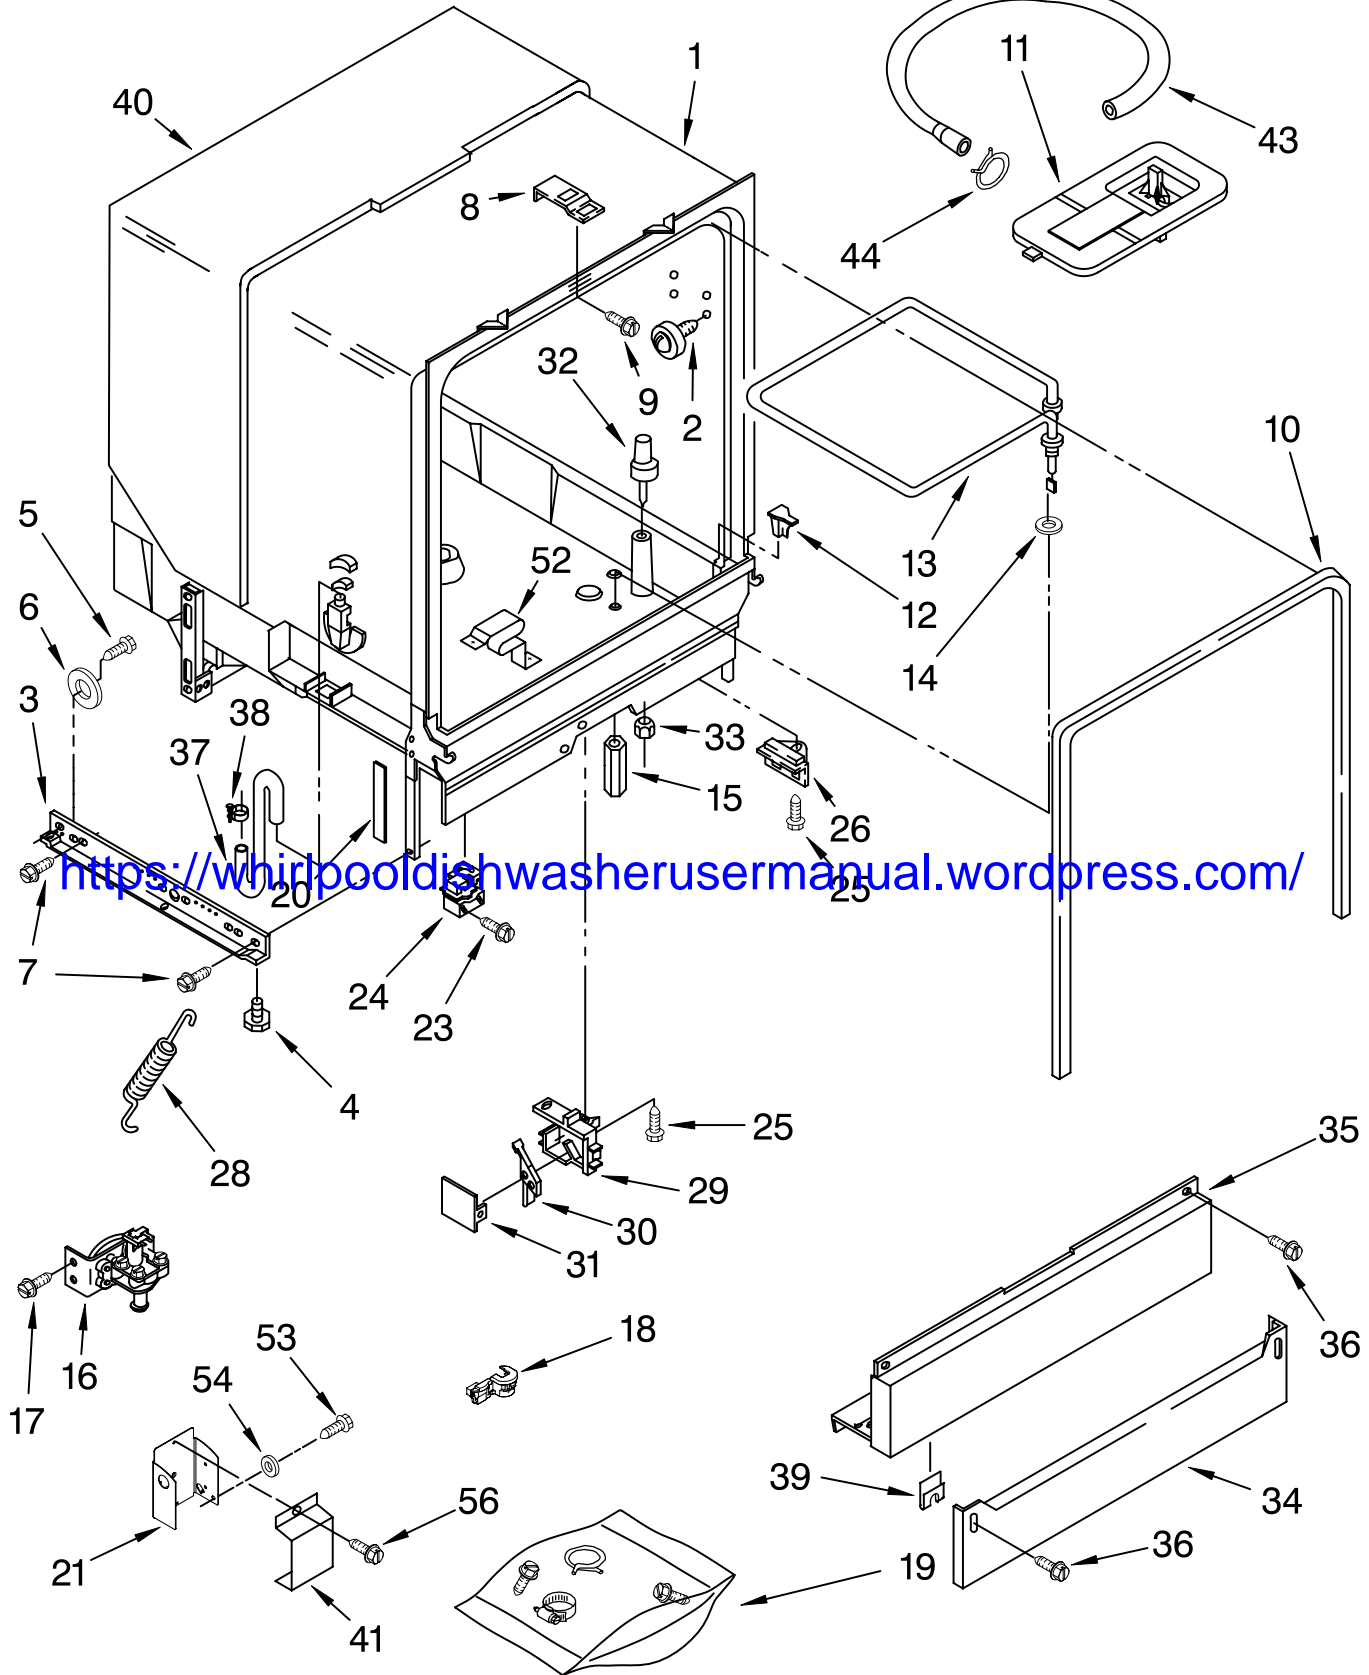

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1  
(Black) (White) (Biscuit) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533815	Tub and Support Assembly	19	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)	35		Panel, Access (Includes Item 39)
2	8528831	Tub, Wheel Assembly (8)					3379917	Black
3	3368933	Runner (2)	20	8052018	Pad, Friction		3379918	White
4	3374849	Leveler (2)	21	8573951	Terminal Box		8054179	Biscuit
5	3370389	Screw, Shoulder (2)	23	3370225	Screw		9744517	Stainless
6	302819	Wheel (2)	24	3369063	Relay	36	302868	Screw, 8-18 x 1/2 (4)
7	343641	Screw, 10-16 x 1/2 (4)	25	304231	Screw	37	3369414	Hose, Inlet
8	3378149	Plate, Latch	26	3368928	Fuse, Thermal	38	301958	Clamp
9	3374720	Screw	28	3379383	Spring, Door (2)	39	3378123	Clip, Grounding
10	3376927	Gasket	29	8318218	Housing, Float Switch	40	8573243	Sound Shield
11	3369322	Grate	30	3369067	Switch, Float	41	300068	Cover Assembly, Terminal Box
12	8528862	Deflector (2)	31	8318219	Cover, Switch Housing	43	3374077	Drain Hose
13	8519827	Heater	32	8519552	Float	44	356138	Hose Clamp
14	717273	Washer, Rubber (2)	33	717488	Nut	52	3379740	Support, Heater (3)
15	8268548	Nut (2) (Heater Terminal)	34		Panel, Toe	53	3400014	Screw
16	8283345	Water Valve		3368942	Black	54	3378128	Washer
17	304392	Screw, 8-18 x 1/2		9742861	White	56	3369138	Screw, 8-18
18	8573061	Strain Relief		8054181	Biscuit			

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# PUMP AND SPRAY ARM PARTS


For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1

(Black)

(White)

(Biscuit)

(Stainless)

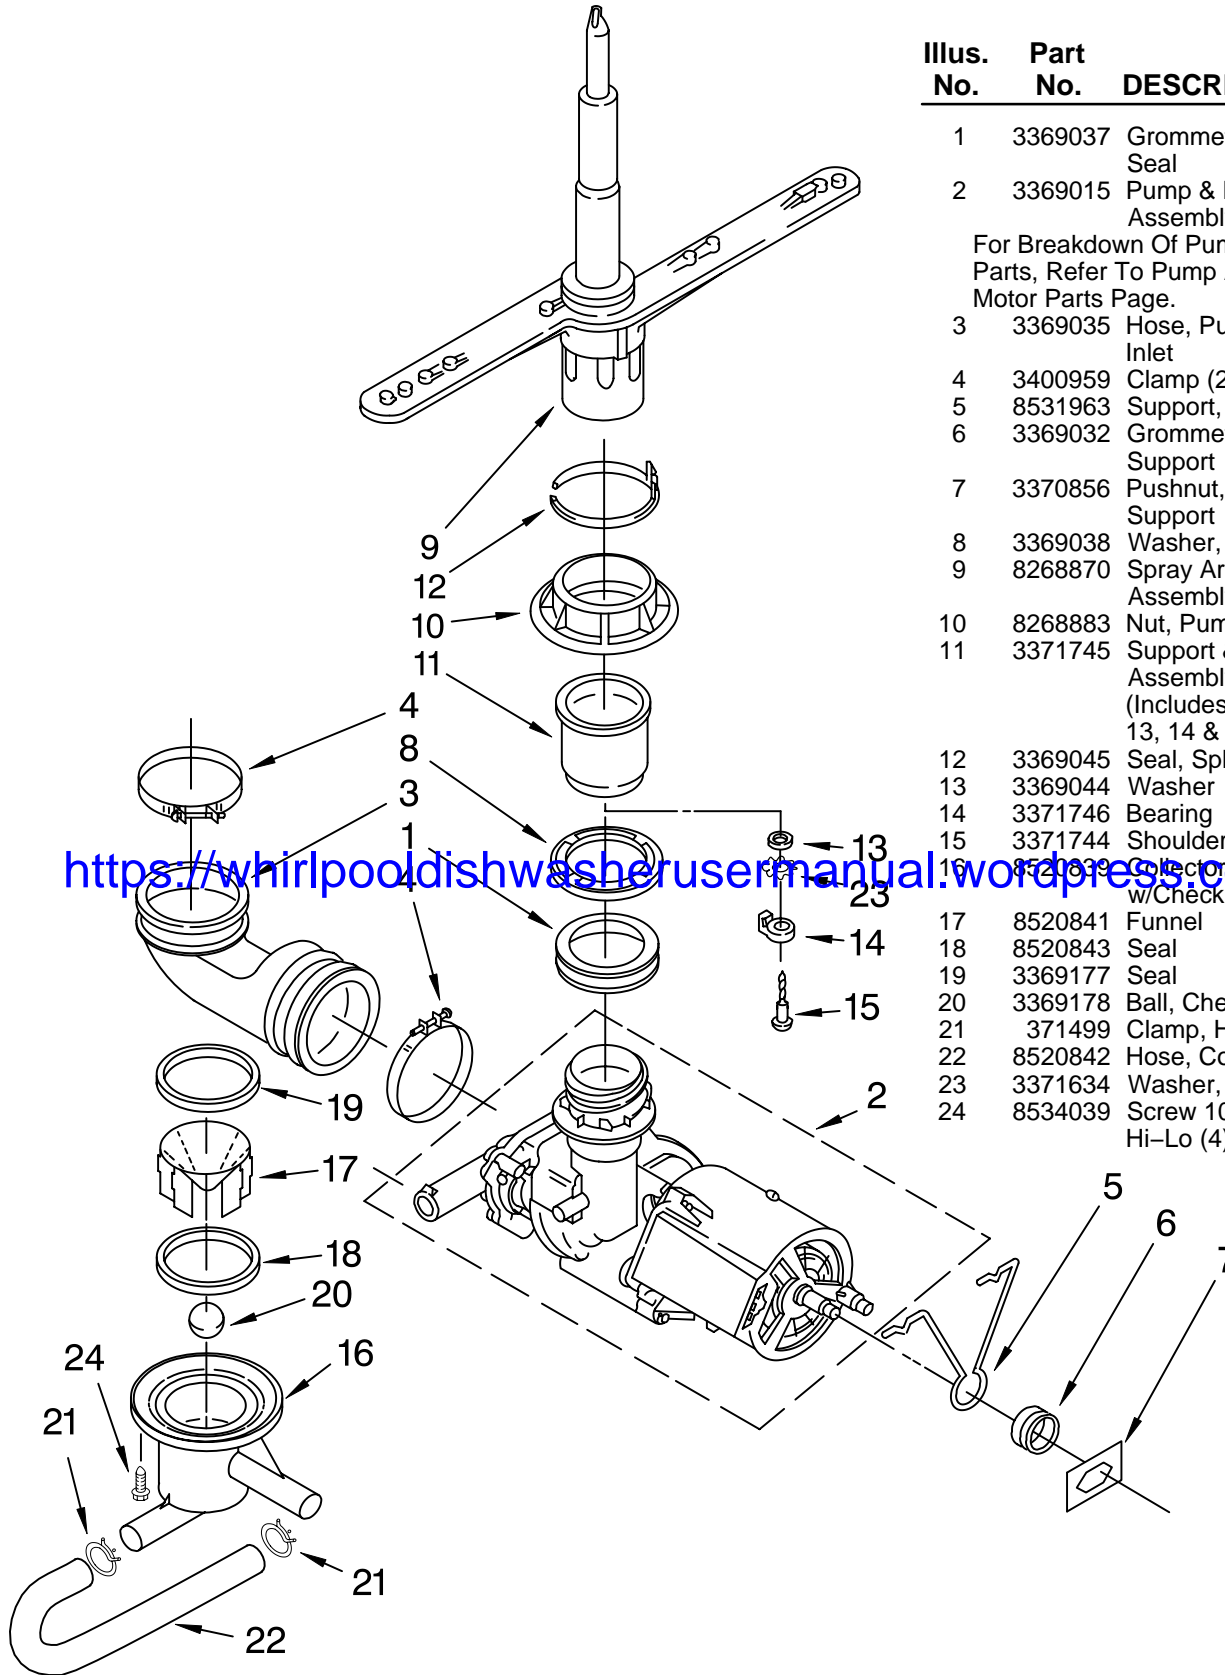

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


- |  |         |  |
|--|---------|--|
| 1  | 3369037 | Grommet, Pump Seal                                       |
| 2  | 3369015 | Pump & Motor Assembly                                    |
| For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page. |         |  |
| 3  | 3369035 | Hose, Pump Inlet   |
| 4  | 3400959 | Clamp (2)  |
| 5  | 8531963 | Support, Motor   |
| 6  | 3369032 | Grommet, Motor Support                                   |
| 7  | 3370856 | Pushnut, Motor Support                                   |
| 8  | 3369038 | Washer, Grommet  |
| 9  | 8268870 | Spray Arm, Assembly Lower                                |
| 10   | 8268883 | Nut, Pump Outlet   |
| 11   | 3371745 | Support & Bearing Assembly (Includes Items: 13, 14 & 15) |
| 12   | 3369045 | Seal, Split Ring   |
| 13   | 3369044 | Washer   |
| 14   | 3371746 | Bearing  |
| 15   | 3371744 | Shoulder Screw   |
| 16   | 8520839 | Collector Assembly w/Check Valve                         |
| 17   | 8520841 | Funnel   |
| 18   | 8520843 | Seal   |
| 19   | 3369177 | Seal   |
| 20   | 3369178 | Ball, Check-Valve  |
| 21   | 371499  | Clamp, Hose  |
| 22   | 8520842 | Hose, Collector  |
| 23   | 3371634 | Washer, Curved   |
| 24   | 8534039 | Screw 10-16, Hi-Lo (4)                                   |

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# PUMP AND MOTOR PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1  
 (Black) (White) (Biscuit) (Stainless)

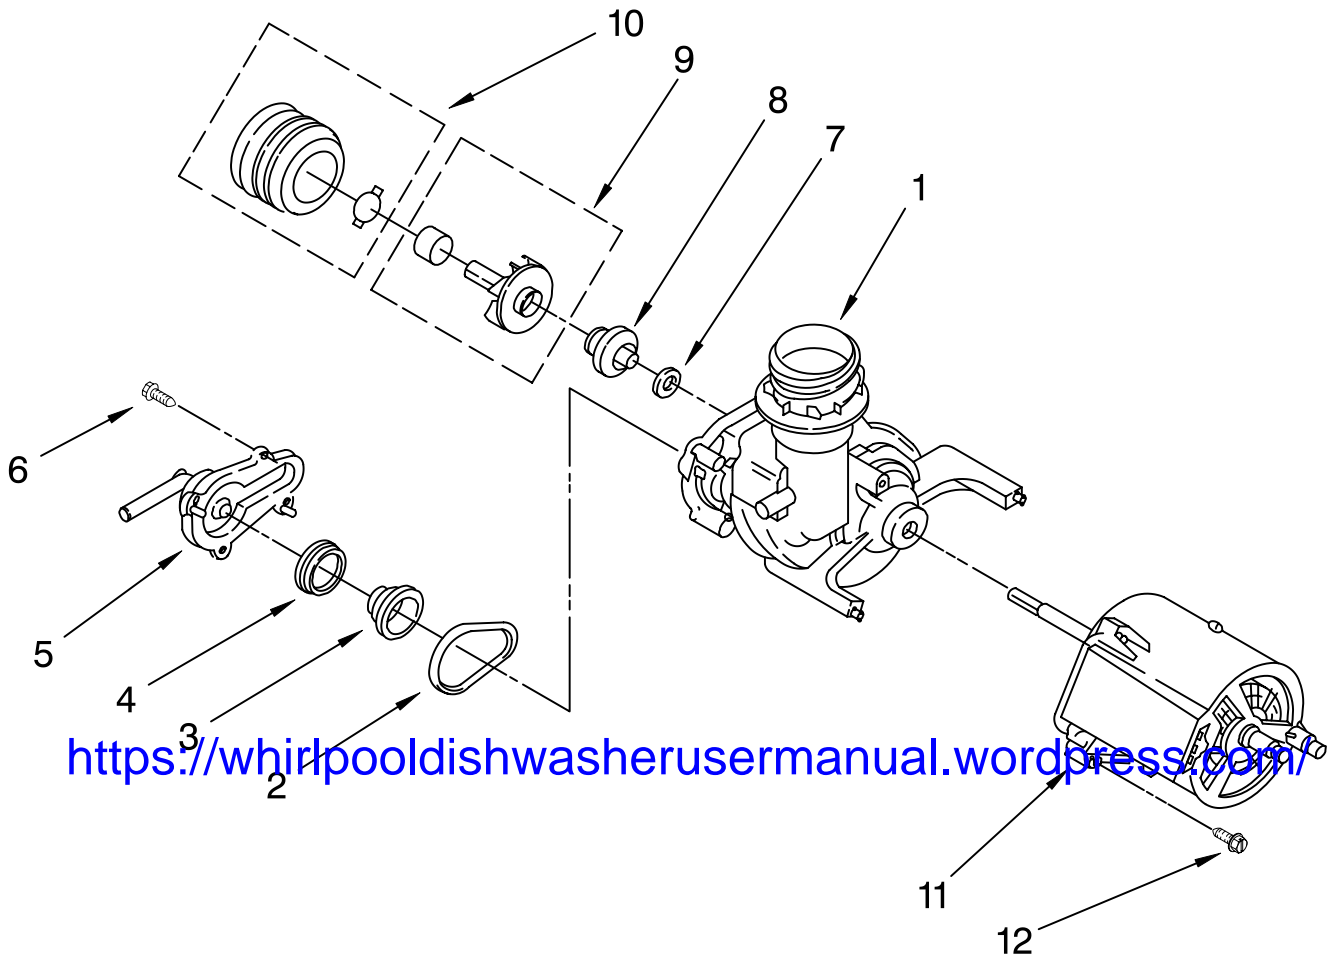


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DISHRACK PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1  
 (Black) (White) (Biscuit) (Stainless)

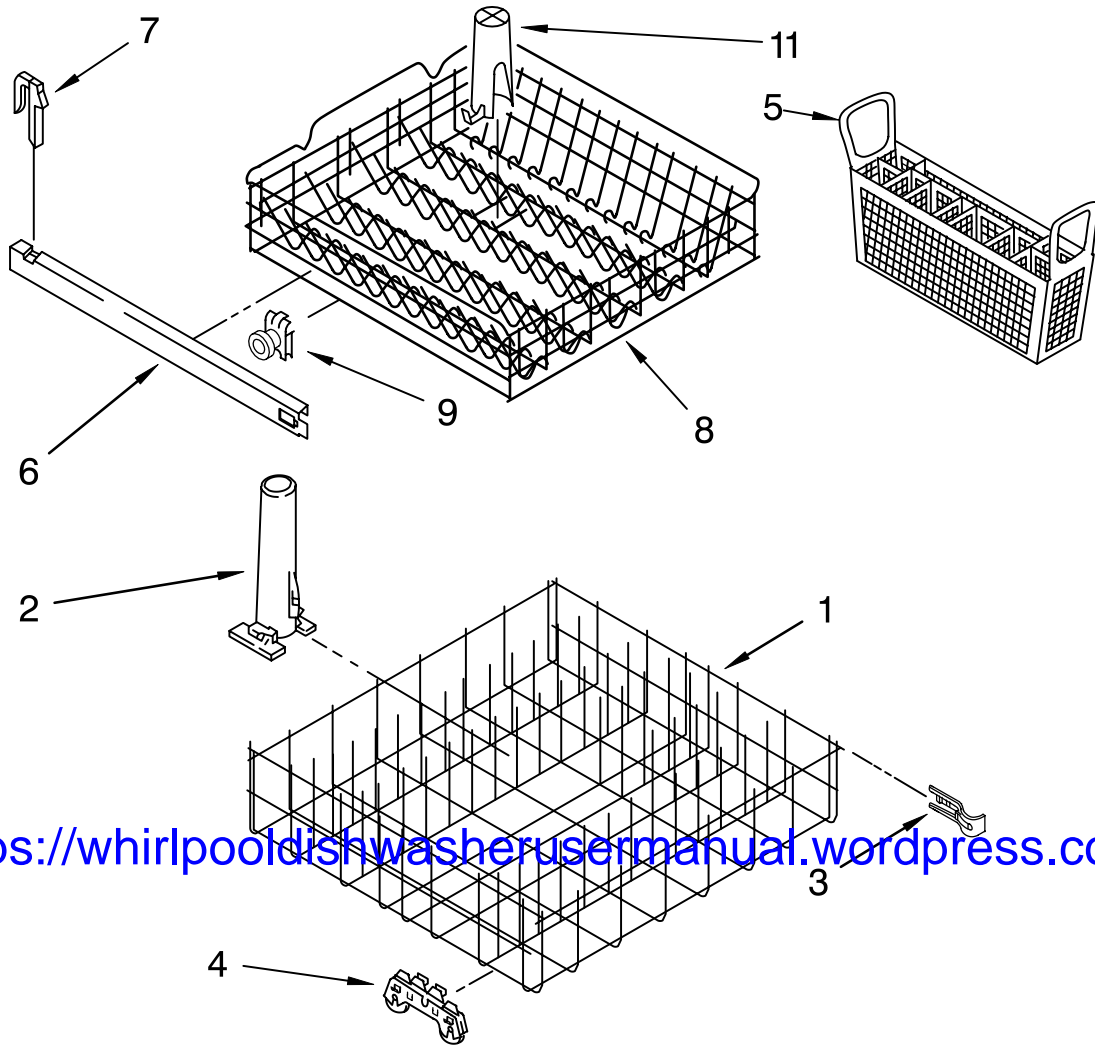

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	8539225	Dishrack, Lower
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8565920	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: DU850SWPB1, DU850SWPQ1, DU850SWPT1, DU850SWPS1  
(Black) (White) (Biscuit) (Stainless)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
<b><u>ACCESSORIES</u></b>		
	Side Panel Kits	
	4378867	White
	4378868	Black
	675788	Biscuit
	4378869	Almond
	Custom Trim & Panel Kits	
	675775	Black
	675776	White
	675809	Biscuit
	Moisture Barrier Kit	
	4396277	Kit
	Drain Hose	
	3385556	12 Ft.
	Heavy Duty Spring Kit	
	4318050	Spring

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
	72032	Black
	4392899	Biscuit
<b><u>PAINT, PRESSURIZED SPRAY (12 oz.)</u></b>		
	350930	White
	285006	Superior Black
	4392901	Biscuit
<b><u>PAINT, TOUCH-UP (1 qt.)</u></b>		
	799344	White (Uncut)
	4392900	Biscuit
<b><u>POWER CORD KIT</u></b>		
	4317824	Power Cord Kit (Includes Power Cord & Misc. Hardware)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
<b><u>ANTI-TIP KIT</u></b>		
	4378968	Floor Mounting Kit
<b><u>DISHRACK REPAIR</u></b>		
	Tip Tine Repair Kit (Enough for Two Complete Dishracks)	
	4396838	White
	4396840	Grey
	4396854	Silver Atlantis
	Vinyl Touch-Up (4 oz.)	
	676453	White
	676455	Grey
	4396853	Silver Atlantis

<https://whirlpooldishwasherusermanual.wordpress.com/>