




# FRAME AND CONSOLE PARTS

For Model: DU850SWPU3

(Black)

UNDERCOUNTER  
DISHWASHER

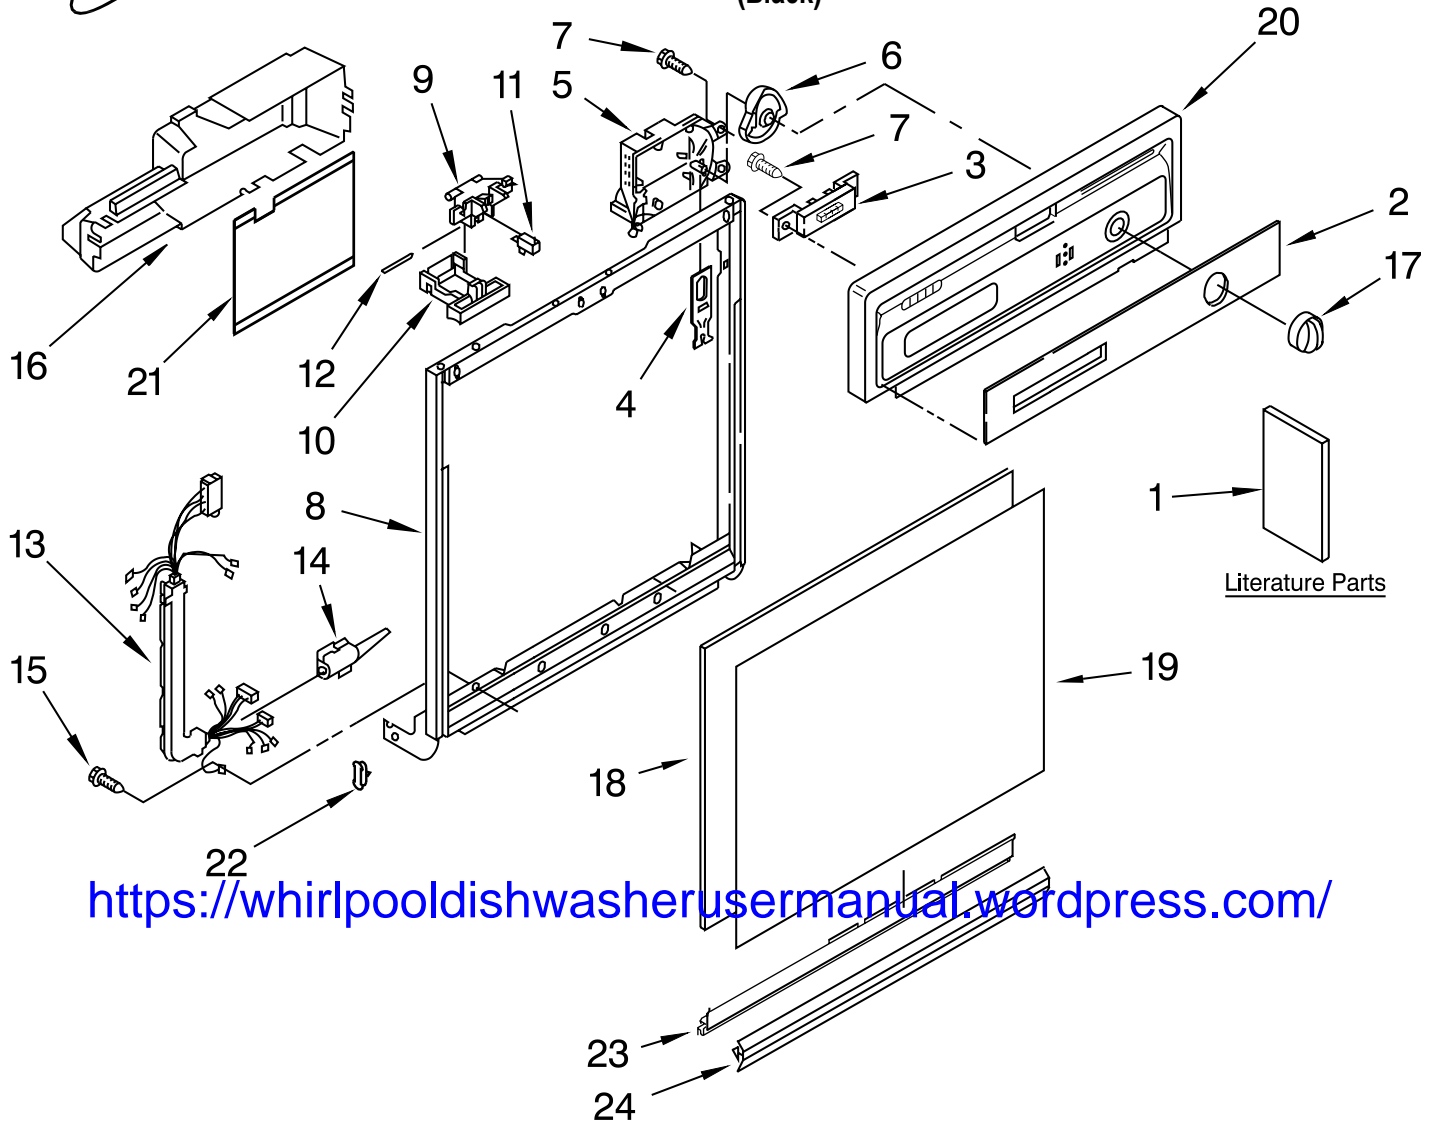

<https://whirlpooledishwasherusermanual.wordpress.com/>


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	6	8271510	Cam	17		Knob, Timer
	8535436	Instructions, Installation	7	304231	Screw, 8-18 x 1/2 (5)		8275308	Black
	3367007	Instructions, Installation (Supplement) (Locating Your Water Supply)	8	9743028	Door Frame Black	18	3368979	Spacer, Corrugated
	W10039850	Guide, Energy	9	3380854	Bolt, Latch	19	3369516	Black/Almond
	W10039800	Guide, Use & Care	10	3369457	Lever, Latch Black		8274853	White/Biscuit
	677967	Do-It Yourself Manual	11	3369325	Switch, (2)	20		Console (Includes Item 2)
2	W10039600	Insert, Console Black	12	3368955	Pin, Switch (2)		W10072720	Black
3	8269366	Switch, 5 Button	13	8573183	Harness and Protector	21	3379671	Shield, Control Cover
4	3369529	Follower, Cam	14	3376405	Elbow, Harness	22	3373234	Bearing, Spring (2)
5	W10039480	Timer	15	3400892	Screw,	23	3374716	Retainer, Channel
			16	8269526	Cover, Control	24	3374010	Retainer, Panel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INNER DOOR PARTS

For Model: DU850SWPU3

(Black)

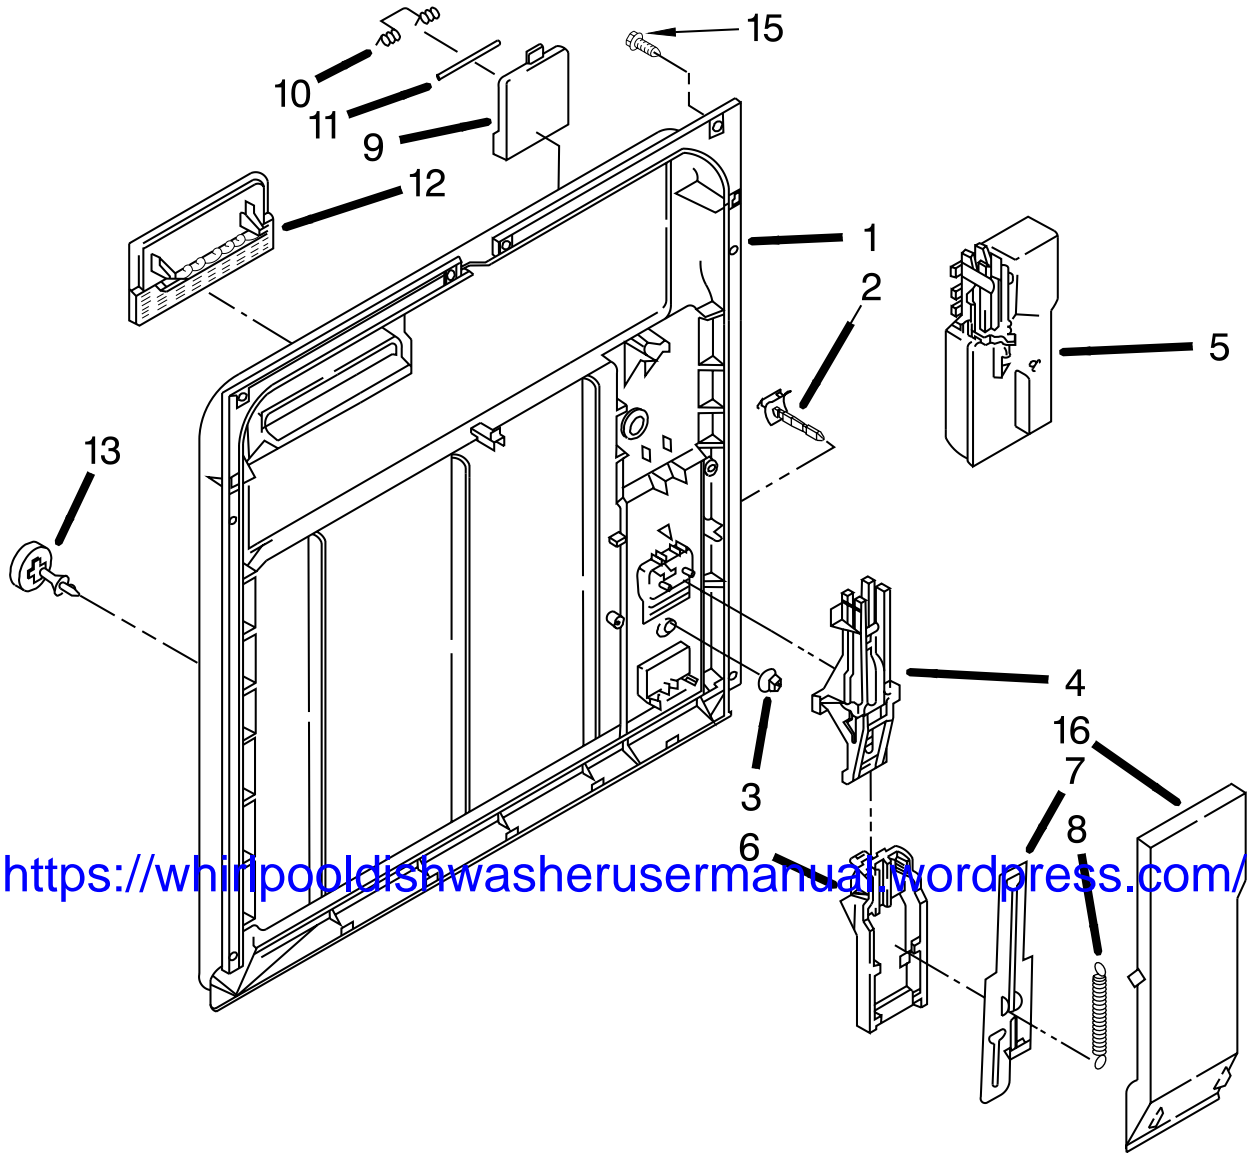

<https://whirlpooldishwasherusermanual.wordpress.com/>


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Includes Items 2 & 3)	4	8519606	Actuator Assembly	9	3378138	Lid Assembly
2	3376066	Latch, Detergent Dispenser (Includes Item 3)	5	8052027	Wet Agent, Dispenser	10	8066018	Spring, Lid
3	3369061	Snap, Detergent Dispenser (Includes Item 2)	6	3369000	Draw Bar (Upper Dispenser)	11	3372028	Pin (Lid Hinge)
			7	8066017	Draw Bar (Lower Dispenser)	12	3371710	Screen, Vent
			8	3368999	Spring (Draw Bar)	13	3378134	Cap, Wet Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Model: DU850SWPU3

(Black)

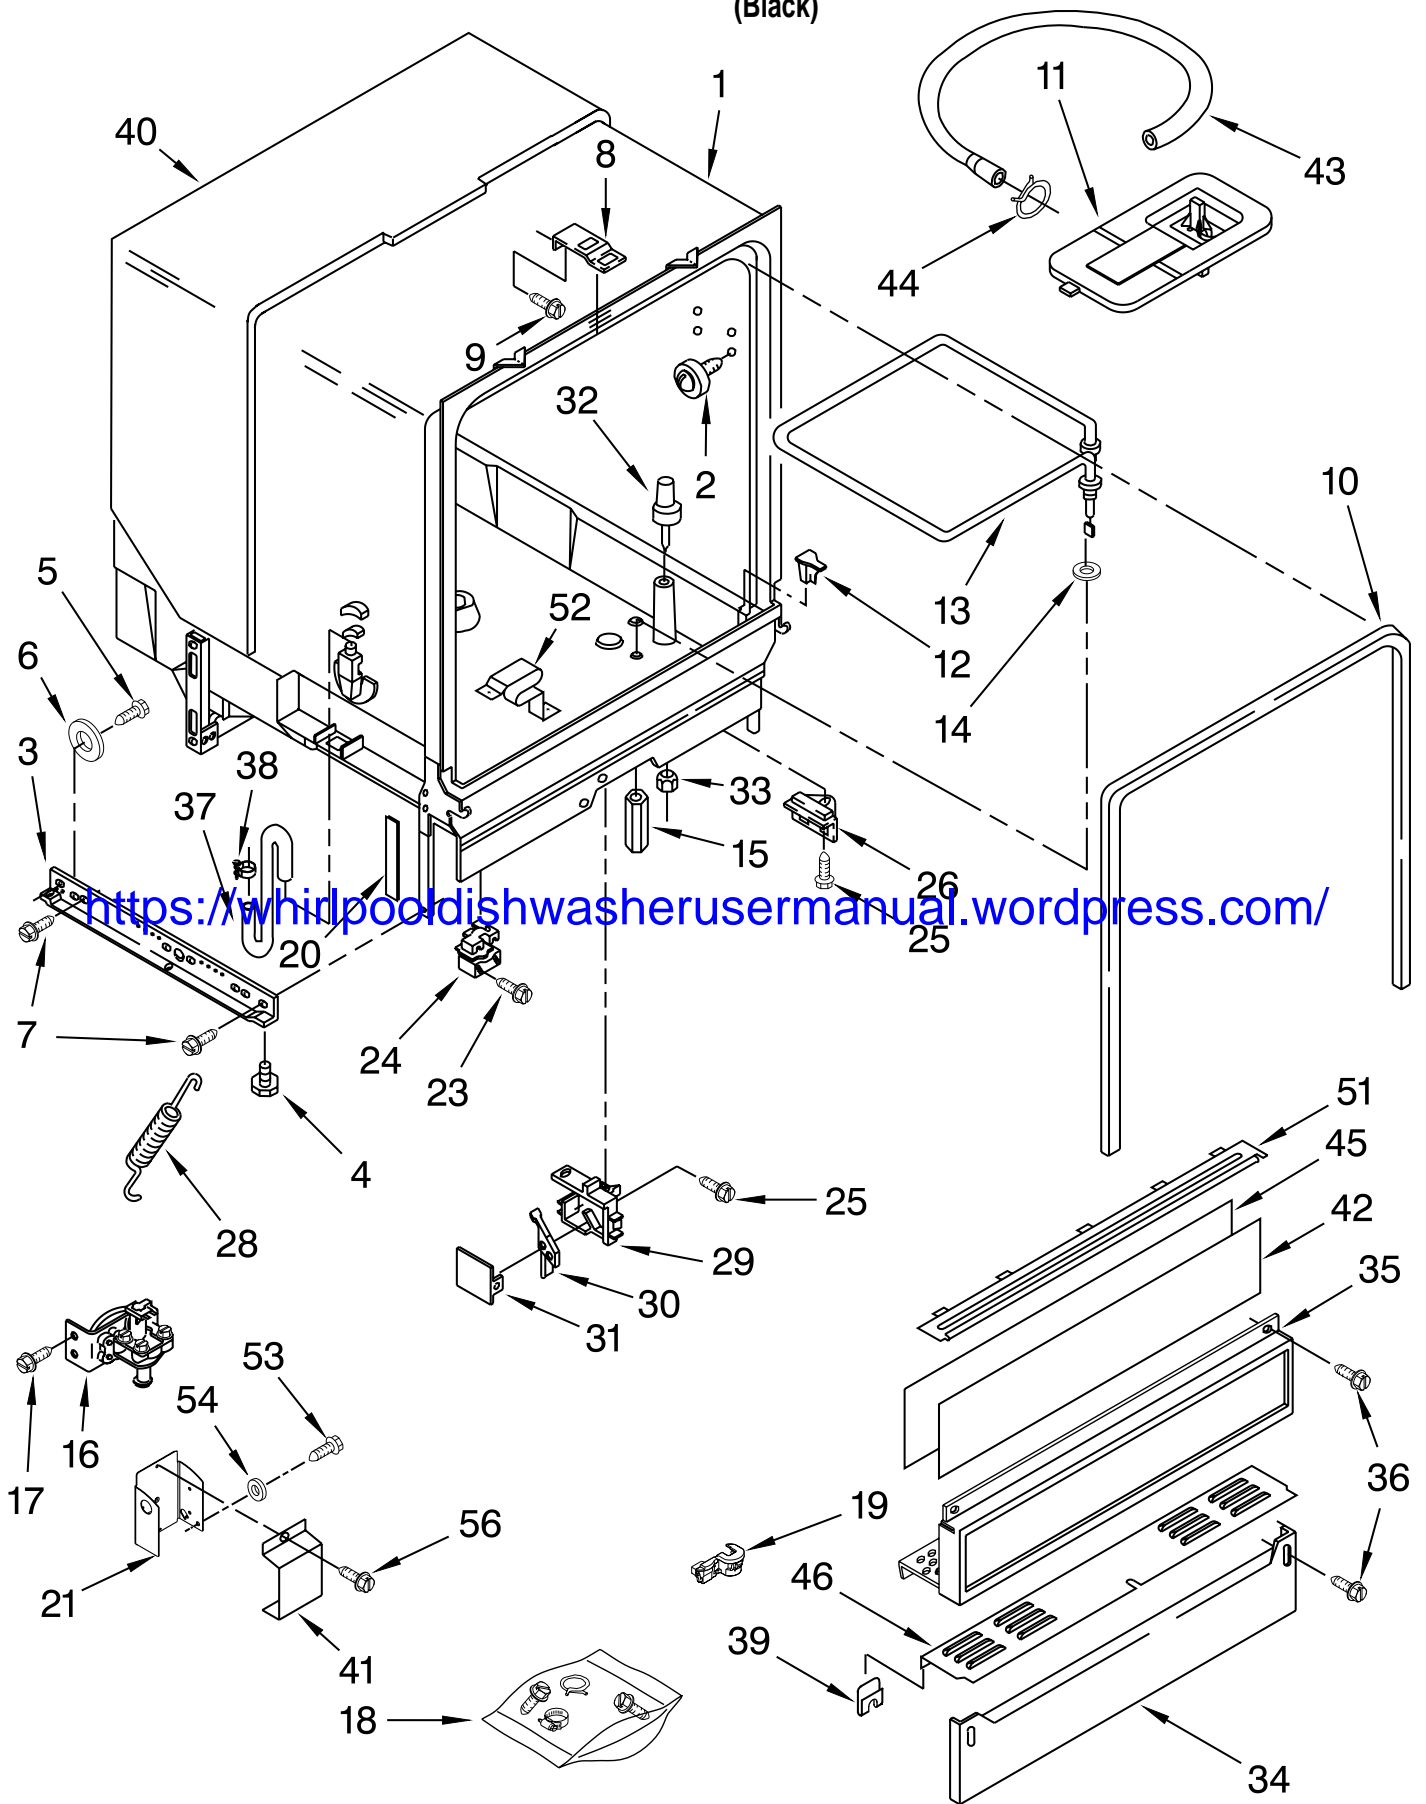

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Model: DU850SWPU3

(Black)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8533815	Tub and Support Assembly	19	8573061	Strain Relief	37	3369414	Hose, Inlet
2	8528831	Tub, Wheel Assembly (8)	20	8052018	Pad, Friction	38	301958	Clamp
3	3368933	Runner (2)	21	8573951	Terminal Box	39	3378123	Clip, Grounding
4	3374849	Leveler (2)	23	3370225	Screw	40	8573243	Sound Shield
5	3370389	Screw, Shoulder (2)	24	3369063	Relay	41	300068	Cover Assembly, Terminal Box
6	302819	Wheel (2)	25	304231	Screw	43	3374077	Drain Hose
7	343641	Screw, 10-16 x 1/2 (4)	26	3368928	Fuse, Thermal	42		Panel, Front (Access Panel)
8	3378149	Plate, Latch	28	3373228	Spring, Door (2)		3369527	Black/Almond
9	3374720	Screw	29	8318218	Housing, Float Switch		3385409	White/Biscuit
10	3376927	Gasket	30	3369067	Switch, Float	44	356138	Hose Clamp
11	3369322	Grate	31	8318219	Cover, Switch Housing	45	3369526	Spacer, Corrugated
12	8528862	Deflector (2)	32	8519552	Float	46	3374728	Extension & Clip Assembly
13	8519827	Heater	33	717488	Nut	51		Retainer, Access
14	717273	Washer, Rubber (2)	34	3368942	Panel, Toe Black		3372412	Black
15	8268548	Nut (2) (Heater Terminal)	35		Panel, Access (Includes Item 39)	52	3379740	Support, Heater (3)
16	8283345	Water Valve		3369193	Black	53	3400014	Screw
17	304392	Screw, 8-18 x 1/2	36	302868	Screw, 8-18 x 1/2 (4)	54	3378128	Washer
18	3369816	Miscellaneous Parts Bag (Includes 2 Screws & Washer Clamps)				56	3369138	Screw, 8-18


<https://whirlpooldishwasherusermanual.wordpress.com/>

# PUMP AND SPRAY ARM PARTS

For Model: DU850SWPU3

(Black)

Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3400959	Clamp (2)
5	8531963	Support, Motor
6	3369032	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	8268870	Spray Arm, Assembly Lower
10	8268883	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371744	Bearing
15	3371744	Shoulder Screw
16	8520839	Collector Assembly w/Check Valve
17	8520841	Funnel
18	8520843	Seal
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	8520842	Hose, Collector
23	3371634	Washer, Curved
24	8534039	Screw 10-16, Hi-Lo (4)

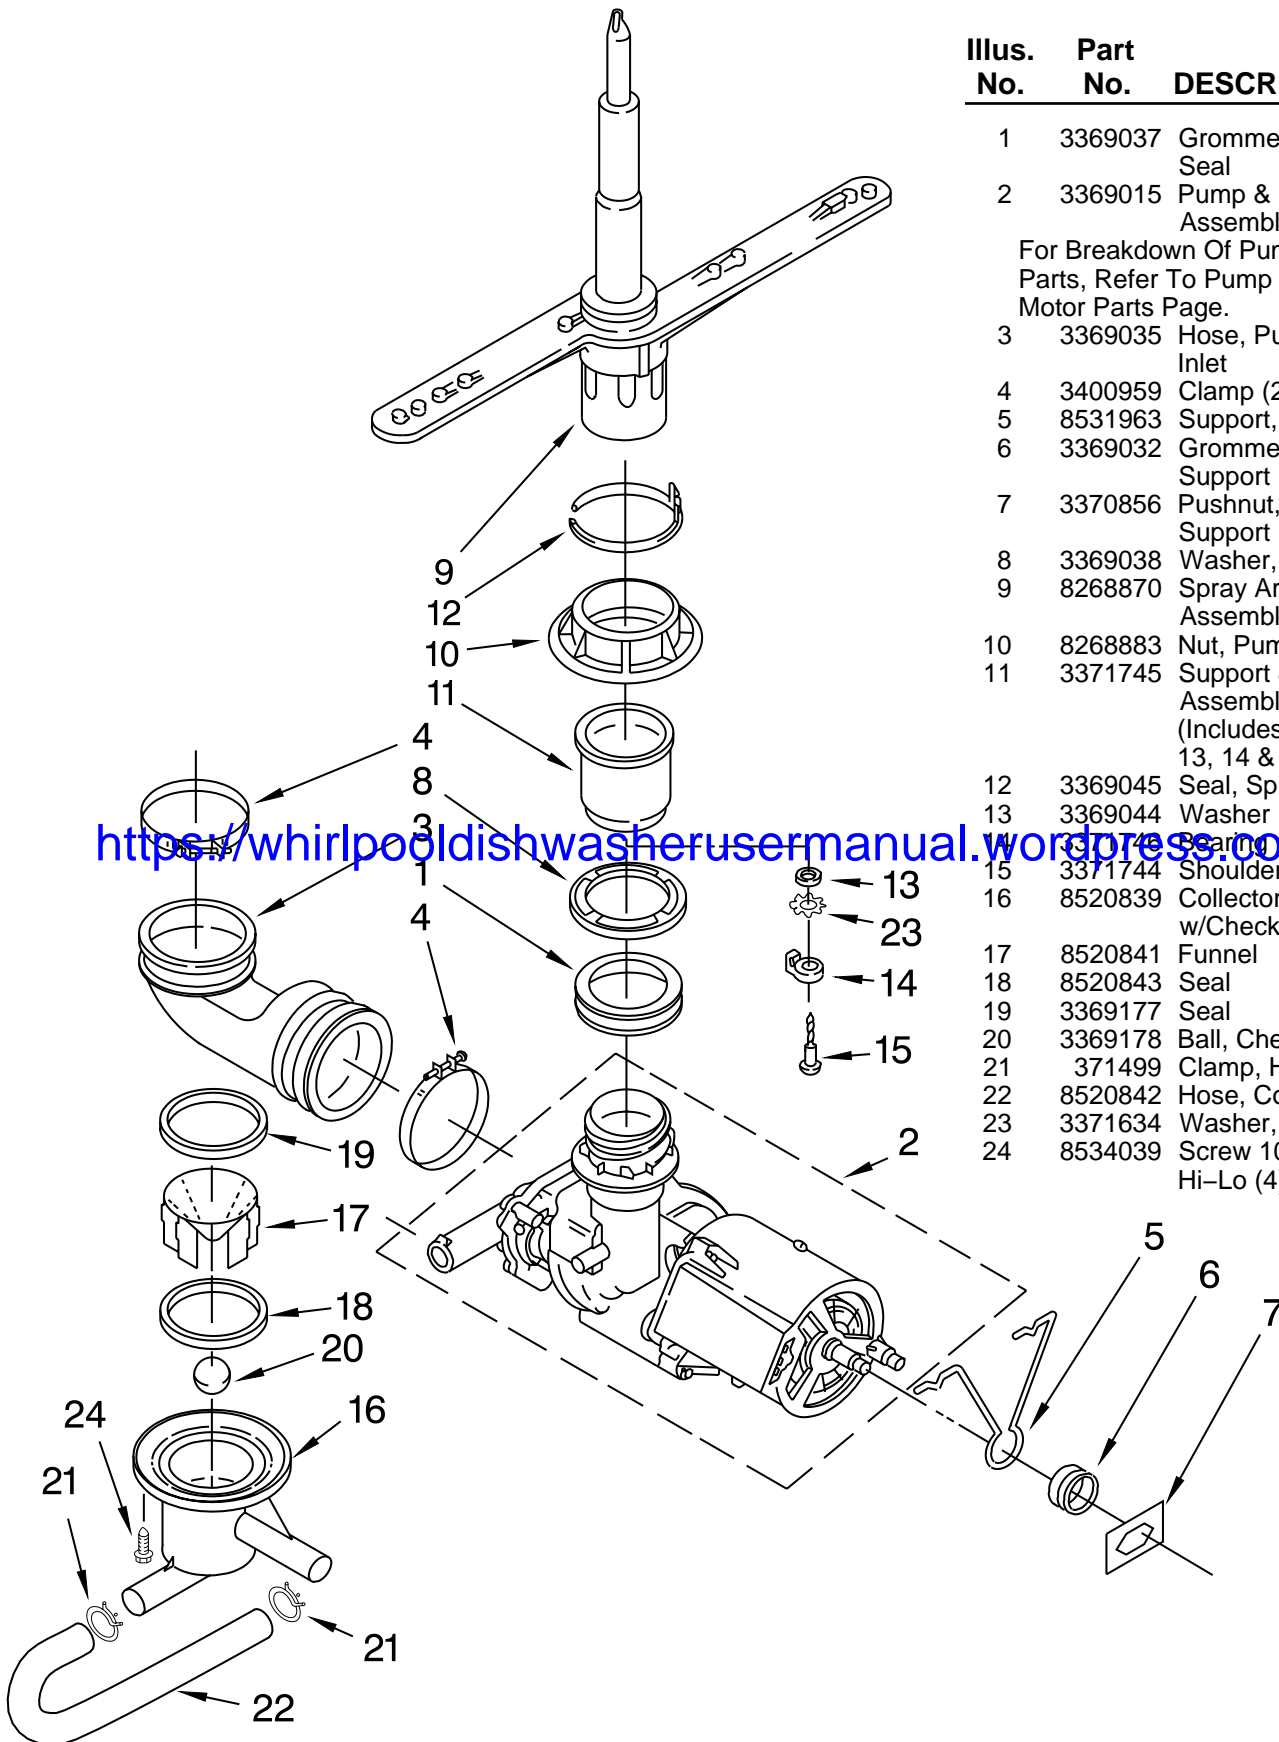


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# PUMP AND MOTOR PARTS

For Model: DU850SWPU3

(Black)

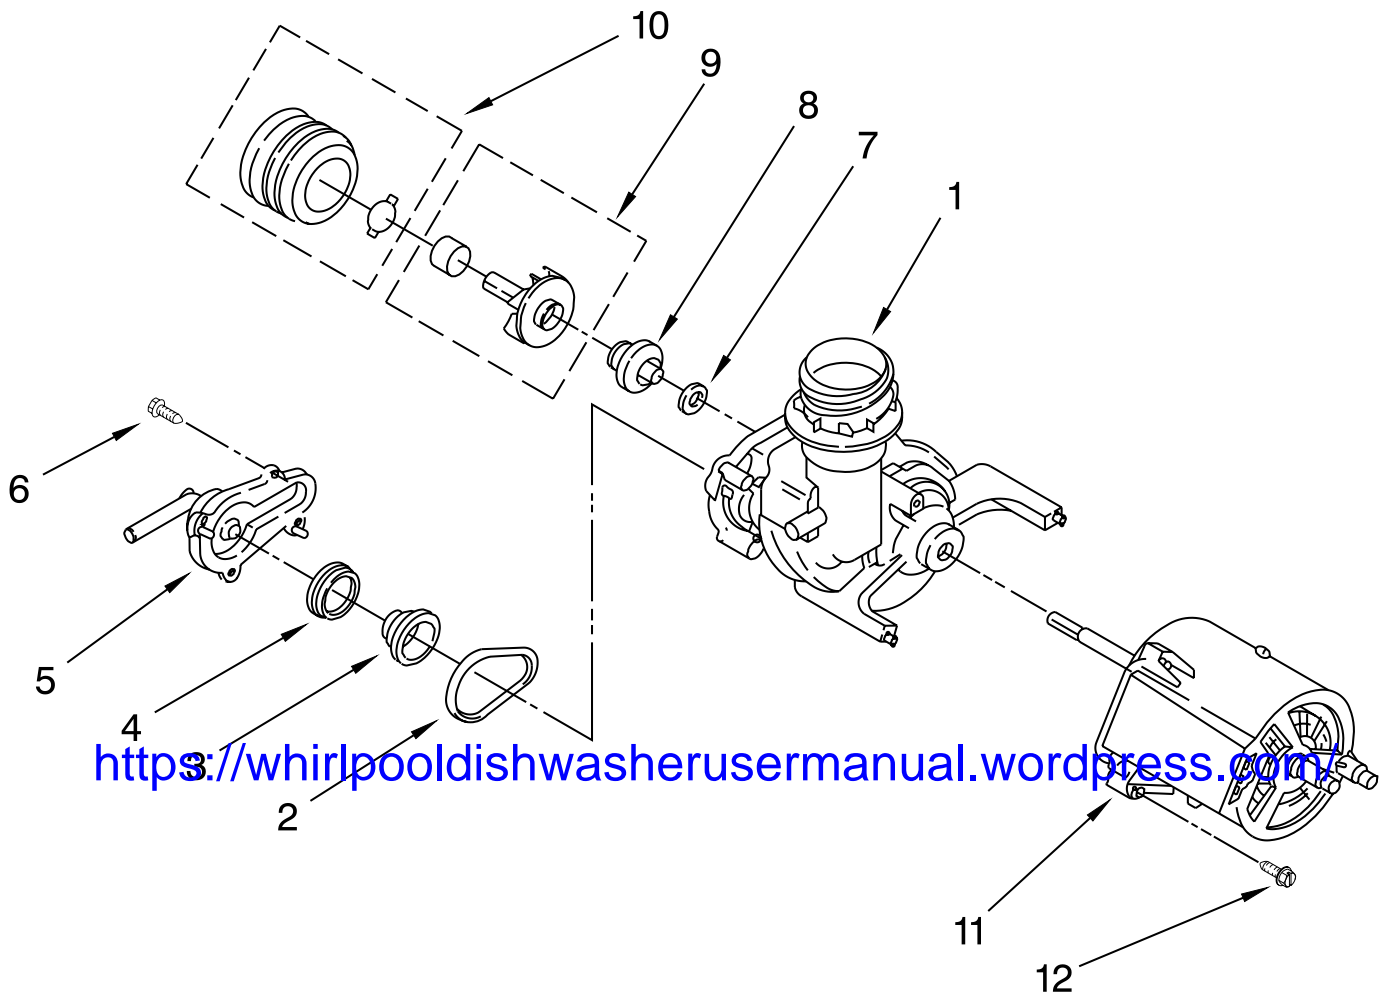

<https://whirlpooldishwasherusermanual.wordpress.com/>


Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	3369028	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DISHRACK PARTS

For Model: DU850SWPU3

(Black)

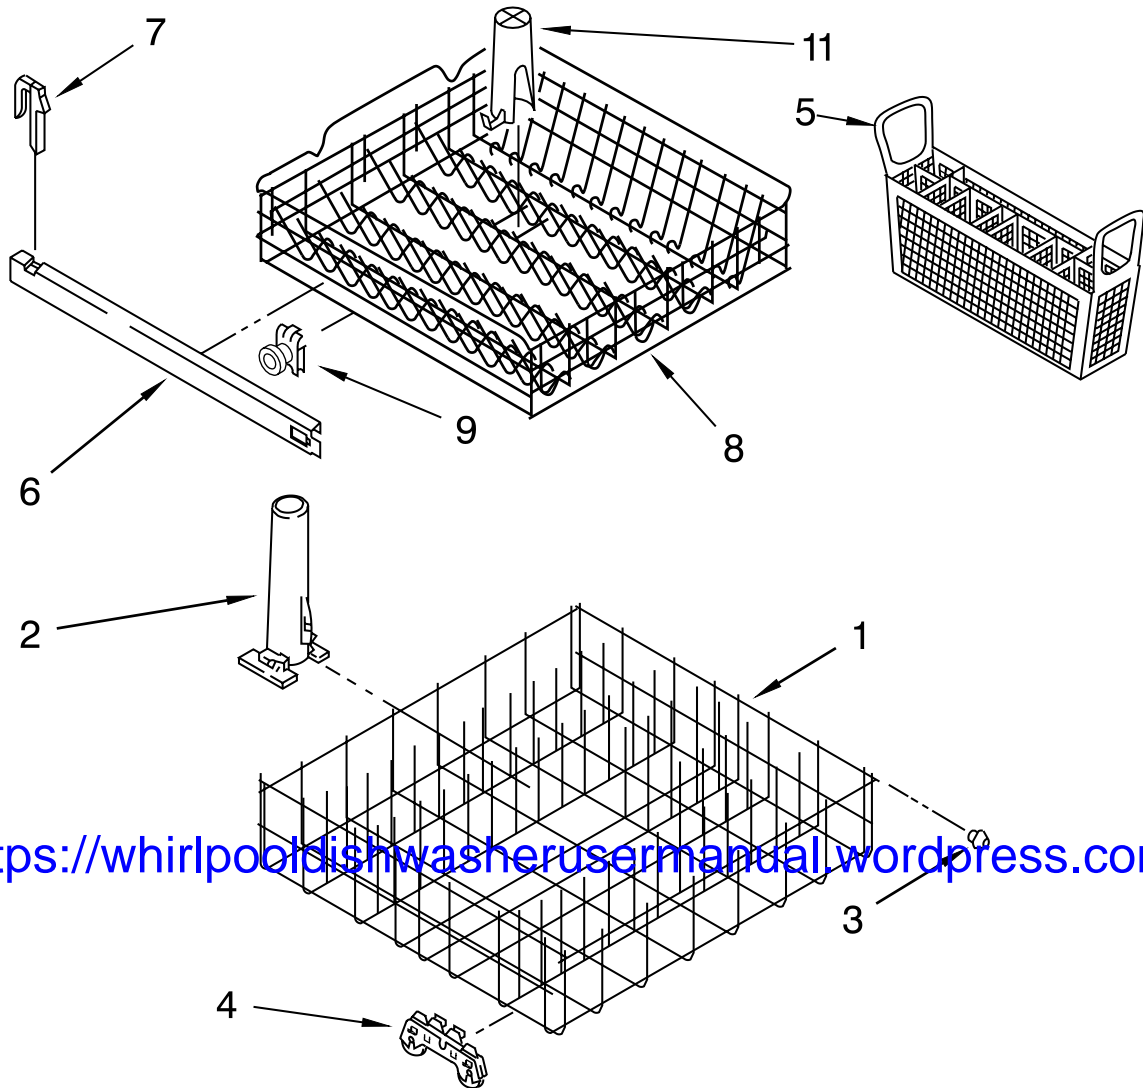

<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	8539225	Dishrack, Lower
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8565920	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Model: DU850SWPU3

(Black)

Illus. No.	Part No.	DESCRIPTION
<b><u>ACCESSORIES</u></b>		
	Side Panel Kits	
	4378867	White
	4378868	Black
	675788	Biscuit
	4378869	Almond
	Custom Trim & Panel Kits	
	675775	Black
	675776	White
	675809	Biscuit
	Moisture Barrier Kit	
	4396277	Kit
	Drain Hose	
	3385556	12 Ft.
	Heavy Duty Spring Kit	
	4318050	Spring

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
	72032	Black
	4392899	Biscuit
<b><u>PAINT, PRESSURIZED SPRAY (12 oz.)</u></b>		
	350930	White
	285006	Superior Black
	4392901	Biscuit
<b><u>PAINT, TOUCH-UP (1 qt.)</u></b>		
	799344	White (Uncut)
	4392900	Biscuit

Illus. No.	Part No.	DESCRIPTION
<b><u>ANTI-TIP KIT</u></b>		
	4378968	Floor Mounting Kit
<b><u>DISHRACK REPAIR</u></b>		
	Tip Tine Repair Kit (Enough for Two Complete Dishracks)	
	4396838	White
	4396840	Grey
	4396854	Silver Atlantis
	Vinyl Touch-Up (4 oz.)	
	676453	White
	676455	Grey
	4396853	Silver Atlantis

<https://whirlpooldishwasherusermanual.wordpress.com/>

## POWER CORD KIT

4317824 Power Cord Kit  
(Includes Power Cord & Misc. Hardware)