




FRAME AND CONSOLE PARTS

UNDERCOUNTER
DISHWASHER

For Model: DU900PCDB0
Almond/Black

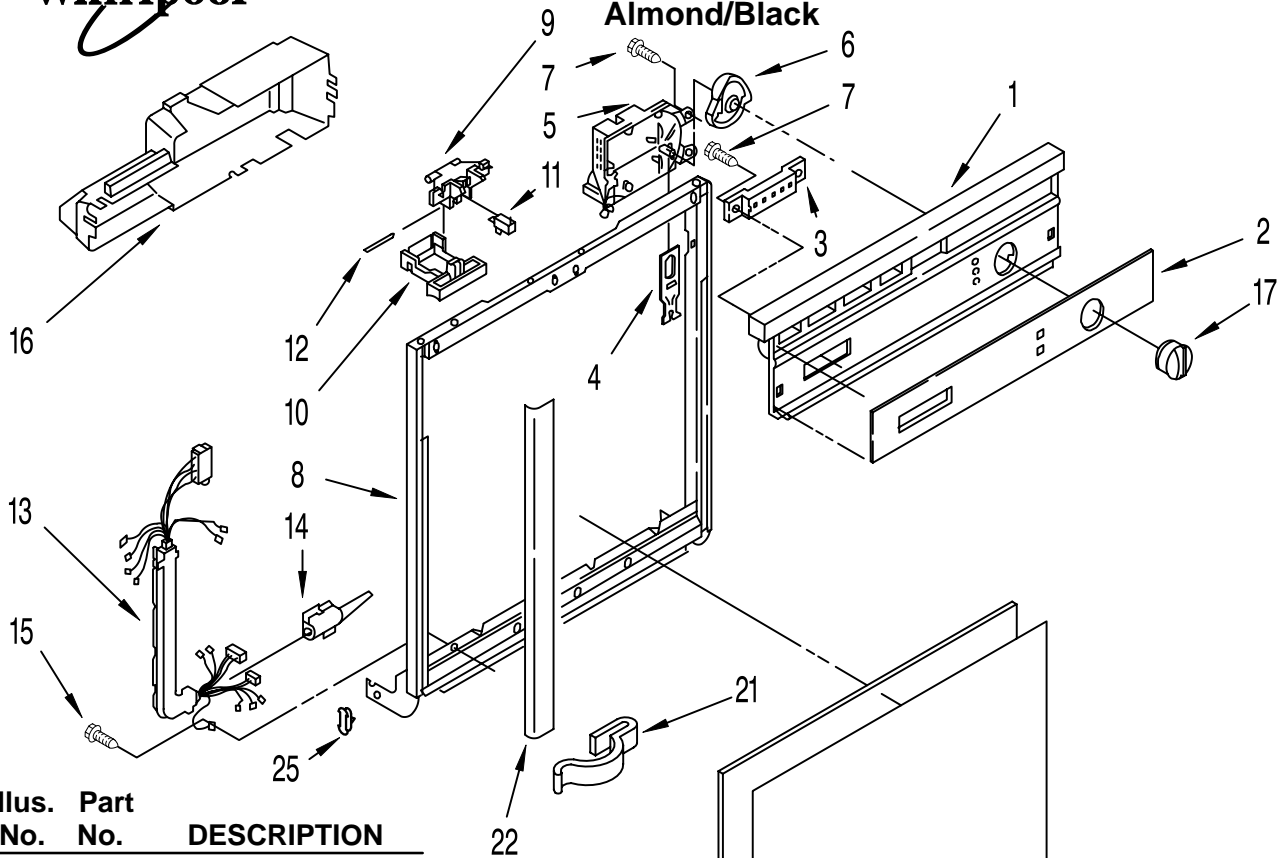

Illus. Part No. No. DESCRIPTION


1	3375273	Console (Almond/Black)
2	3376024	Insert, Console
3	3376027	Switch
4	3369529	Follower, Cam
5	3373626	Timer
6	3369415	Cam
7	304231	Screw,
8	3374711	Door Frame (Includes Item 24)
9	3368953	Bolt, Latch
10	3369457	Lever, Latch
11	3369325	Switch, (2)
12	3368955	Pin, Switch (2)
13	3373621	Harness and Protector
14	3376405	Elbow, Harness
15	3400803	Screw
16	3369192	Cover Timer
17	3375348	Knob, Timer
18	3368979	Spacer, Corrugated
19	3369516	†Panel, Front (Almond/Black)
20	3374010	Retainer, Panel
21	98997	Clip, Harness
22	3376186	Trim (2)
24	3374716	Channel, Retainer (Also Order Item #20)
25	3373234	Bearing, Spring (2)

†Refer To Dishwasher Replacement Panel Parts List No. 675345.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INNER DOOR PARTS

For Model: DU900PCDB0
Almond/Black

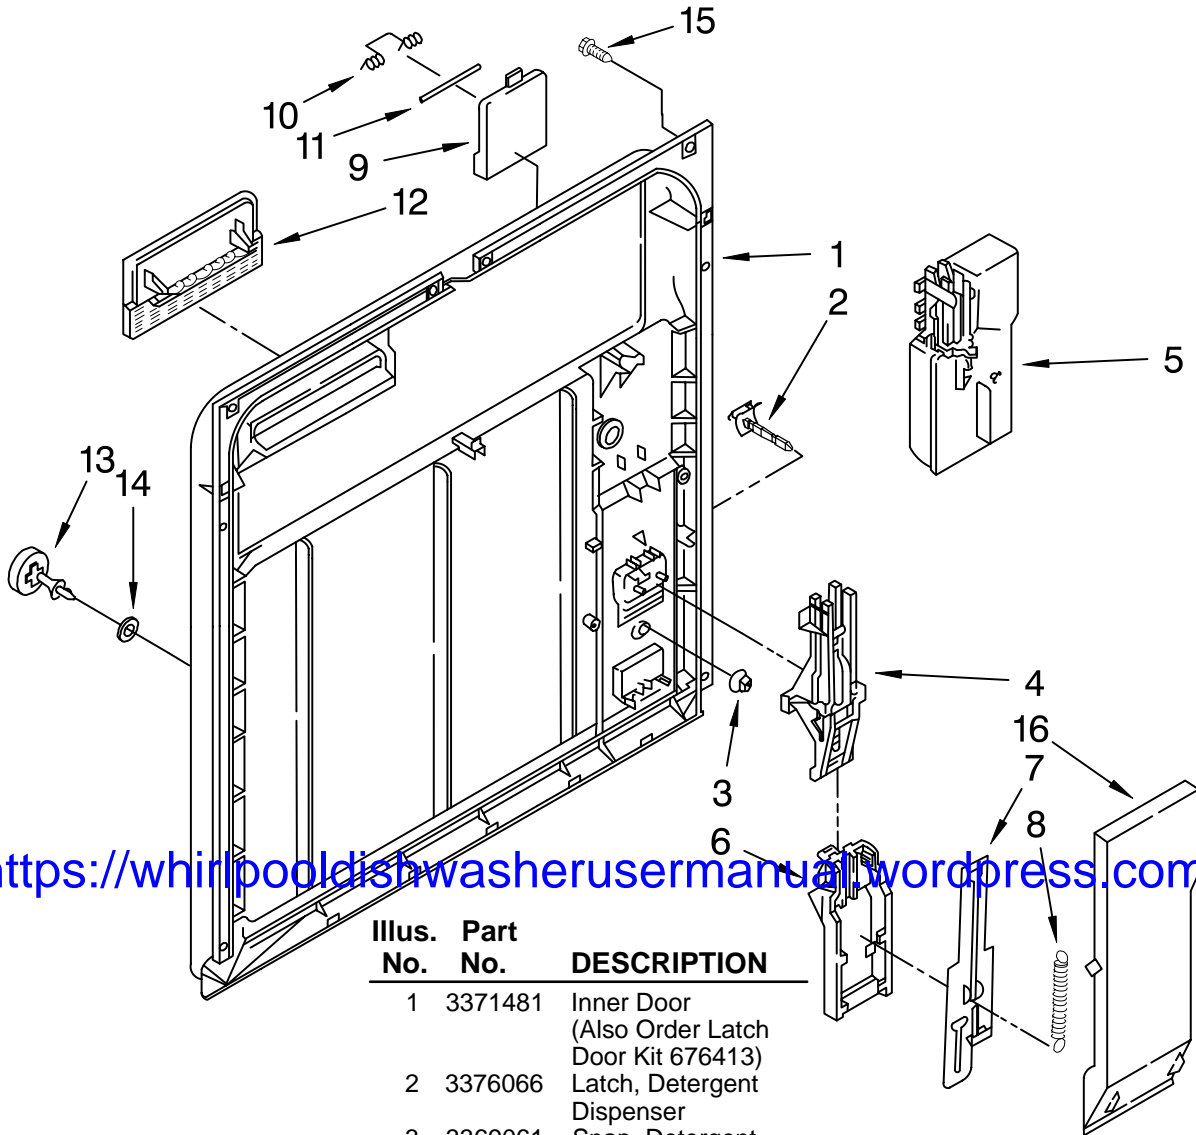


Illus. No.	Part No.	DESCRIPTION
1	3371481	Inner Door (Also Order Latch Door Kit 676413)
2	3376066	Latch, Detergent Dispenser
3	3369061	Snap, Detergent Dispenser
4	3369055	Actuator Assembly
5	3368967	Wet Agent, Dispenser
6	3369000	Draw Bar (Upper Dispenser)
7	3369602	Draw Bar (Lower Dispenser)
8	3368999	Spring (Draw Bar)
9	3376404	Lid Assembly
10	300106	Spring, Lid
11	3372028	Pin (Lid Hinge) (Also Order Item #10)
12	3371710	Screen, Vent
13	3369512	Wet-Agent Cap Assembly
14	3369155	Seal (Wet-Cap)
15	3369051	Screw
16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: DU900PCDB0
Almond/Black

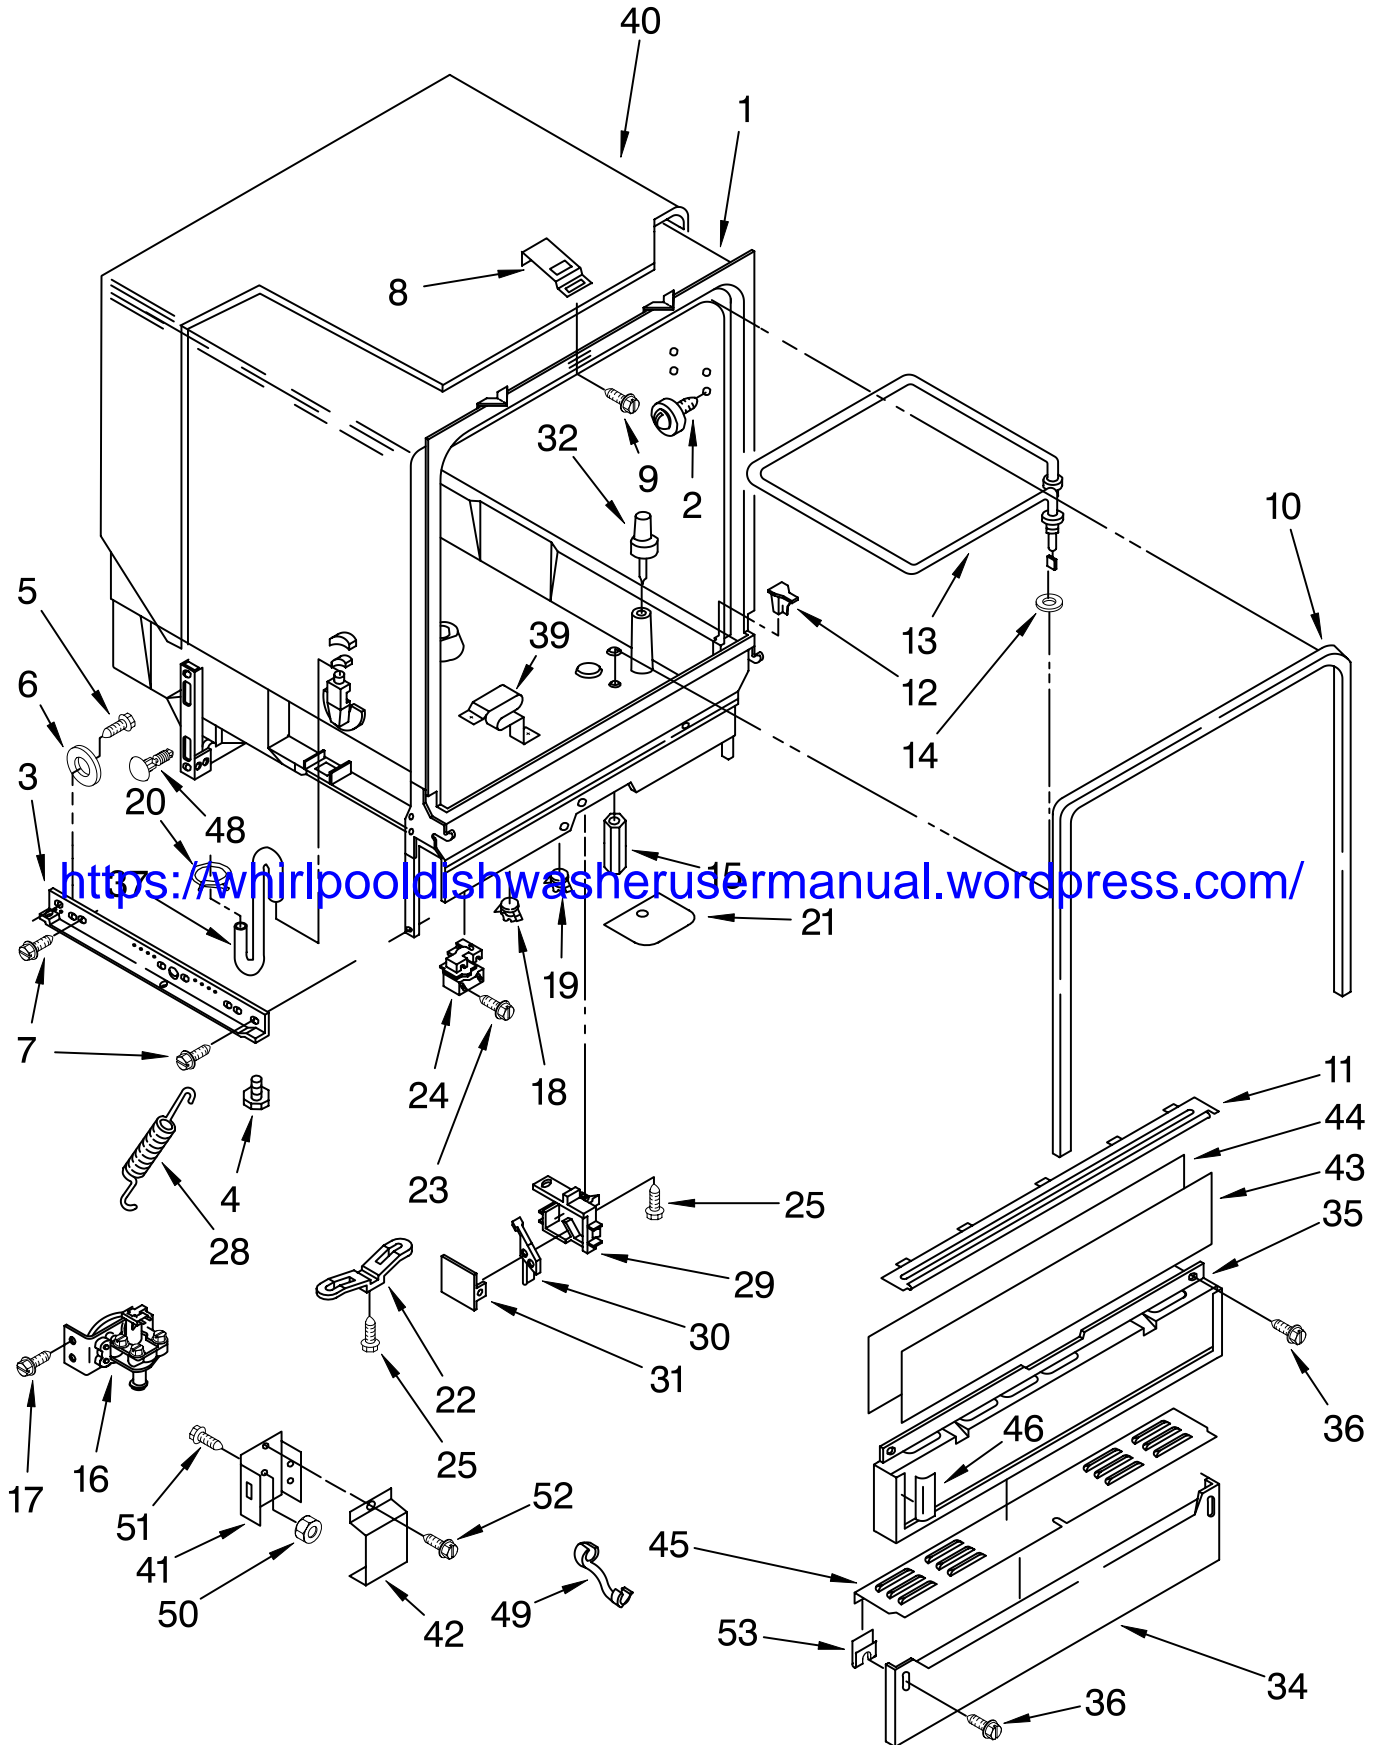

<http://Whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: DU900PCDB0
Almond/Black


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3375130	Tub Assembly	19	3373359	Thermostat	39	3368987	Support, Heater
2	3369078	Tub, Wheel Assembly (8)	20	301958	Clamp	40	3374765	Sound Shield
3	3368932	Runner (2)	21	3376149	Shield, Thermostat	41	3370292	Terminal Box
4	3374849	Leveler (2)	22	3370555	Bracket, Thermostat	42	300068	Cover Assembly, Terminal Box
5	3370389	Screw, Shoulder	23	3370225	Screw	43		†Access Panel
6	302819	Wheel (2)	24	3369447	Relay		3369527	(Almond/Black)
7	343641	Screw,	25	304231	Screw	44	3369526	Spacer, Corrugated
8	3372030	Plate, Latch	28	3374343	Spring, Door (2)	45	3369531	Extension
9	3372029	Screw	29	3369048	Housing, Float Switch	46	3376187	Trim, Side (2)
10	3368994	Gasket	30	3369067	Switch, Float	48	304666	Retainer, Push (2)
11	3372412	Retainer, Access Panel	31	3369049	Cover, Switch Housing	49	3370307	Strain Relief
12	3369052	Deflector (2)	32	3376397	Float & Washer Assembly	50	3371579	Nut
13	3375558	Heater	34	3368942	Toe Panel	51	3371578	Screw
14	717273	Washer, Rubber (2)	35	3369193	Panel, Access	52	3369138	Screw
15	3369073	Nut (2) (Heater Terminal)	36	302868	Screw	53	3368992	Clip, Grounding
16	3374621	Water Valve	37	3369414	Hose, Inlet			
17	304392	Screw						
18	3369777	Thermostat, Hi-Limit						

† Refer To Dishwasher Replacement Panel Parts List No. 675345.

<https://whirlpooldishwasherusermanual.wordpress.com/>

PUMP AND MOTOR PARTS

For Model: DU900PCDB0
Almond/Black

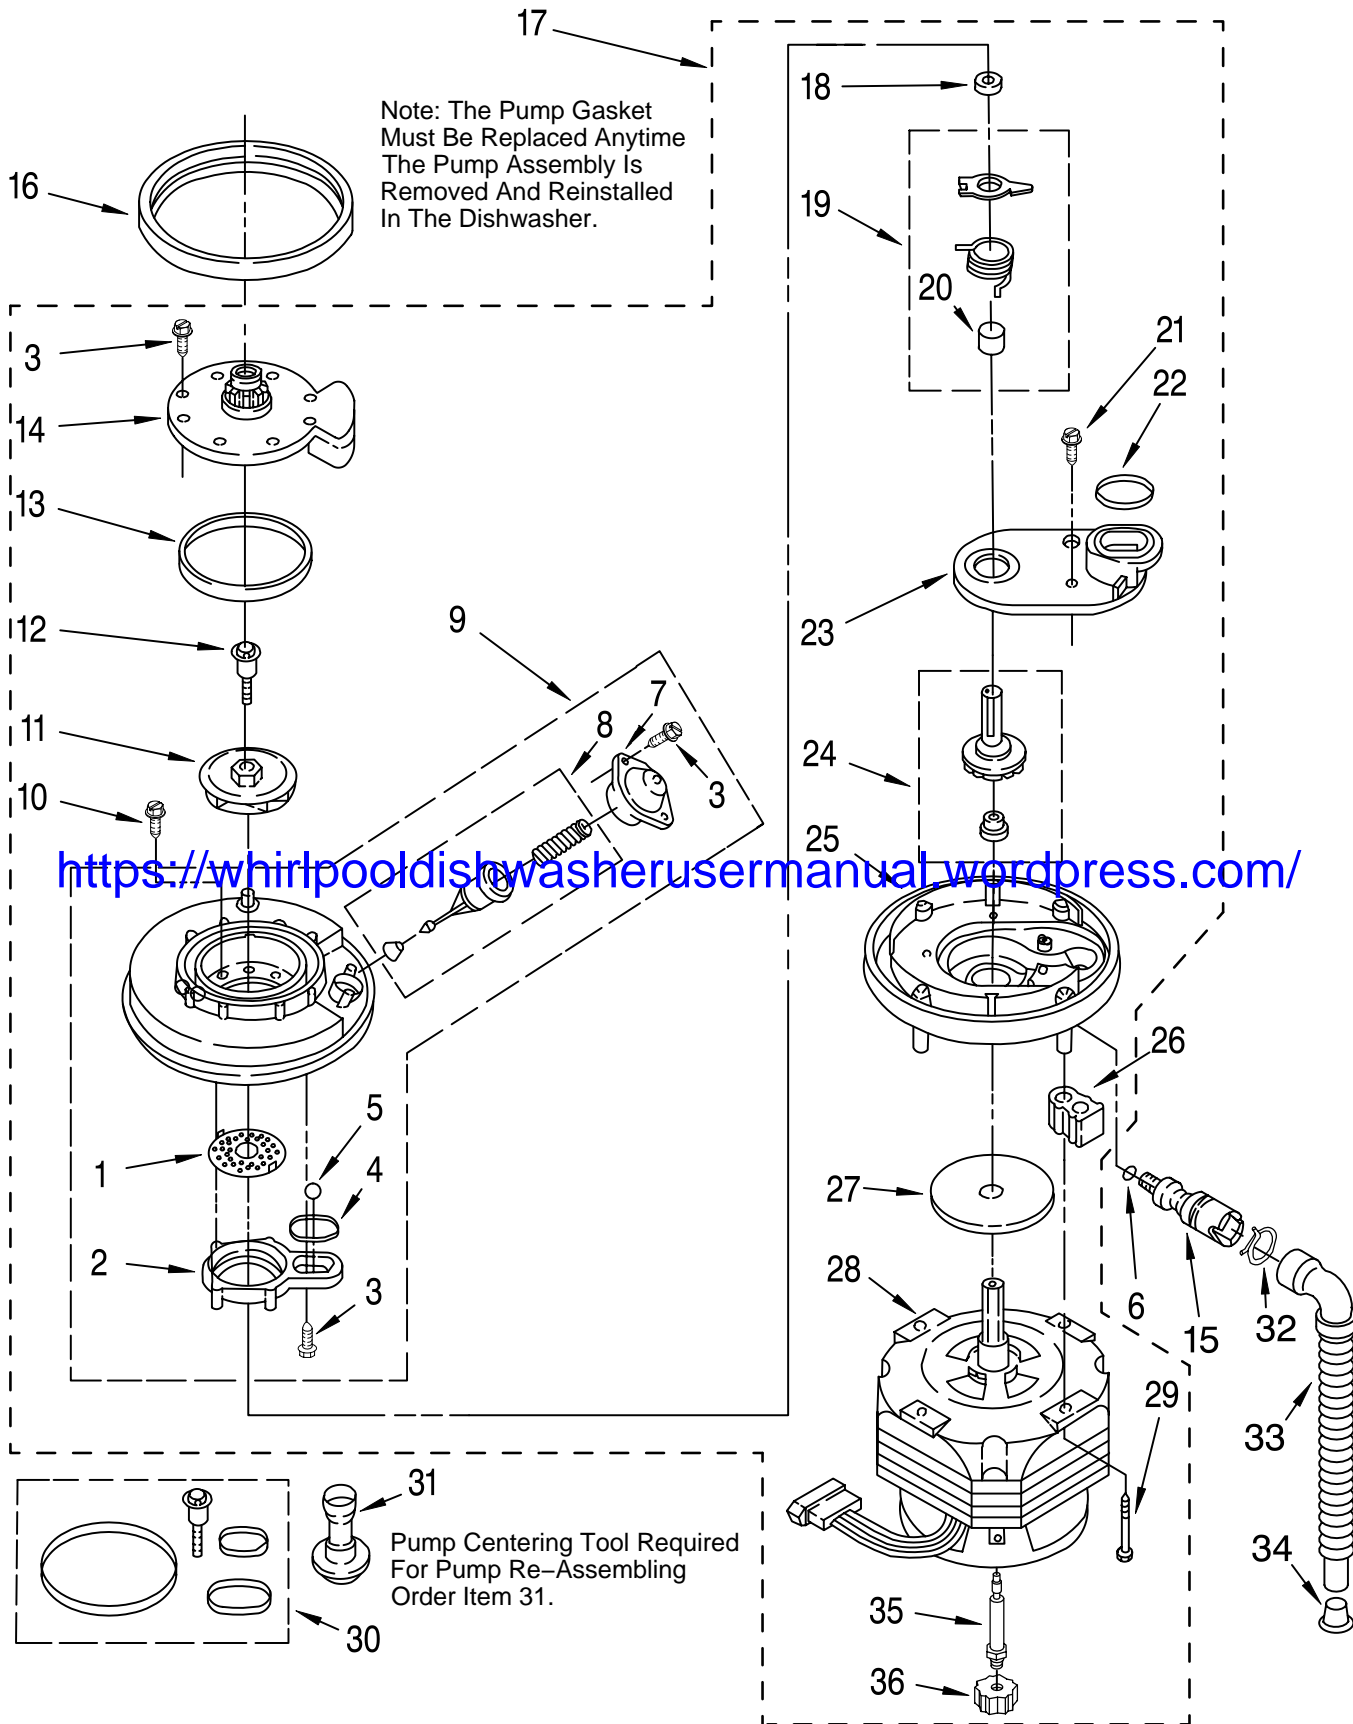

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND MOTOR PARTS

For Model: DU900PCDB0
Almond/Black


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9740982	Plate, Perforated (Includes Item 5) (Also Order Item 30) See Note A.	13	302711	Seal, Pump Outlet	25	3367204	Base, Pump (Includes Item 24) (Also Order Item 30) See Note A.
2	3367173	Base, Inlet (Includes Items 1 & 5) (Also Order Item 30) See Note A.	14	3369478	Outlet, Pump (Includes Item 13)	26	3367197	Support, Pump Mounting (4)
3	9741232	Screw	15	3369482	Check Valve (Includes Item 6)	27	3368270	Slinger (See Note A.)
4	302710	Seal, Inlet Base	16	717000	Gasket, Pump	28	3374753	Motor (Includes Item 27) (Also Order Item 30) See Note A.
5	302709	Ball, Check	17	3375493	Pump & Motor Assembly (Includes Item 16)	29	3369331	Screw
6	95080	"O" Ring	18	302707	Bushing, Grind	30	675505	Pump Seal Kit (Includes Items 4, 12, 13 & 22)
7	302721	Cover, Valve	19	302718	Chopper Kit (Also Order Item 30) See Note A.	31	303918	Tool, Pump Centering
8	302738	Valve Stem Kit (Includes Items 12, 13 & 22) See Note A.	20	302705	Sleeve, Drain Impeller	32	356138	Clamp, Hose
9	303883	Separator Assembly (Includes Items 12, 13 & 22) See Note A.	21	9741321	Screw	33	3368781	Hose, Drain
10	9741258	Screw	22	302704	Seal, Drain Cover	34	3371748	Cap, Drain
11	303510	Impeller, Wash (Includes Items 12 & 13)	23	302723	Cover, Drain (Also Order Item 30) See Note A.	35	3374757	Shaft, Absorber
12	337172	Screw & Seal	24	303539	Impeller, Drain Kit (Also Order Item 30) See Note A.	36	3374756	Weight, Absorber

NOTE A:
Pump Centering Tool Required
For Pump Re-Assembling—
Order Item 31.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DISHRACK PARTS

For Model: DU900PCDB0
Almond/Black

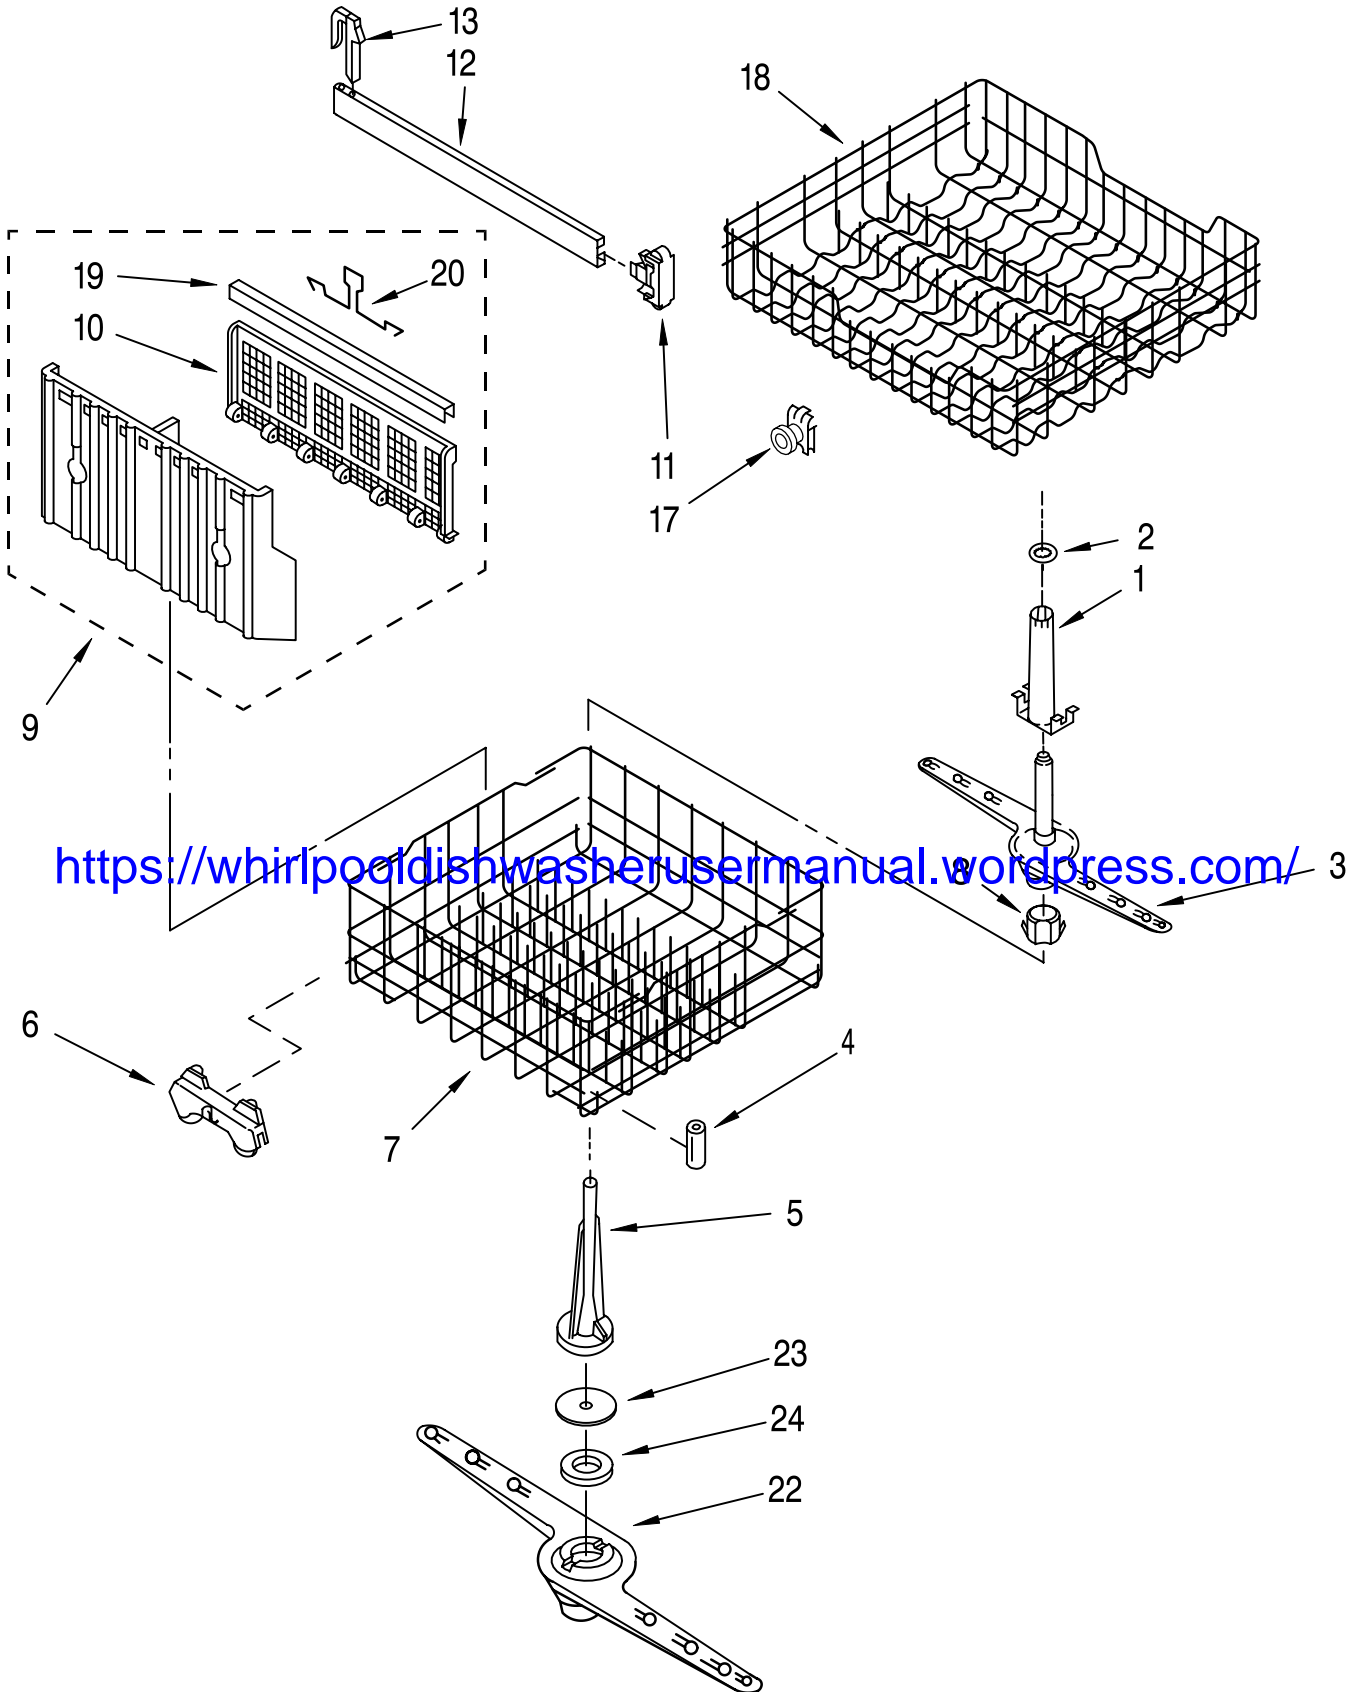

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DISHRACK PARTS

For Model: DU900PCDB0
Almond/Black

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3368290	Support, Arm	OPTIONAL PARTS NOT INCLUDED					
2	303722	Clip	PAINT, TOUCH-UP (1/2oz.)					
3	3368300	Spray Arm, Upper (Includes Item #8)		72017	White	ACCESSORY PARTS		
4	3368006	Bumper (2)		72107	Almond	4317925		White
5	300848	Tower, Pressure		72032	Black	4317926		Avocado
6	3369509	Wheel & Transport Assembly (4)	PAINT, PRESSURIZED SPRAY (13 oz.)					
7	3370490	Dishrack, Lower (Includes Items 4 & 6)		350956	Almond	4317927		Gold
8	3374702	Support Lock, Spray Arm		285006	Superior Black	4317929		Almond
9	3369488	Silverware Basket Assembly		350941	Primer (White)	4317930		Toast
10	3369485	Cover, Basket	PAINT, TOUCH-UP (1 qt.)					
11	300845	End Cap (Front or Rear)		978883	Almond (Uncut)	4317931		Platinum
12	3369071	Track		799340	Black (Uncut)	4318050		Heavy Duty
13	3374701	Stop, Track (2)	DISHRACK REPAIR					
17	3371581	Wheel & Axle Assembly (4)		675576	Vinyl Touch-Up (Blue)	LITERATURE PARTS		
18	3371663	Dishrack, Upper		675677	Tine Tip Repair Kit (Blue-- Enough For Two Complete Dishracks)	LIT3369679		Instructions, Installation
19	717528	Trim, Basket		676453	Vinyl Touch-Up (White)	LIT3367007		Instructions, Installation (Supplement) (Locating Your Water Supply) Energy Guide
20	300086	Handle, Basket		675679	Tine Tip Repair Kit (White-- Enough For Two Complete Dishracks)	LIT3373751		Guide, Use & Care
22	3369347	Sprayarm, Lower		676455	Vinyl Touch-Up (Grey)	LIT3373631		Wiring Diagram
23	3367910	Cap, Nozzle		676458	Tine Tip Repair Kit (Grey-- Enough For Two Complete Dishracks)	LIT0677967		Do-It Yourself, Manual
24	719576	Bearing, Nozzle						

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST