




FRAME AND CONSOLE PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

UNDERCOUNTER
DISHWASHER

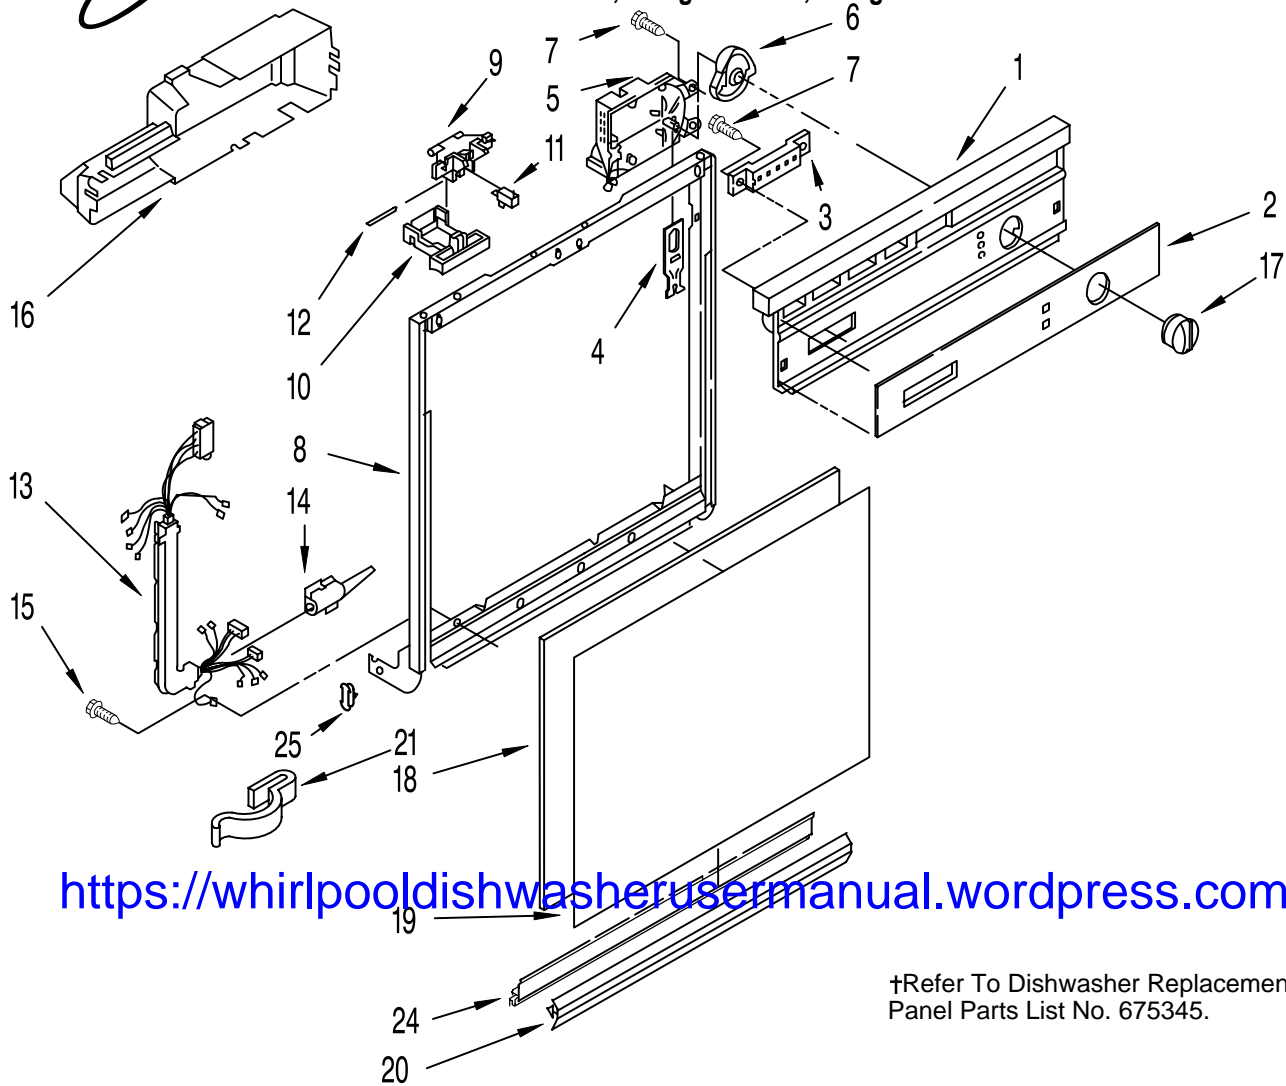

<https://whirlpooldishwasherusermanual.wordpress.com/>


†Refer To Dishwasher Replacement Panel Parts List No. 675345.

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Console (Includes Item 2)	8		Door Frame (Includes Item 24)	17		Knob, Timer
	3375273	Black		3374711	Black		3375348	Black
	3375274	White		3374712	White		3375349	White
	3375275	Almond		3374713	Almond		3375350	Almond
2		Insert, Console	9	3368953	Bolt, Latch	18	3368979	Spacer, Corrugated
	3376024	Black	10		Lever, Latch	19		†Panel, Front
	3376025	White		3369457	Black		3369516	(Almond/Black)
	3376026	Almond		3372232	White		3369769	(Black/White)
3		Switch		3375061	Almond	20	3374011	Retainer, Panel
	3376027	Black	11	3369325	Switch, (2)		3374010	Black
	3376028	White	12	3368955	Pin, Switch (2)		3374011	White
	3376029	Almond	13	3378948	Harness and Protector		3374012	Almond
4	3369529	Follower, Cam	14	3376405	Elbow, Harness	21	98997	Clip, Harness
5	3373626	Timer	15	3400803	Screw	24	3374716	Channel, Retainer (Also Order Item #20)
6	3378124	Cam	16		Cover Timer	25	3373234	Bearing, Spring (2)
7	304231	Screw,		3375473	Black Model			
				3373367	White Model			
				3373367	Almond Model			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INNER DOOR PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

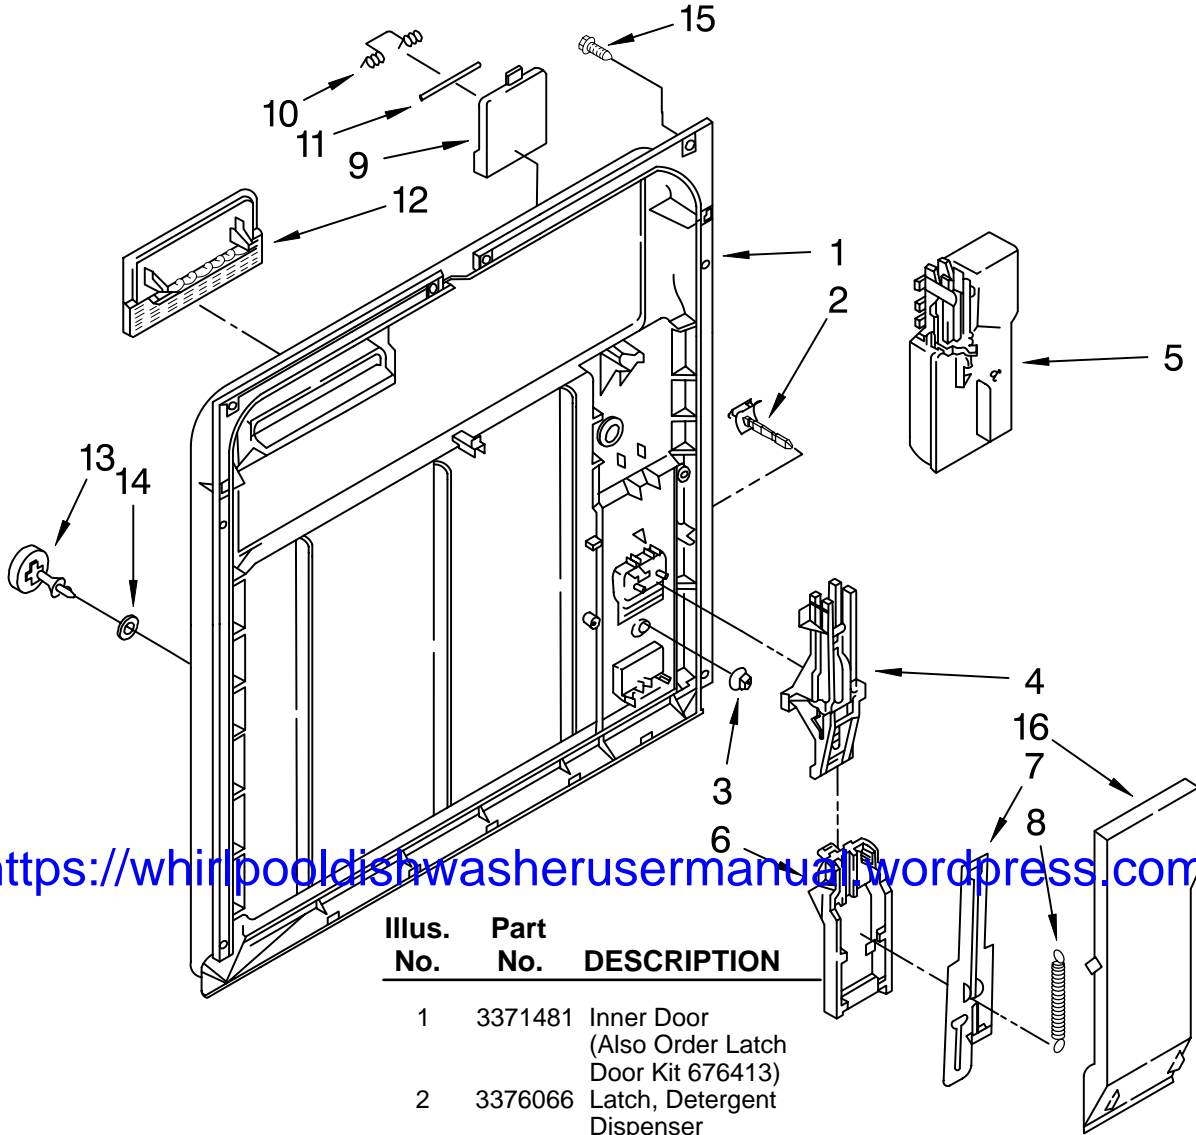


Illus. No.	Part No.	DESCRIPTION
1	3371481	Inner Door (Also Order Latch Door Kit 676413)
2	3376066	Latch, Detergent Dispenser
3	3369061	Snap, Detergent Dispenser
4	3369055	Actuator Assembly
5	3368967	Wet Agent, Dispenser
6	3369000	Draw Bar (Upper Dispenser)
7	3369602	Draw Bar (Lower Dispenser)
8	3368999	Spring (Draw Bar)
9	3376404	Lid Assembly
10	300106	Spring, Lid
11	3372028	Pin (Lid Hinge) (Also Order Item #10)
12	3371710	Screen, Vent
13	3369512	Wet-Agent Cap Assembly
14	3369155	Seal (Wet-Cap)
15	3369051	Screw
16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

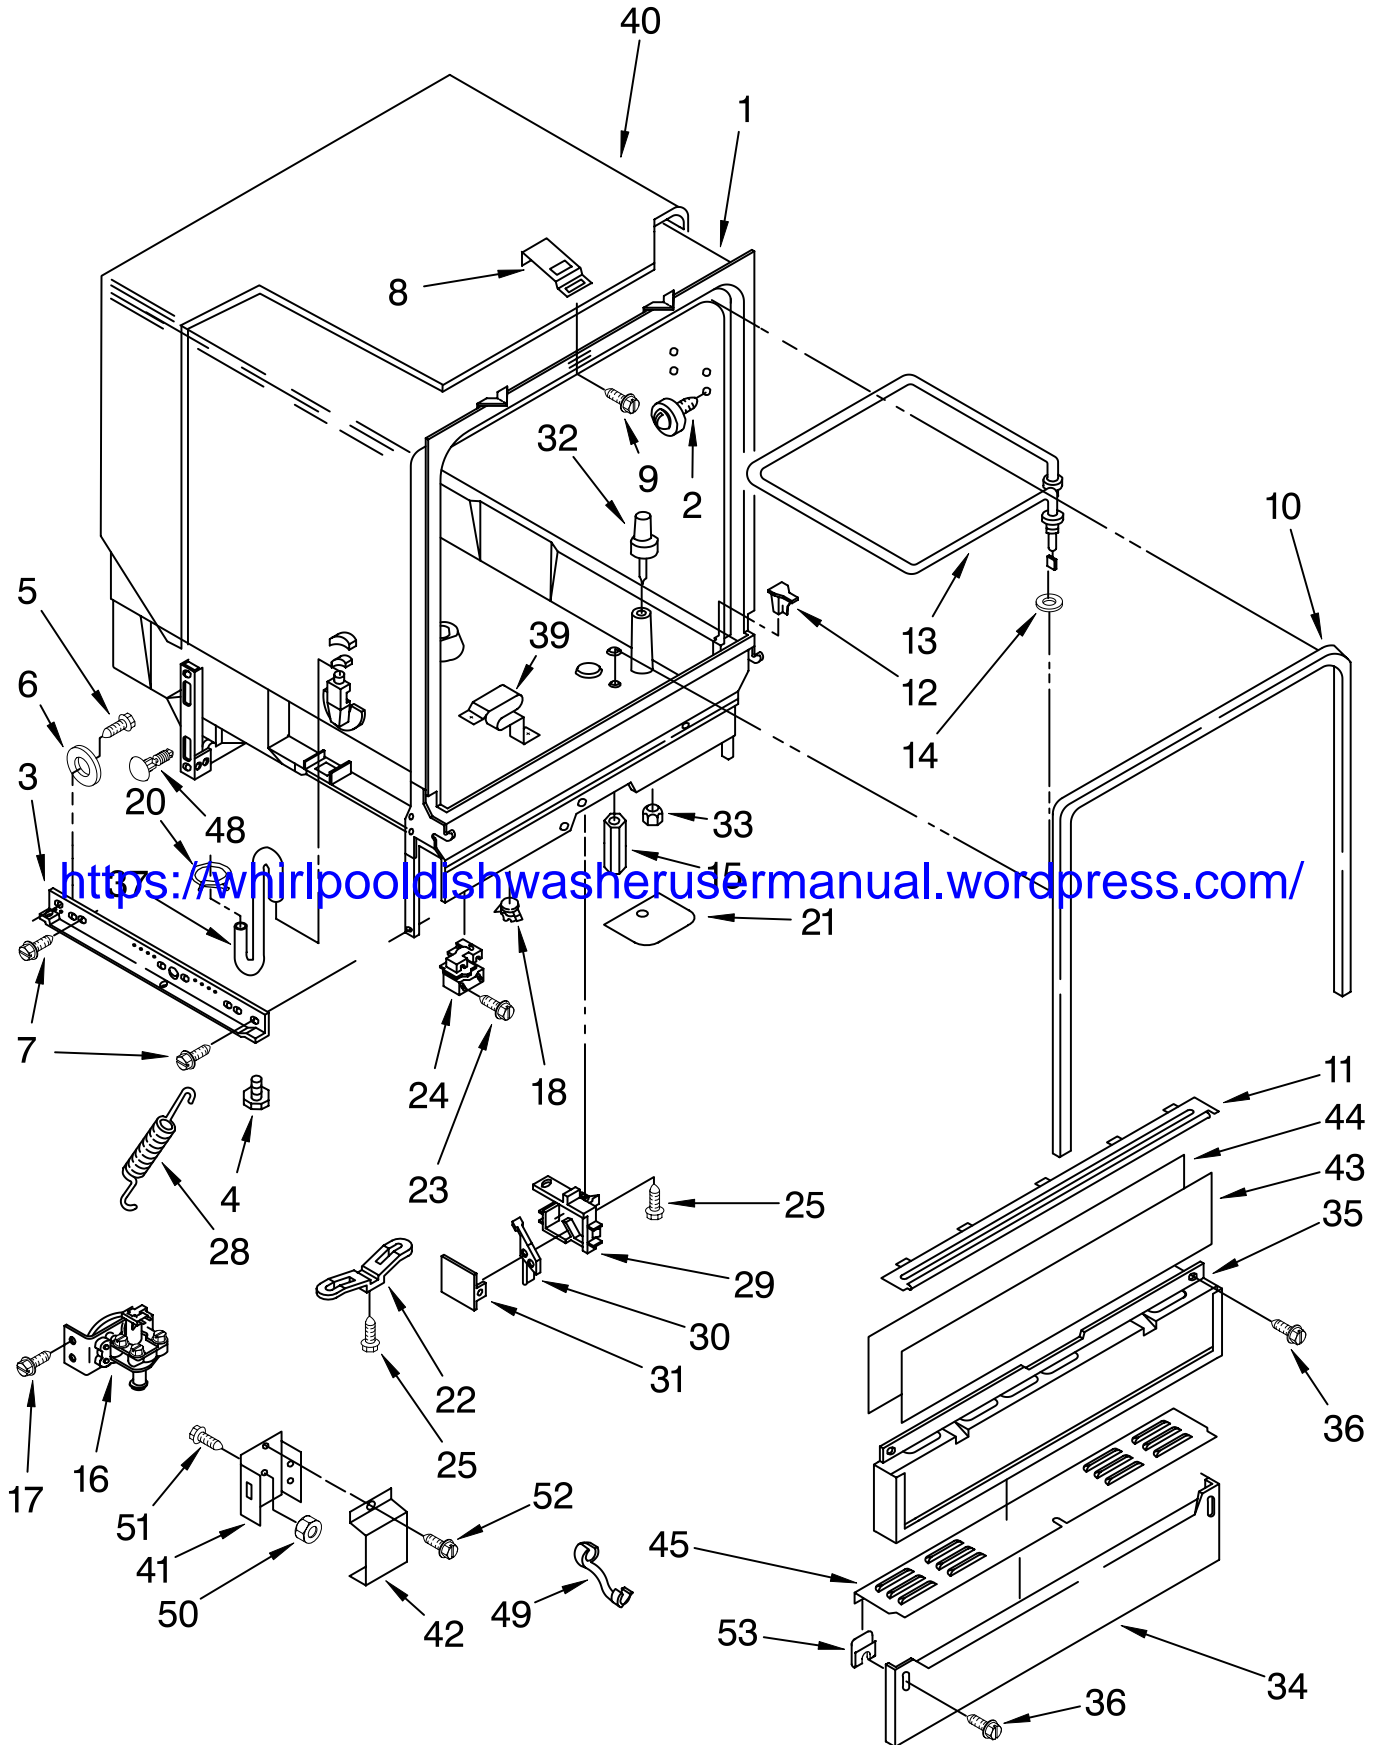

<http://Whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS


For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3375130	Tub Assembly	18	3369777	Thermostat, Hi-Limit	35	3369614	Panel, Access
2	3369078	Tub, Wheel Assembly (8)	20	301958	Clamp	36	302868	Screw
3	3368933	Runner (2)	21	3376149	Shield, Thermostat	37	3369414	Hose, Inlet
4	3376439	Leveler (2)	22	3378595	Bracket, Thermostat	39	3368987	Support, Heater (3)
5	3370389	Screw, Shoulder	23	3370225	Screw	40	9743172	Sound Shield
6	302819	Wheel (2)	24	3369447	Relay	41	3370292	Terminal Box
7	343641	Screw,	25	304231	Screw	42	300068	Cover Assembly, Terminal Box
8	3374719	Plate, Latch	28	3374343	Spring, Door (2)	43	3370868	†Access Panel (White/Black)
9	3374720	Screw	29	3369048	Housing, Float Switch	44	3369526	Spacer, Corrugated
10	3376927	Gasket	30	3369067	Switch, Float	45	3374728	Extension & Clip Assembly
11	3372413	Retainer, Access Panel	31	3369049	Cover, Switch Housing	48	304666	Retainer, Push (2)
12	3369052	Deflector (2)	32	3376397	Float & Washer Assembly	49	3370307	Strain Relief
13	3376843	Heater	33	717488	Nut	50	3371579	Nut
14	717273	Washer, Rubber (2)	34	9742861	Toe Panel	51	3371578	Screw
15	3369073	Nut (2) (Heater Terminal)				52	3369138	Screw
16	3378779	Water Valve				53	3378123	Clip, Grounding
17	304392	Screw						

<https://whirlpooldishwasherusermanual.wordpress.com/>

PUMP AND MOTOR PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

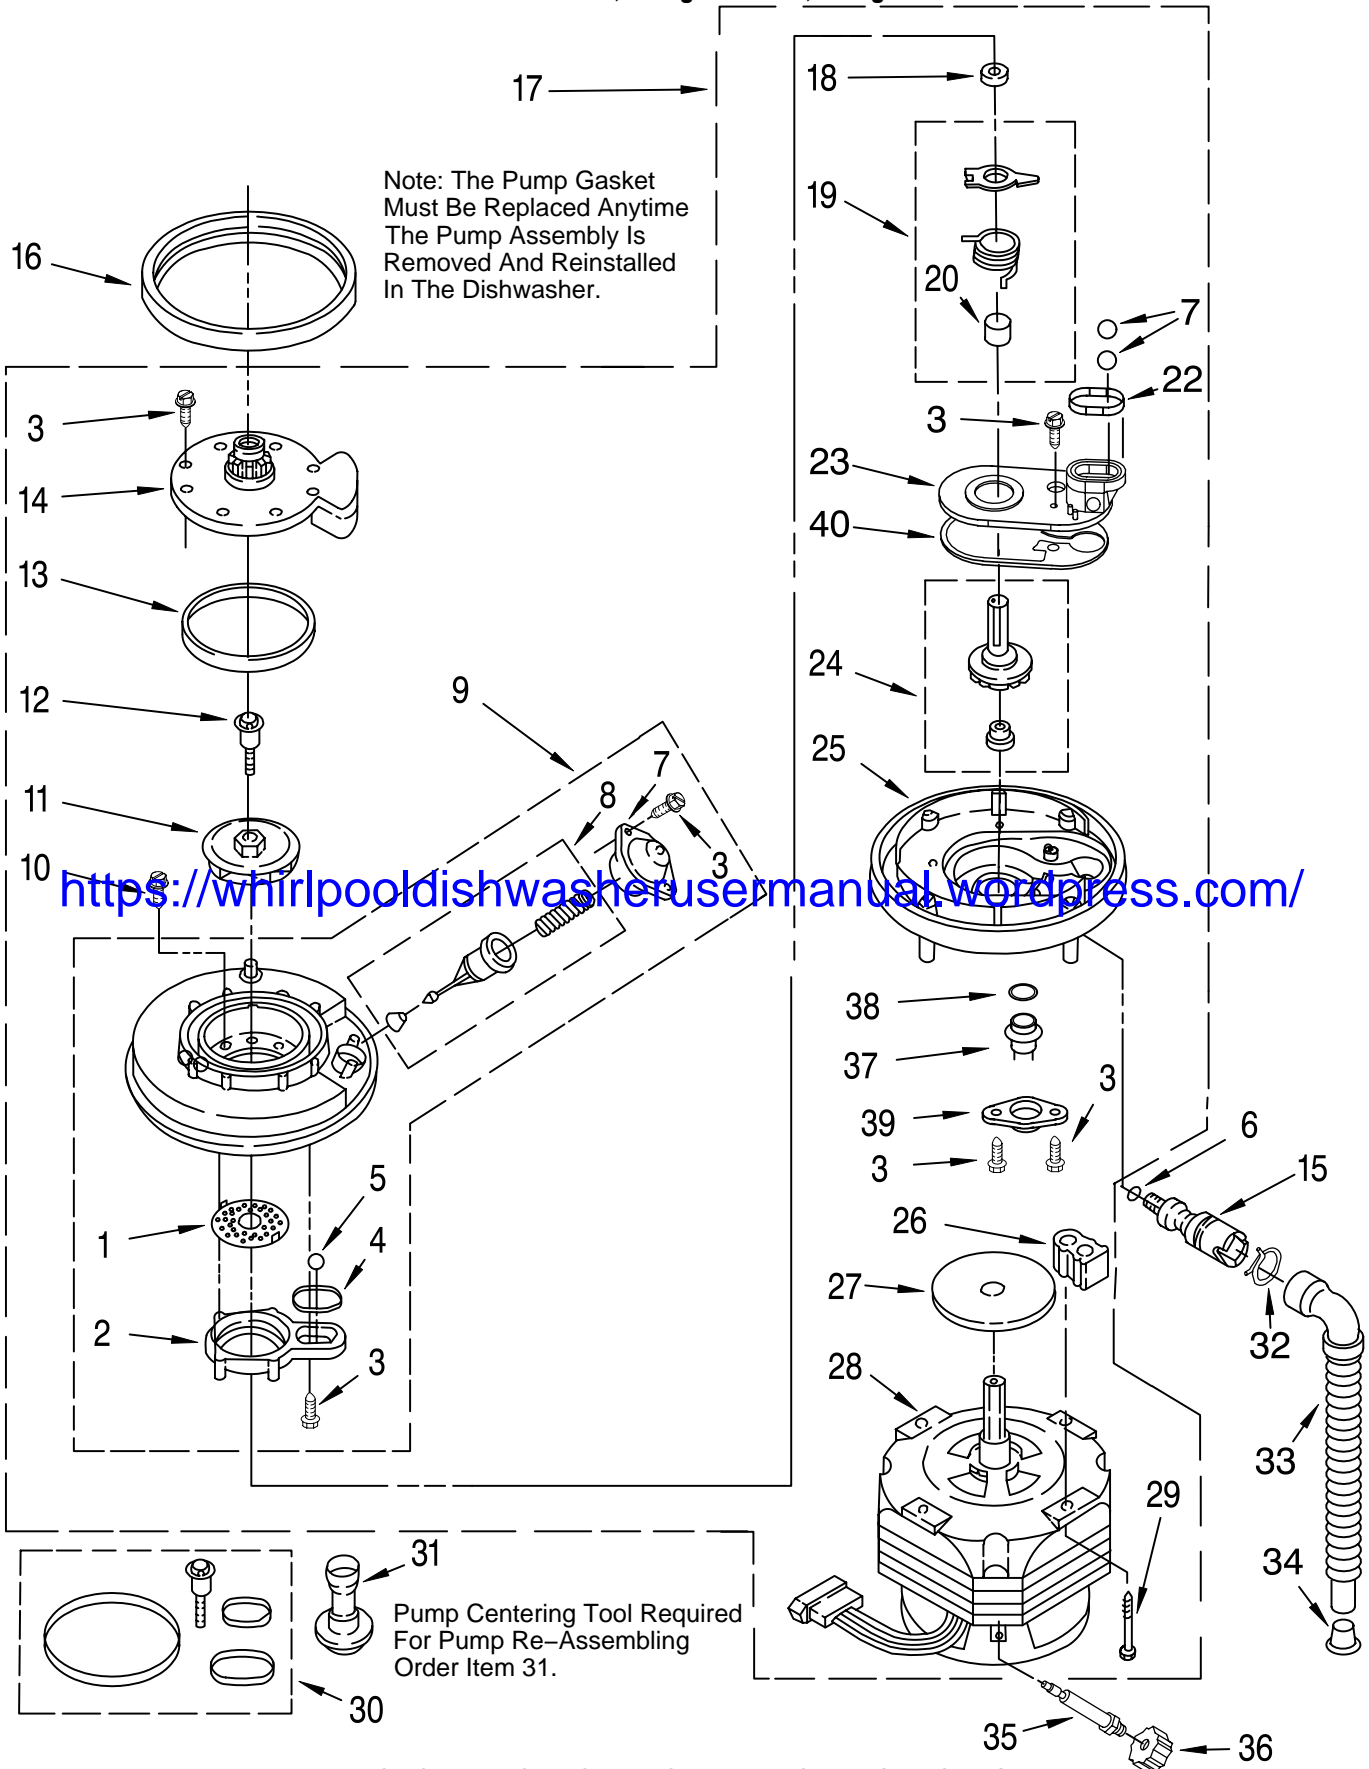

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND MOTOR PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9740982	Plate, Perforated (Includes Item 5) (Also Order Item 30) See Note A.	15	3369482	Check Valve (Includes Item 6)	27	3368270	Slinger (See Note A.)
2	3367173	Base, Inlet (Includes Items 1 & 5) (Also Order Item 30) See Note A.	16	717000	Gasket, Pump	28	3376765	Motor & Fan Assembly (Includes Item 27) (Also Order Item 30) See Note A.
3	9741232	Screw	17	3376752	Pump & Motor Assembly (Includes Item 16)	29	3369331	Screw
4	302710	Seal, Inlet Base	18	302707	Bushing, Grind	30	675505	Pump Seal Kit (Includes Items 4, 12, 13 & 22)
5	302709	Ball, Check	19	302718	Chopper Kit (Also Order Item 30) See Note A.	31	303918	Tool, Pump Centering
6	95080	"O" Ring	20	302705	Sleeve, Drain Impeller	32	356138	Clamp, Hose
7	302721	Cover, Valve	21	9741321	Screw	33	3374077	Hose, Drain
8	302738	Valve Stem Kit (Includes Items 12, 13 & 22) See Note A.	22	302704	Seal, Drain Cover	34	3371748	Cap, Drain
9	303882	Separator Assembly (Includes Items 12, 13 & 22) See Note A.	23	3378207	Cover, Drain (Also Order Item 30) See Note A.	35	3374757	Shaft, Absorber
10	3400001	Screw	24	303539	Impeller, Drain Kit (Also Order Item 30) See Note A.	36	3374756	Weight, Absorber
11	303510	Impeller, Wash (Includes Items 12 & 13) See Note A.	25	3376157	Base, Pump (Also Order Item 30) See Note A.	37	3378083	Thermostat
12	3371152	Screw & Seal	26	3367197	Support, Pump Mounting (4)	38	3376723	Seal, O-Ring
13	302711	Seal, Pump Outlet				39	3376358	Retainer, Thermostat
14	3369478	Outlet, Pump (Includes Item 13)				40	9740674	Gasket, Drain Cover

<https://whirlpooldishwasherusermanual.wordpress.com/>

NOTE:
Pump Centering Tool Required
For Pump Re-Assembling—
Order Item 31.

DISHRACK PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

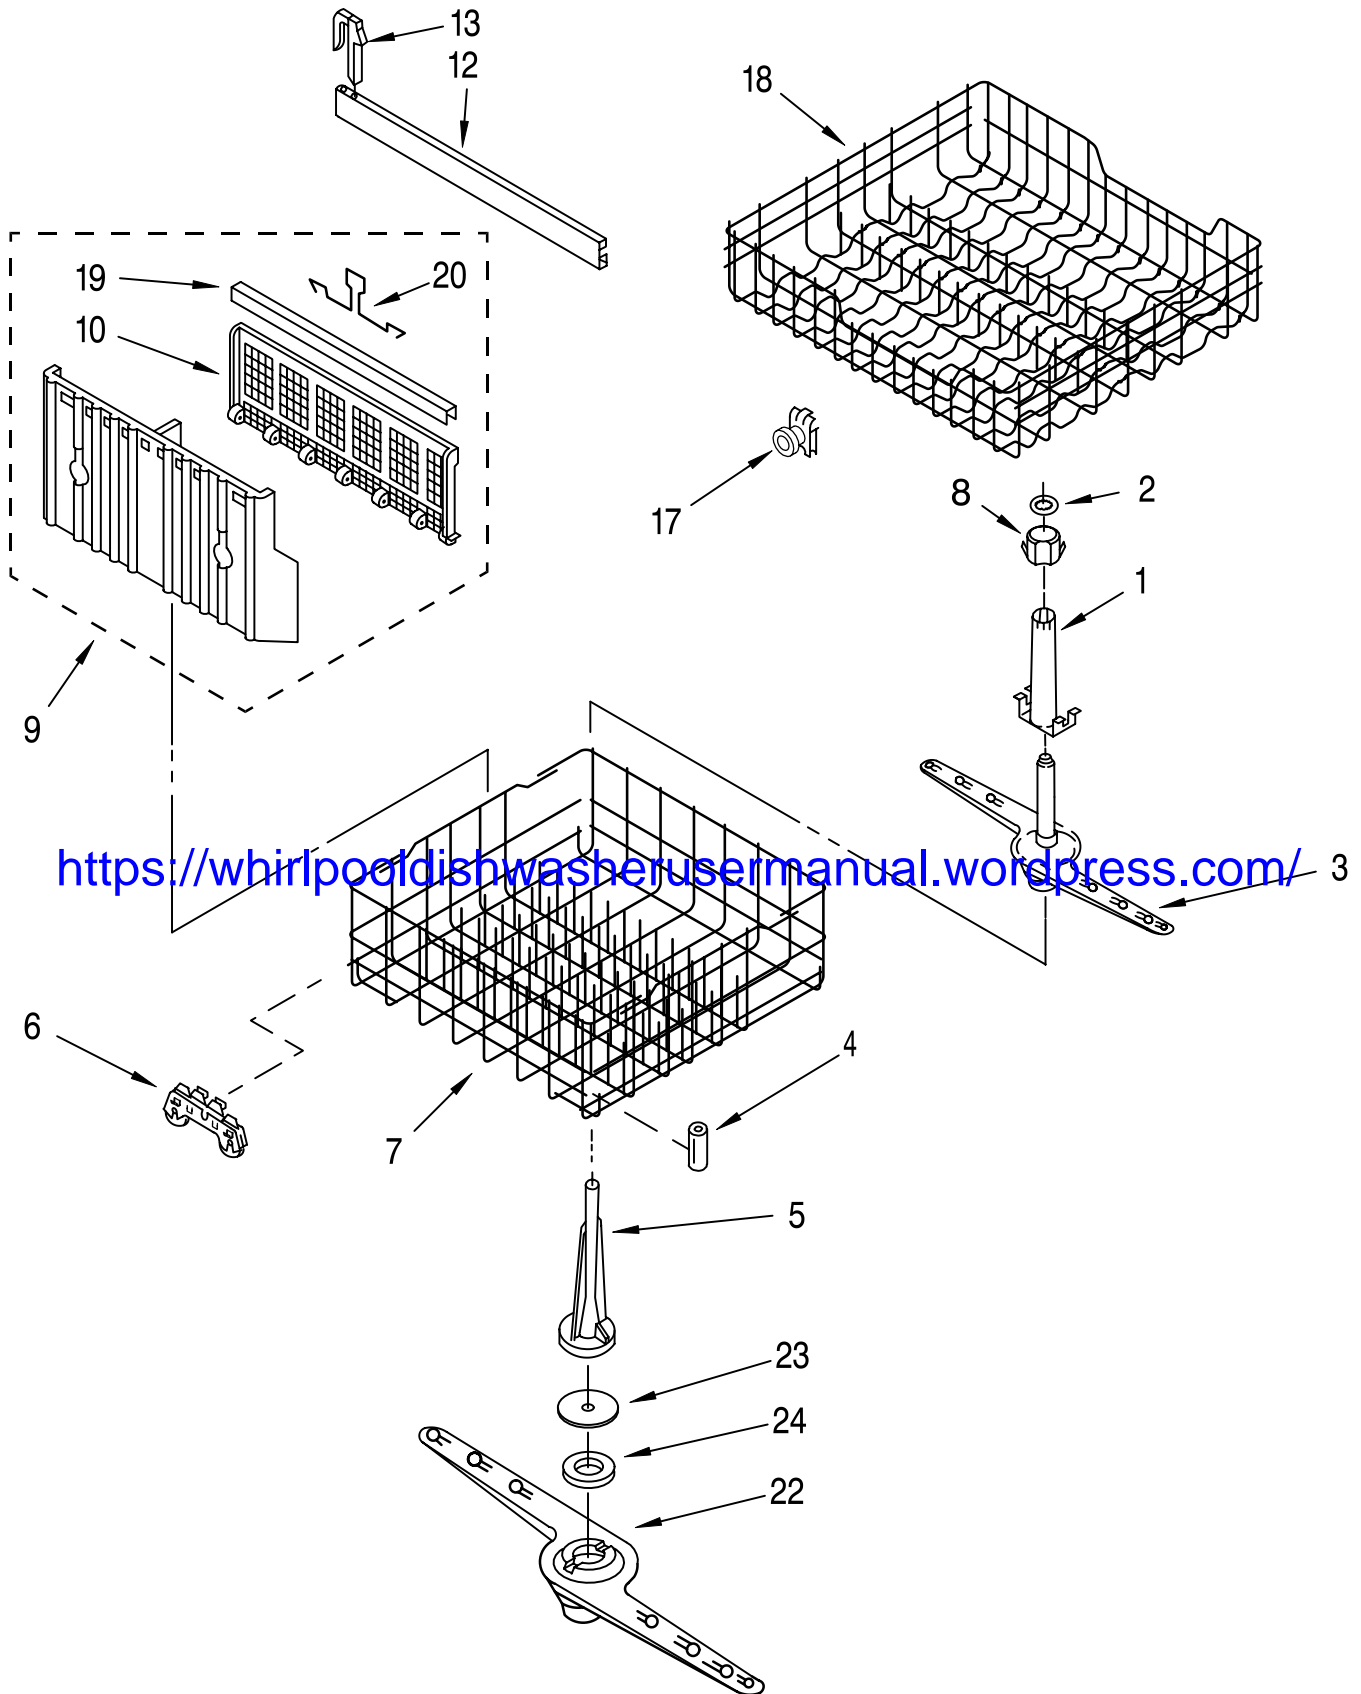

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DISHRACK PARTS


For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

Illus. No.	Part No.	DESCRIPTION
1	3368290	Support, Arm (Also Order Items 2 & 8)
2	303722	Clip
3	3368300	Spray Arm, Upper (Also Order Items 2 & 8)
4	3368006	Bumper (2)
5	300848	Tower, Pressure
6	3376961	Wheel & Transport Assembly (4)
7	3370490	Dishrack, Lower (Includes Items 4 & 6)
8	3374702	Support Lock, Spray Arm
9	3369488	Silverware Basket Assembly
10	3369485	Cover, Basket
12	3379489	Track
13	9743472	Stop, Track (4)
17	3371581	Wheel & Axle Assembly (4)
18	3371663	Dishrack, Upper
19	717528	Trim, Basket
20	300086	Handle, Basket
22	3369347	Sprayarm, Lower
23	3369347	Cap, Nozzle
24	719576	Bearing, Nozzle

<https://whirlpooldishwasherusermanual.wordpress.com/>

MISCELLANEOUS PARTS

For Model: DU900PCDB4 ,DU900PCDQ4, DU900PCDZ4
Black, Designer White, Designer Almond

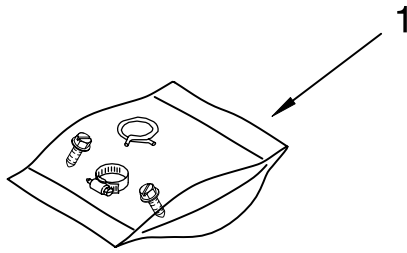

Illus. No.	Part No.	DESCRIPTION
1	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)

LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
LITERATURE PARTS			OPTIONAL PARTS NOT INCLUDED					
LIT3369679		Instructions, Installation	PAINT, TOUCH-UP (1/2oz.)			DISHRACK REPAIR		
LIT3367007		Instructions, Installation (Supplement) (Locating Your Water Supply)	72017	White		675576		Vinyl Touch-Up (Blue)
LIT3379136		Energy Guide	72107	Almond		675677		Tine Tip Repair Kit (Blue-- Enough For Two Complete Dishracks)
LIT3376816		Guide, Use & Care	PAINT, PRESSURIZED SPRAY (13 oz.)			676453		Vinyl Touch-Up (White)
LIT3379047		Wiring Diagram	350956	Almond		675679		Tine Tip Repair Kit (White-- Enough For Two Complete Dishracks)
LIT0677967		Do-It Yourself, Manual	285006	Superior Black		676455		Vinyl Touch-Up (Grey)
ACCESSORY PARTS			350941	Primer (White)		676458		Tine Tip Repair Kit (Grey-- Enough For Two Complete Dishracks)
			PAINT, TOUCH-UP (1 qt.)					
4317925		White	978883	Almond (Uncut)				
4317929		Almond	799340	Black (Uncut)				
4318050		Heavy Duty						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST