




# FRAME AND CONSOLE PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)

UNDERCOUNTER  
DISHWASHER

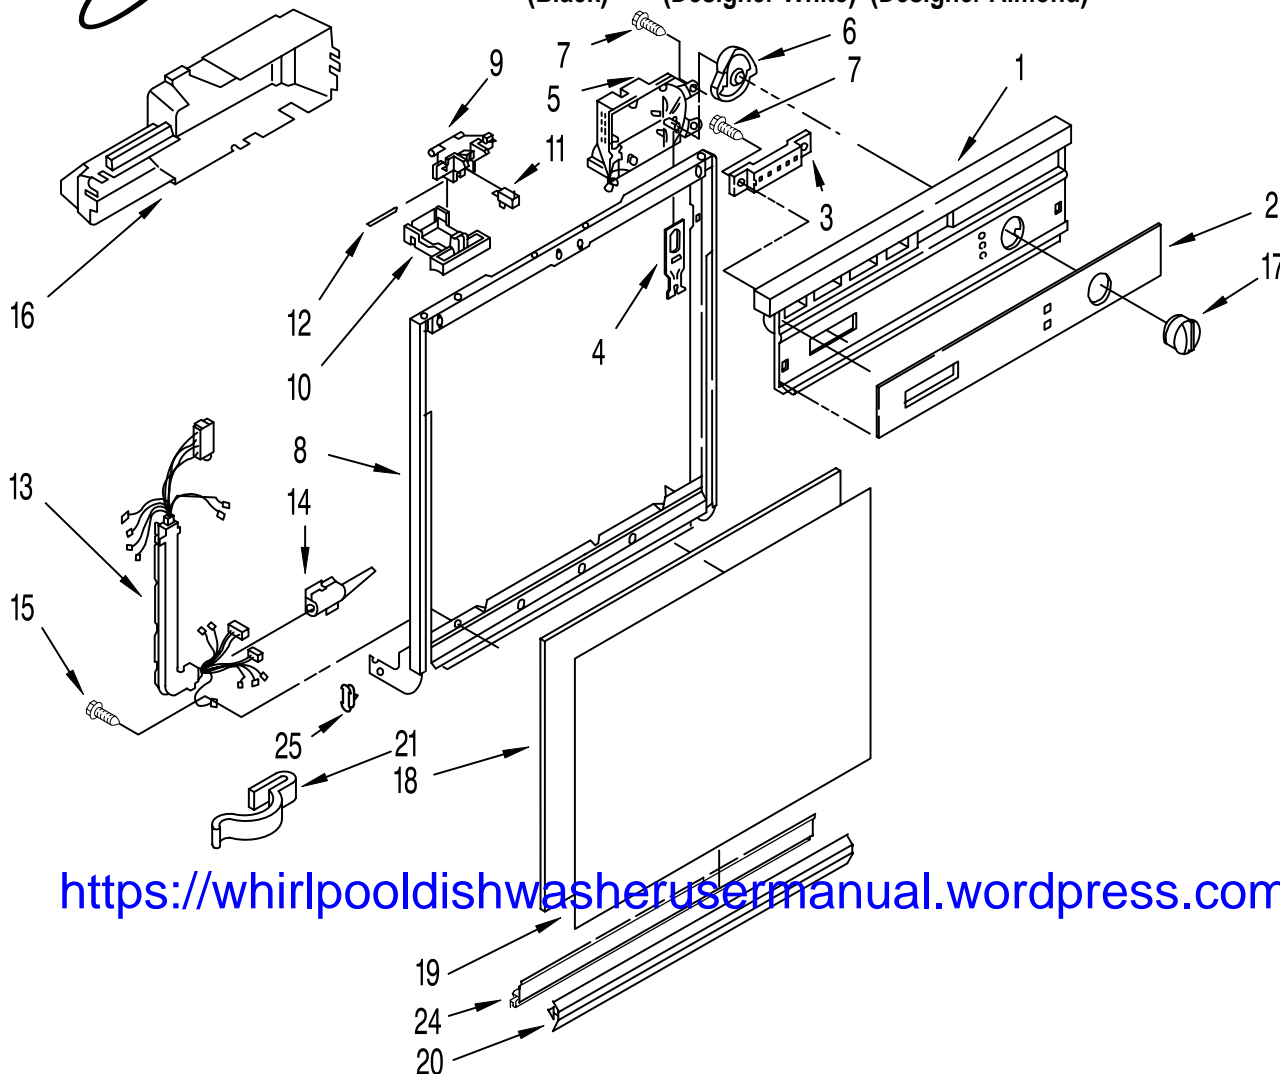

<https://whirlpooledishwasherusermanual.wordpress.com/>


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Console (Includes Item 2)	8		Door Frame (Includes Item 24)	18	3368979	Spacer, Corrugated
	3375273	Black		3374711	Black	19		†Panel, Front
	3375274	White		3374712	White		3369516	(Almond/Black)
	3375275	Almond		3374713	Almond		3369769	(Black/White)
2		Insert, Console	9	3380854	Bolt, Latch	20		Retainer, Panel
	3376024	Black	10		Lever, Latch		3374010	Black
	3376025	White		3369457	Black		3374011	White
	3376026	Almond		3372232	White		3374012	Almond
3		Switch		3375061	Almond	21	98997	Clip, Harness
	3376027	Black	11	3369325	Switch, (2)	24	3374716	Channel, Retainer (Also Order Item #20)
	3376028	White	12	3368955	Pin, Switch (2)			
	3376029	Almond	13	3381221	Harness and Protector	25	3373234	Bearing, Spring (2)
4	3369529	Follower, Cam	14	3376405	Elbow, Harness			
5	3373626	Timer	15	3400803	Screw			
6	3378124	Cam	16	3373367	Cover Timer			
7	304231	Screw,	17		Knob, Timer			
				3375348	Black			
				3375349	White			
				3375350	Almond			

†Refer To Dishwasher Replacement Panel Parts List No. 675345.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INNER DOOR PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)

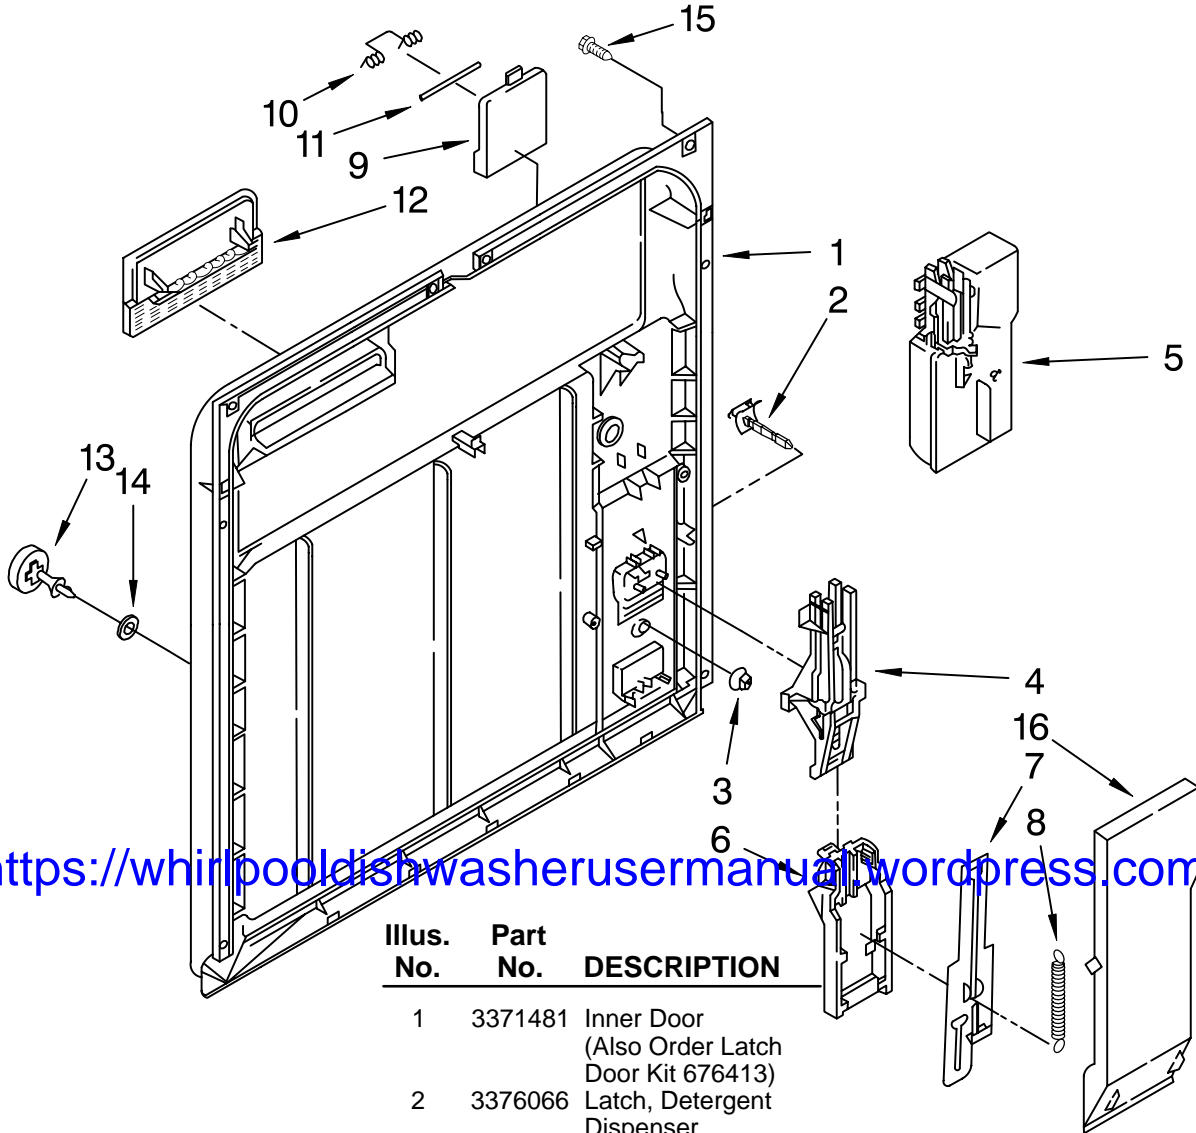


<https://whirlpooldishwasherusermanual.wordpress.com/>

Illus. No.	Part No.	DESCRIPTION
1	3371481	Inner Door (Also Order Latch Door Kit 676413)
2	3376066	Latch, Detergent Dispenser
3	3369061	Snap, Detergent Dispenser
4	3369055	Actuator Assembly
5	3368967	Wet Agent, Dispenser
6	3369000	Draw Bar (Upper Dispenser)
7	3369602	Draw Bar (Lower Dispenser)
8	3368999	Spring (Draw Bar)
9	3378138	Lid Assembly
10	300106	Spring, Lid
11	3372028	Pin (Lid Hinge) (Also Order Item #10)
12	3371710	Screen, Vent
13	3369512	Wet-Agent Cap Assembly
14	3369155	Seal (Wet-Cap)
15	3400815	Screw (8)
16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)

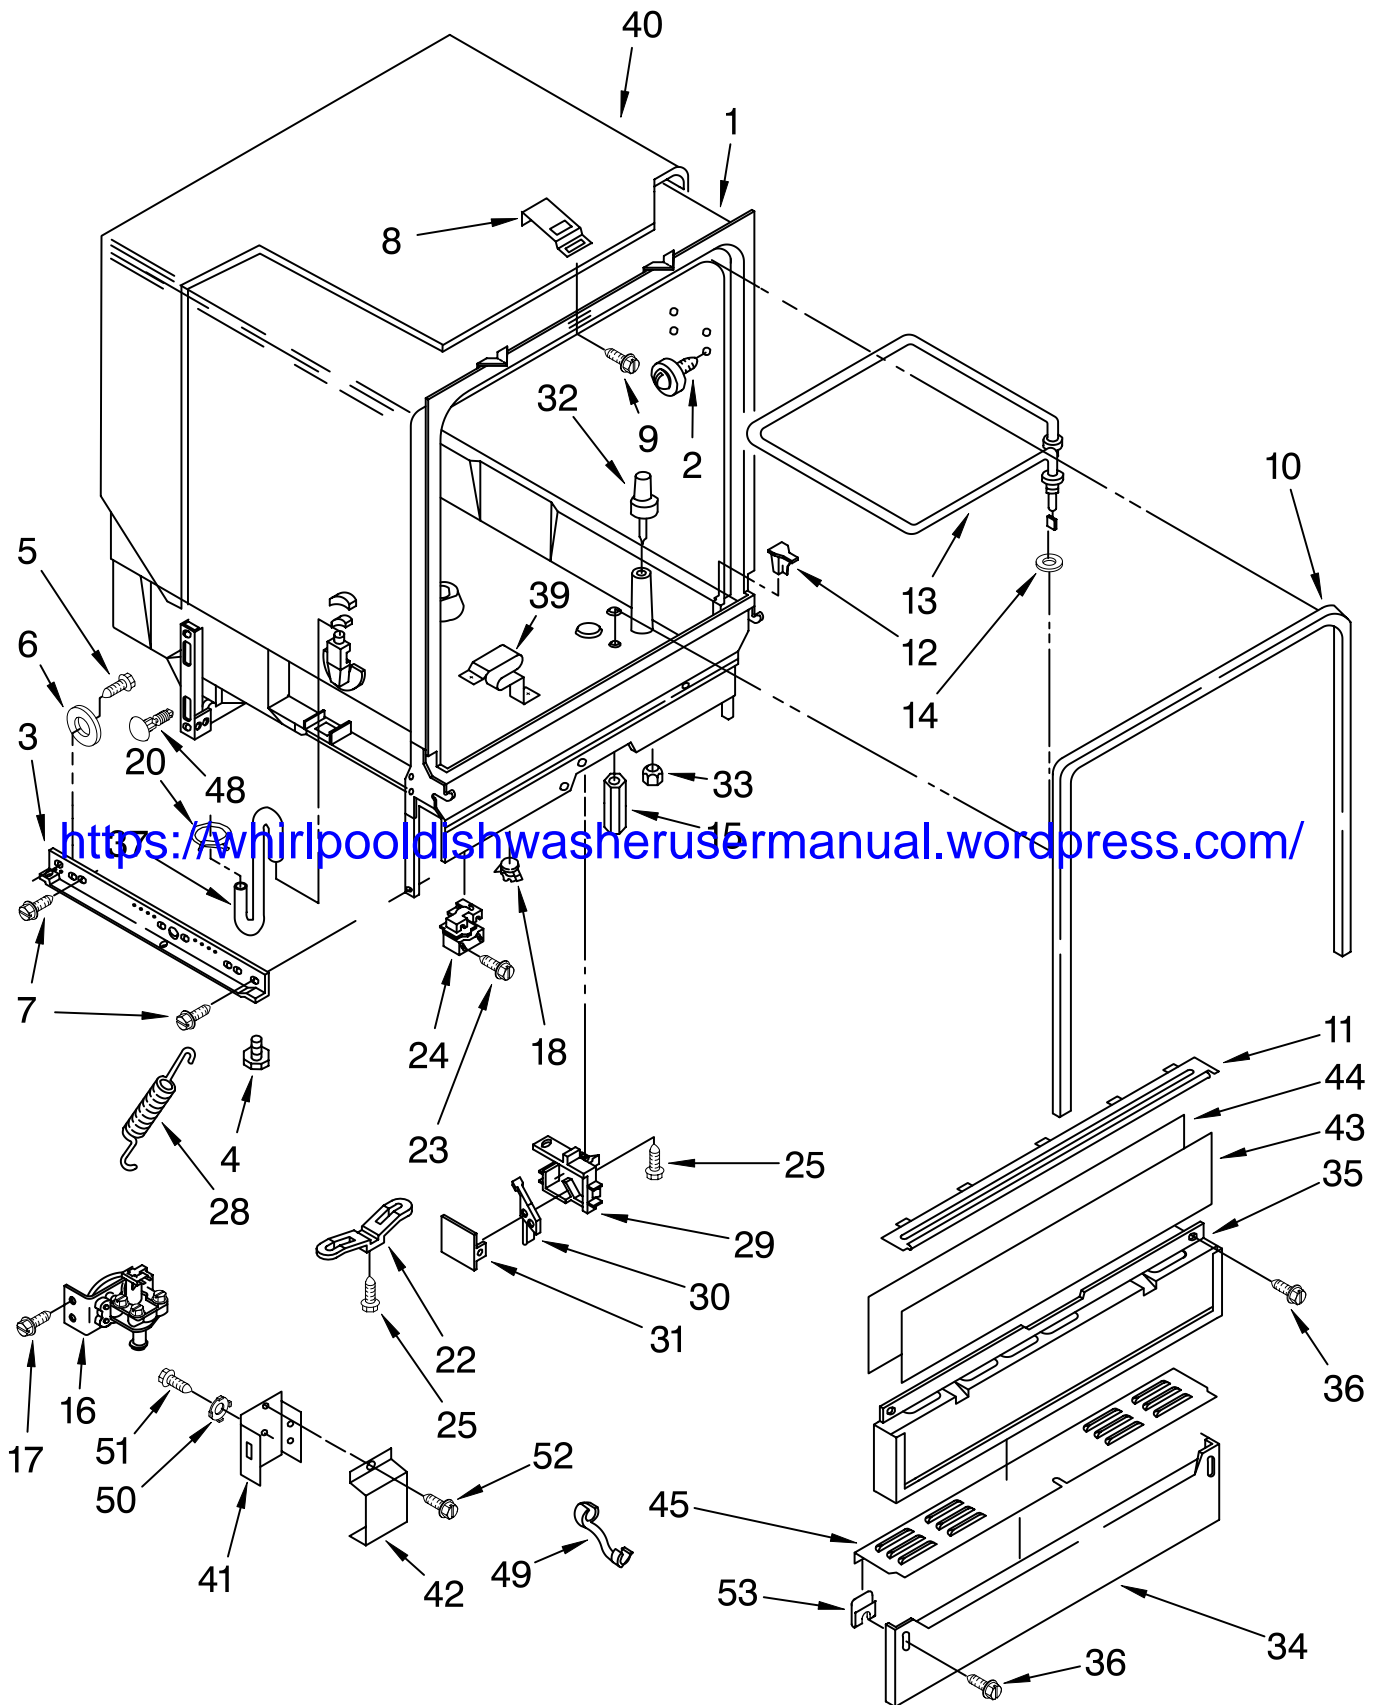

<https://whirlpoolsdhwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TUB ASSEMBLY PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3379349	Tub Assembly	18	3369777	Thermostat, Hi-Limit	36	302868	Screw
2	3380371	Tub, Wheel Assembly (8)	20	301958	Clamp	37	3369414	Hose, Inlet
3	3368933	Runner (2)	22	3378595	Bracket, Thermostat	39	3379740	Support, Heater (2)
4	3376439	Leveler (2)	23	3370225	Screw	40	3381230	Sound Shield
5	3370389	Screw, Shoulder	24	3369447	Relay	41	3378131	Terminal Box
6	302819	Wheel (2)	25	304231	Screw	42	300068	Cover Assembly, Terminal Box
7	343641	Screw,	28	3374343	Spring, Door (2)	43		†Access Panel
8	3374719	Plate, Latch	29	3369048	Housing, Float Switch		3369527	(Almond/Black)
9	3374720	Screw	30	3369067	Switch, Float		3370868	(Black/White)
10	3376927	Gasket	31	3369049	Cover, Switch Housing	44	3369526	Spacer, Corrugated
11		Retainer, Access Panel	32	3376397	Float & Washer Assembly	45	3374728	Extension & Clip Assembly
	3372412	Black	33	717488	Nut	48	304666	Retainer, Push (2)
	3372413	White	34		Toe Panel	49	3370307	Strain Relief
	3372414	Almond		3368942	Black	50	3378128	Washer
12	3369052	Deflector (2)		9742861	White	51	3400014	Screw
13	3379487	Heater (Includes Item 14)		9742862	Almond	52	3369138	Screw
14	717273	Washer, Rubber (2)	35		Panel, Access	53	3378123	Clip, Grounding
15	3378706	Nut (2) (Heater Terminal)		3369193	Black			† Refer To Dishwasher Replacement Panel Parts List No. 675345.
16	3378779	Water Valve		3369614	White			
17	304392	Screw		3377698	Almond			

<https://whirlpooldishwasherusermanual.wordpress.com/>

# PUMP AND MOTOR PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6

(Black) (Designer White) (Designer Almond)

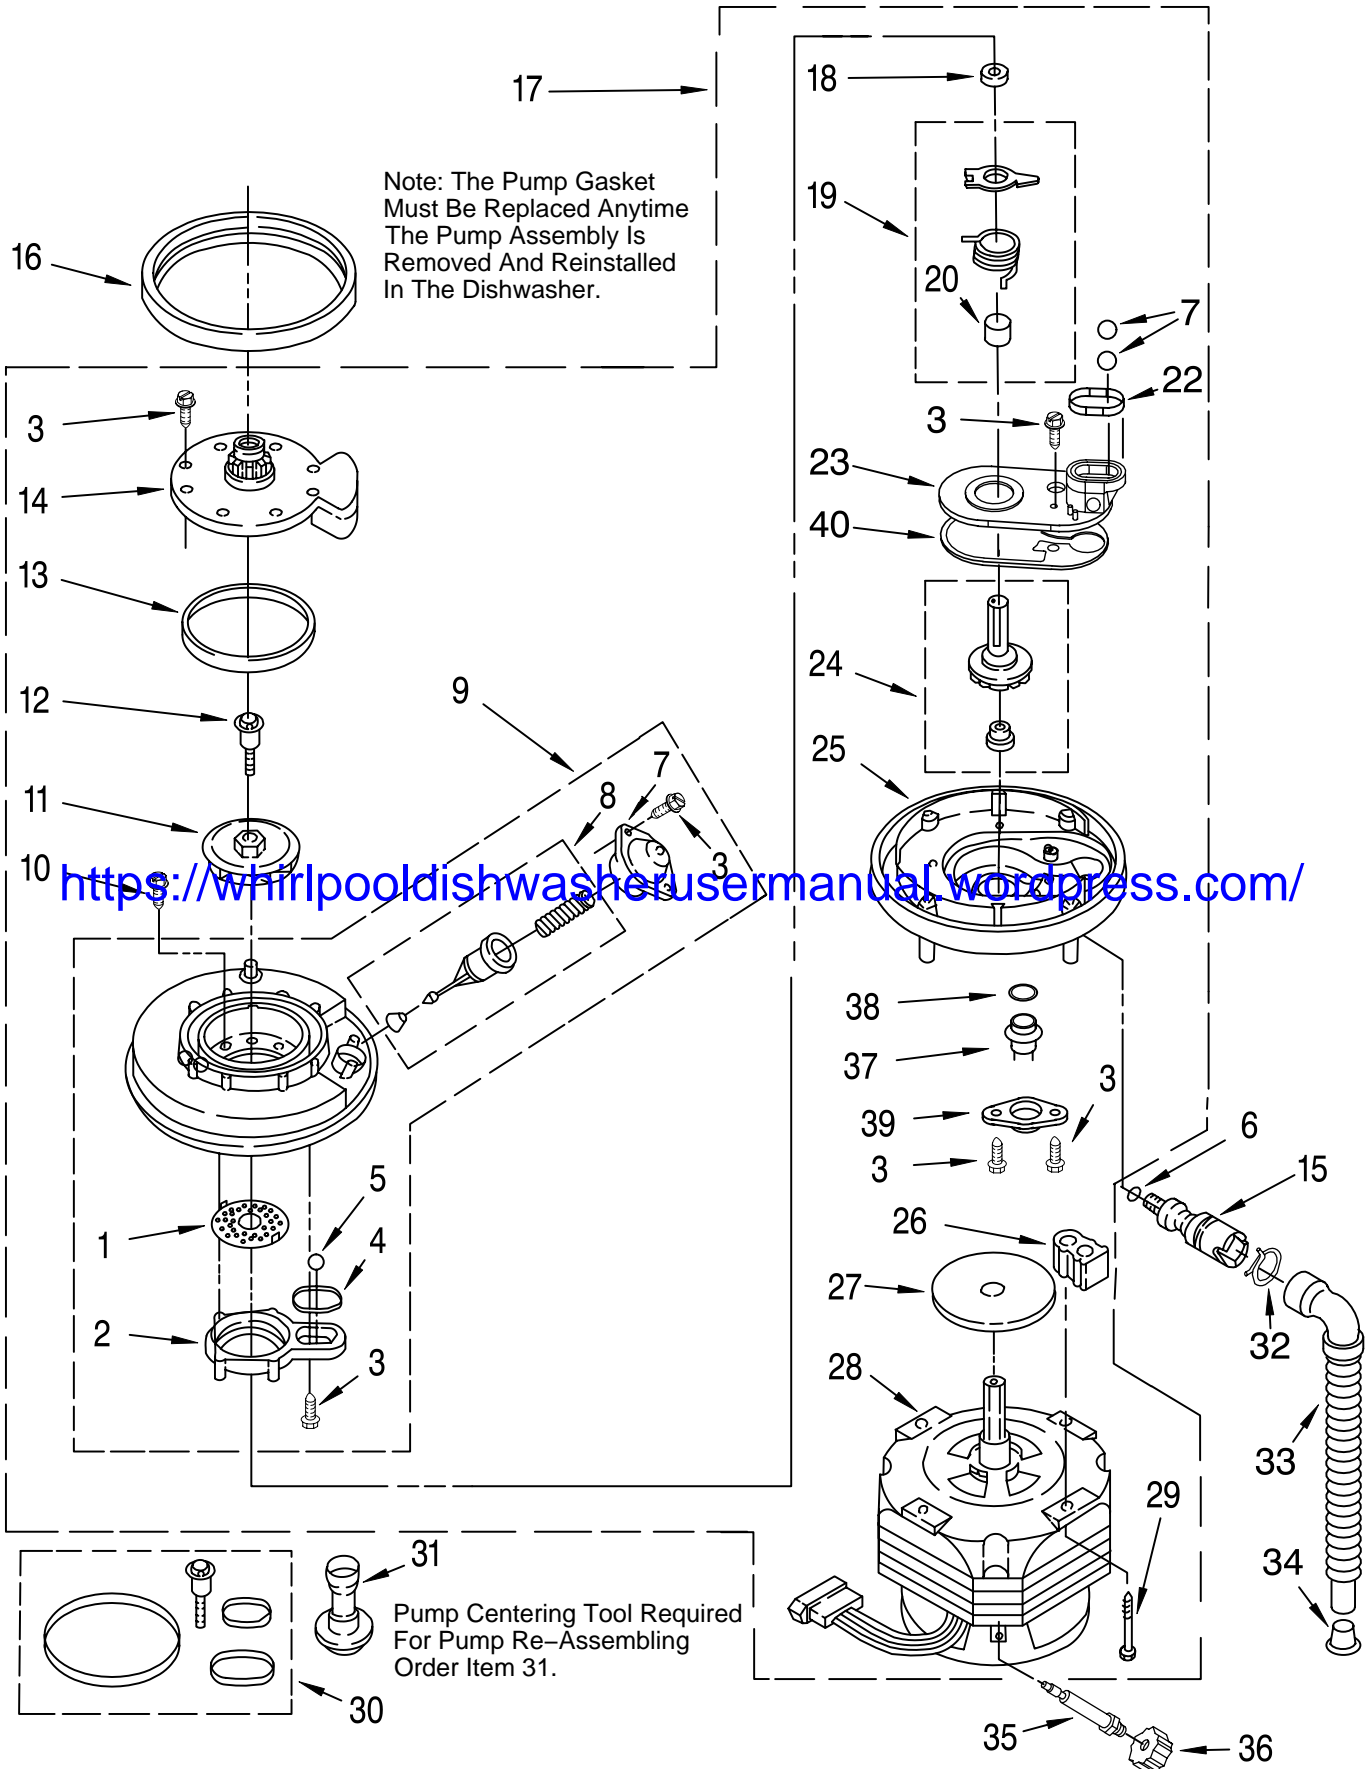

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# PUMP AND MOTOR PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9740982	Plate, Perforated (Includes Item 5) (Also Order Item 30) See Note A.	15	3369482	Check Valve (Includes Item 6)	28	3379364	Motor & Fan Assembly (Includes Item 27) (Also Order Item 30) See Note A.
2	3367173	Base, Inlet (Includes Items 1 & 5) (Also Order Item 30) See Note A.	16	717000	Gasket, Pump	29	3369331	Screw
3	9741232	Screw	17	3376752	Pump & Motor Assembly (Includes Item 16)	30	675505	Pump Seal Kit (Includes Items 4, 12, 13 & 22)
4	302710	Seal, Inlet Base	18	302707	Bushing, Grind	31	303918	Tool, Pump Centering
5	302709	Ball, Check	19	302718	Chopper Kit (Also Order Item 30) See Note A.	32	356138	Clamp, Hose
6	95080	"O" Ring	20	3378139	Sleeve, Drain Impeller	33	3374077	Hose, Drain
7	302721	Cover, Valve	22	302704	Seal, Drain Cover	34	3371748	Cap, Drain
8	302738	Valve Stem Kit (Includes Items 12, 13 & 22) See Note A.	23	3378207	Cover, Drain (Also Order Item 30) See Note A.	35	3374757	Shaft, Absorber
9	303882	Separator Assembly (Includes Items 12, 13 & 22) See Note A.	24	303539	Impeller, Drain Kit (Also Order Item 30) See Note A.	36	3378202	Weight, Absorber
10	3400001	Screw	25	3376157	Base, Pump (Also Order Item 30) See Note A.	37	3378083	Thermostat
11	303510	Impeller, Wash (Includes Items 12 & 13)	26	3376157	Support, Pump Mounting (4)	38	3376723	Seal, O-Ring
12	3371152	Screw & Seal	27	3368270	Slinger (See Note A.)	39	3376358	Retainer, Thermostat
13	302711	Seal, Pump Outlet				40	9740674	Gasket, Drain Cover
14	3369478	Outlet, Pump (Includes Item 13)						

**NOTE A:**  
Pump Centering Tool Required  
For Pump Re-Assembly  
Order Item 31.

<https://whirlpooldishwasherusemanual.wordpress.com/>

# DISHRACK PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)

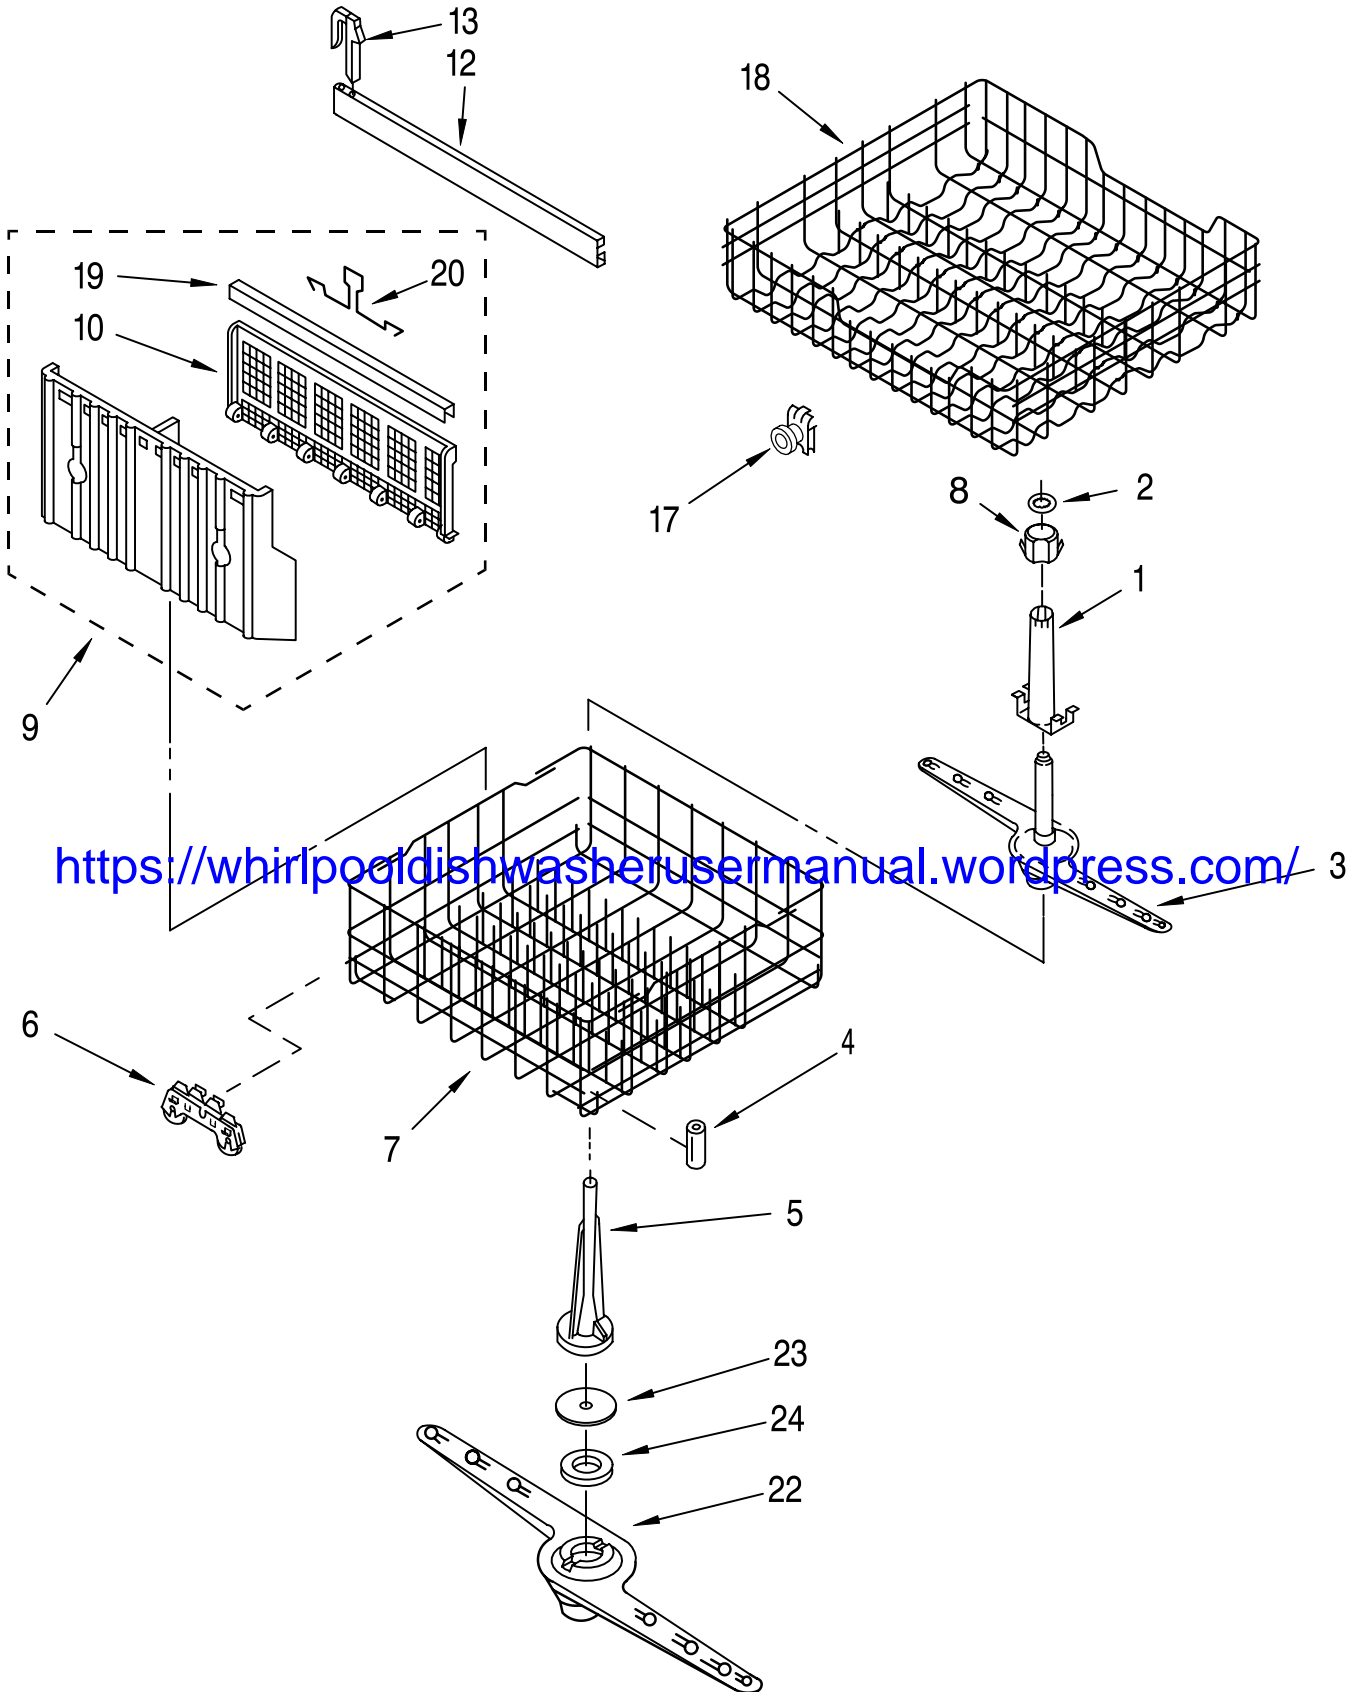

<https://whirlpooldishwasherusermanual.wordpress.com/>

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DISHRACK PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)


<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	3368290	Support, Arm (Also Order Items 2 & 8)
2	303722	Clip
3	3377274	Spray Arm, Upper (Also Order Item 8)
4	3368006	Bumper (2)
5	300848	Tower, Pressure
6	3376961	Wheel & Transport Assembly (4)
7	3370490	Dishrack, Lower (Includes Items 4 & 6)
8	3374702	Support Lock, Spray Arm
9	3369488	Silverware Basket Assembly
10	3369485	Cover, Basket
12	9742998	Track
13	3379941	Stop, Track (4)
17	3380863	Wheel & Axle Assembly (4)
18	3371663	Dishrack, Upper
19	717528	Trim, Basket
20	300086	Handle, Basket
22	3369347	Sprayarm, Lower
23	3367910	Cap, Nozzle
24	719976	Beams, Nozzle

<https://whirlpooldishwasherusemanual.wordpress.com/>



# MISCELLANEOUS PARTS

For Models: DU900PCDB6, DU900PCDQ6, DU900PCDZ6  
(Black) (Designer White) (Designer Almond)

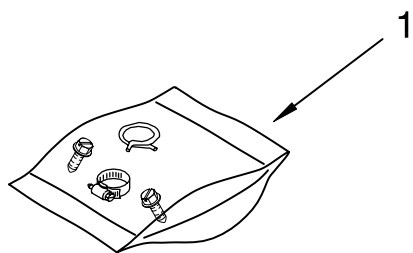

Illus. No.	Part No.	DESCRIPTION
1	3369816	Miscellaneous Parts Bag (Includes 2 Screws & 2 Hose Clamps)

## LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<b>ACCESSORY PARTS</b>			<b>OPTIONAL PARTS NOT INCLUDED</b>			<b>DISHRACK REPAIR</b>		
4317925	White		<b>PAINT, TOUCH-UP (1/2oz.)</b>			675576		Vinyl Touch-Up (Blue)
4317929	Almond		72017	White		675677		Tine Tip Repair Kit (Blue— Enough For Two Complete Dishracks)
			72107	Almond		676453		Vinyl Touch-Up (White)
			72032	Black		675679		Tine Tip Repair Kit (White— Enough For Two Complete Dishracks)
			<b>PAINT, PRESSURIZED SPRAY (13 oz.)</b>			676455		Vinyl Touch-Up (Grey)
4318050	Heavy Duty		350956	Almond		676458		Tine Tip Repair Kit (Grey— Enough For Two Complete Dishracks)
<b>LITERATURE PARTS</b>			285006	Superior Black				
LIT3380268		Instructions, Installation	350942	Primer (White)				
LIT3367007		Instructions, Installation (Supplement) (Locating Your Water Supply)	<b>PAINT, TOUCH-UP (1 qt.)</b>					
LIT3381327		Energy Guide	978883	Almond (Uncut)				
LIT3376832		Guide, Use & Care	799340	Black (Uncut)				
LIT3379192		Wiring Diagram						
LIT0677967		Do-It Yourself, Manual						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST